
ADJ

Mega TriPar Profile Plus

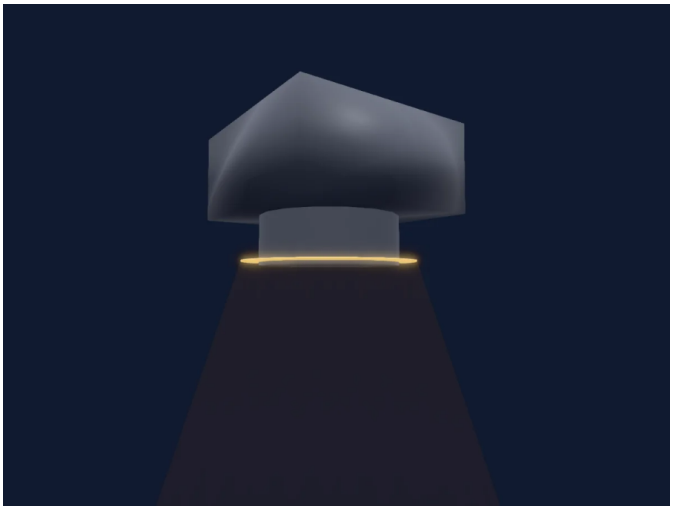

Manufacturer	**ADJ**
Type	**Profile spot**
DMX modes	**5**
DMX footprint	**4, 5, 6, 9, 10 channels**
Beam angle	**40°**
Size (W × H × D)	**220 × 100 × 210 mm**
GDTF fixture type	**89A0FFFB-720A-4087-BF79-62…**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Dimmer

Safety-relevant functions

Strobe

DMX modes

4 CH	4 ch
5 CH	5 ch
6 CH	6 ch
9 CH	9 ch
10 CH	10 ch

4 CH

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	UV	0	

5 CH

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	UV	0	
5	Dimmer	0	0–254 Closed 255–255 Open

6 CH

6 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	UV	0	
5	Shutter / Strobe	0	0–31 LED OFF 32–63 LED ON 64–95 Shutter1Strobe 2 96–127 Shutter1 3 128–159 Shutter1StrobePulse 4 160–191 Shutter1 5 192–223 Shutter1StrobeRandom 6 224–255 Shutter1 7
6	Dimmer	0	0–254 Closed 255–255 Open

9 CH

9 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	UV	0	
5	Shutter1Strobe Random Pulse Open	0	0–31 LED OFF 32–63 LED On 64–95 Strobing Slow to Fast 96–127 LED On 128–159 Strobe Pulse Slow to Fast 160–191 LED On 192–223 Random Strobe Slow to Fast 224–255 LED On
6	Dimmer	0	

9 CH (continued)

Ch	Function	Default	DMX values
7	Program Selection	0	0–51 Dimming Mode 52–102 Color Macro Mode 103–153 Color Change Mode 154–204 Color Fade Mode 205–255 Sound Active Mode
8	Color Macro1	0	
9	Program Speed	0	0–254 Slow/Least Sensitive 255–255 Fast/Most Sensitive

10 CH

10 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	UV	0	
5	Shutter1Strobe Random Pulse Open	0	0–31 LED OFF 32–63 LED On 64–95 Strobing Slow to Fast 96–127 LED On 128–159 Strobe Pulse Slow to Fast 160–191 LED On 192–223 Random Strobe Slow to Fast 224–255 LED On
6	Dimmer	0	
7	Program Selection	0	0–51 Dimming Mode 52–102 Color Macro Mode 103–153 Color Change Mode 154–204 Color Fade Mode 205–255 Sound Active Mode
8	Color Macro1	0	
9	Program Speed	0	0–254 Slow/Least Sensitive 255–255 Fast/Most Sensitive
10	Dimmer Curve	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–255 Default to Unit Setting