
ADJ

Saber Spot RGBL

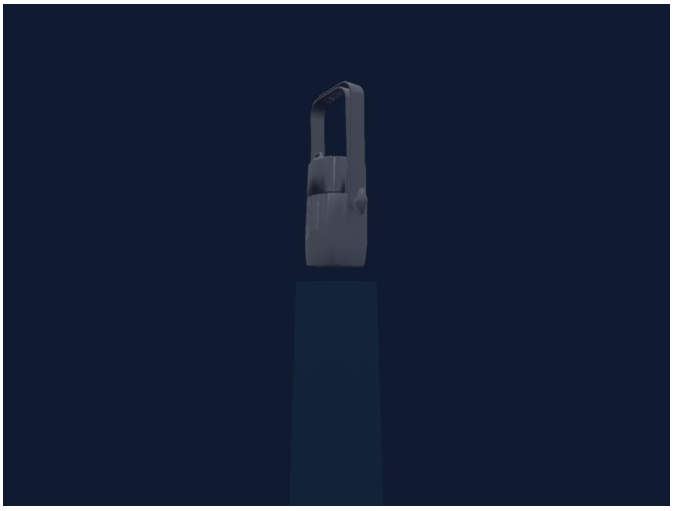

Manufacturer	**ADJ**
Type	**Effect light**
DMX modes	**12**
DMX footprint	**3, 4, 5, 6, 7, 8, 10, 12, 13 channels**
Beam angle	**5°**
Size (W × H × D)	**90 × 170 × 90 mm**
GDTF fixture type	**0C924D1D-884A-46FB-BBE7-CE…**

Controls

Extra LED colours · Hue and saturation · RGB colour mixing · Colour wheel · Effect speed · Strobe · Dimmer

Safety-relevant functions

Strobe · Built-in effect programmes

DMX modes

3CH	3 ch
4CH HSI+	4 ch
4CH RGBL	4 ch
5CH	5 ch
6CH	6 ch
6CH sRG BLI	6 ch
7CH	7 ch
8CH 16bit	8 ch
8CH RGBL	8 ch
10CH	10 ch
12CH	12 ch
13Ch	13 ch

3CH

3 channels

Ch	Function	Default	DMX values
1	H SBHue	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
2	H SBSaturation	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
3	H SBBrightness	0	0–24 0% 25–50 10% 51–63 20% 64–75 25% 76–101 30% 102–127 40% 128–152 50% 153–178 60% 179–190 70% 191–203 75% 204–229 80% 230–254 90% 255–255 100%

4CH HSI+

4 channels

Ch	Function	Default	DMX values
1	H SBHue	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
2	H SBSaturation	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
3	H SBBrightness	0	0–24 0% 25–50 10% 51–63 20% 64–75 25% 76–101 30% 102–127 40% 128–152 50% 153–178 60% 179–190 70% 191–203 75% 204–229 80% 230–254 90% 255–255 100%
4	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–255 Default to unit setting

4CH RGBL

4 channels

Ch	Function	Default	DMX values
1	Red	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
2	Green	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
3	Blue	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
4	Color Add GY	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%

5CH

5 channels

Ch	Function	Default	DMX values
1	Red	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
2	Green	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
3	Blue	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
4	Color Add GY	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
5	Dimmer	0	0–24 0% 25–50 10% 51–63 20% 64–75 25% 76–101 30% 102–127 40% 128–152 50% 153–178 60% 179–190 70% 191–203 75% 204–229 80% 230–254 90% 255–255 100%

6CH

6 channels

Ch	Function	Default	DMX values
1	Red	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
2	Green	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
3	Blue	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
4	Color Add GY	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
5	Dimmer	0	0–24 0% 25–50 10% 51–63 20% 64–75 25% 76–101 30% 102–127 40% 128–152 50% 153–178 60% 179–190 70% 191–203 75% 204–229 80% 230–254 90% 255–255 100%
6	Dimmer Fine	0	Fine byte of Dimmer

6CH sRG BLI

6 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	50	0–31 Closed 32–63 Open 64–94 Strobe Min 95–95 Strobe Max 96–127 Open 128–158 Strobe Pulse Min 159–159 Strobe Pulse Max 160–191 Open 192–222 Random Strobe Min 223–223 Random Strobe Max 224–255 Open
2	Red	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%

6CH sRG BLI (continued)

Ch	Function	Default	DMX values
3	Green	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
4	Blue	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
5	Color Add GY	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
6	H SBBrightness	0	0–24 0% 25–50 10% 51–63 20% 64–75 25% 76–101 30% 102–127 40% 128–152 50% 153–178 60% 179–190 70% 191–203 75% 204–229 80% 230–254 90% 255–255 100%

7CH

7 channels

Ch	Function	Default	DMX values
1	Red	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
2	Green	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
3	Blue	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
4	Color Add GY	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%

7CH (continued)

Ch	Function	Default	DMX values
5	Shutter / Strobe	50	0–31 Closed 32–63 Open 64–94 Strobe Min 95–95 Strobe Max 96–127 Open 128–158 Strobe Pulse Min 159–159 Strobe Pulse Max 160–191 Open 192–222 Random Strobe Min 223–223 Random Strobe Max 224–255 Open
6	Dimmer	0	0–24 0% 25–50 10% 51–63 20% 64–75 25% 76–101 30% 102–127 40% 128–152 50% 153–178 60% 179–190 70% 191–203 75% 204–229 80% 230–254 90% 255–255 100%
7	Dimmer Fine	0	Fine byte of Dimmer

8CH 16bit

8 channels

Ch	Function	Default	DMX values
1	Red	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
2	Red Fine	255	Fine byte of Red
3	Green	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
4	Green Fine	255	Fine byte of Green
5	Blue	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
6	Blue Fine	255	Fine byte of Blue
7	Color Add GY	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
8	Color Add GY Fine	255	Fine byte of Color Add GY

8CH RGBL

8 channels

Ch	Function	Default	DMX values
1	Red	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
2	Green	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
3	Blue	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
4	Color Add GY	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
5	Shutter / Strobe	50	0–31 Closed 32–63 Open 64–94 Strobe Min 95–95 Strobe Max 96–127 Open 128–158 Strobe Pulse Min 159–159 Strobe Pulse Max 160–191 Open 192–222 Random Strobe Min 223–223 Random Strobe Max 224–255 Open
6	Dimmer	0	0–24 0% 25–50 10% 51–63 20% 64–75 25% 76–101 30% 102–127 40% 128–152 50% 153–178 60% 179–190 70% 191–203 75% 204–229 80% 230–254 90% 255–255 100%
7	Dimmer Fine	0	Fine byte of Dimmer
8	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–255 Default to unit setting

10CH

10 channels

Ch	Function	Default	DMX values

10CH (continued)

Ch	Function	Default	DMX values
1	Shutter / Strobe	50	0–31 Closed 32–63 Open 64–94 Strobe Min 95–95 Strobe Max 96–127 Open 128–158 Strobe Pulse Min 159–159 Strobe Pulse Max 160–191 Open 192–222 Random Strobe Min 223–223 Random Strobe Max 224–255 Open
2	H SBHue	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
3	H SBSaturation	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
4	H SBBrightness	0	0–24 0% 25–50 10% 51–63 20% 64–75 25% 76–101 30% 102–127 40% 128–152 50% 153–178 60% 179–190 70% 191–203 75% 204–229 80% 230–254 90% 255–255 100%
5	Color Wheel 2	0	0–0 Open (wheel slot 1) 1–42 2700 K (wheel slot 5) 43–85 3200 K (wheel slot 10) 86–128 4000 K (wheel slot 18) 129–171 5600 K (wheel slot 34) 172–214 6500 K (wheel slot 43) 215–255 7000 K (wheel slot 48)

10CH (continued)

Ch	Function	Default	DMX values
6	Color Wheel	0	0–0 Open (wheel slot 1) 1–4 Color Macro 1 (wheel slot 2) 5–8 Color Macro 2 (wheel slot 3) 9–12 Color Macro 3 (wheel slot 4) 13–16 Color Macro 4 (wheel slot 5) 17–20 Color Macro 5 (wheel slot 6) 21–24 Color Macro 6 (wheel slot 7) 25–28 Color Macro 7 (wheel slot 8) 29–32 Color Macro 8 (wheel slot 9) 33–36 Color Macro 9 (wheel slot 10) 37–40 Color Macro 10 (wheel slot 11) 41–44 Color Macro 11 (wheel slot 12) 45–48 Color Macro 12 (wheel slot 13) 49–52 Color Macro 13 (wheel slot 14) 53–56 Color Macro 14 (wheel slot 15) 57–60 Color Macro 15 (wheel slot 16) 61–64 Color Macro 16 (wheel slot 17) 65–68 Color Macro 17 (wheel slot 18) 69–72 Color Macro 18 (wheel slot 19) 73–76 Color Macro 19 (wheel slot 20) 77–80 Color Macro 20 (wheel slot 21) 81–84 Color Macro 21 (wheel slot 22) 85–88 Color Macro 22 (wheel slot 23) 89–92 Color Macro 23 (wheel slot 24) 93–96 Color Macro 24 (wheel slot 25) 97–100 Color Macro 25 (wheel slot 26) 101–104 Color Macro 26 (wheel slot 27) 105–108 Color Macro 27 (wheel slot 28) 109–112 Color Macro 28 (wheel slot 29) 113–116 Color Macro 29 (wheel slot 30) 117–120 Color Macro 30 (wheel slot 31) 121–124 Color Macro 31 (wheel slot 32) 125–128 Color Macro 32 (wheel slot 33) 129–132 Color Macro 33 (wheel slot 34) 133–136 Color Macro 34 (wheel slot 35) 137–140 Color Macro 35 (wheel slot 36) 141–144 Color Macro 36 (wheel slot 37) 145–148 Color Macro 37 (wheel slot 38) 149–152 Color Macro 38 (wheel slot 39) 153–156 Color Macro 39 (wheel slot 40) 157–160 Color Macro 40 (wheel slot 41) 161–164 Color Macro 41 (wheel slot 42) 165–168 Color Macro 42 (wheel slot 43) 169–172 Color Macro 43 (wheel slot 44) 173–176 Color Macro 44 (wheel slot 45) 177–180 Color Macro 45 (wheel slot 46) 181–184 Color Macro 46 (wheel slot 47) 185–188 Color Macro 47 (wheel slot 48) 189–192 Color Macro 48 (wheel slot 49) 193–196 Color Macro 49 (wheel slot 50) 197–200 Color Macro 50 (wheel slot 51) 201–204 Color Macro 51 (wheel slot 52) 205–208 Color Macro 52 (wheel slot 53) 209–212 Color Macro 53 (wheel slot 54) 213–216 Color Macro 54 (wheel slot 55) 217–220 Color Macro 55 (wheel slot 56) 221–224 Color Macro 56 (wheel slot 57) 225–228 Color Macro 57 (wheel slot 58) 229–232 Color Macro 58 (wheel slot 59) 233–236 Color Macro 59 (wheel slot 60) 237–240 Color Macro 60 (wheel slot 61) 241–244 Color Macro 61 (wheel slot 62) 245–248 Color Macro 62 (wheel slot 63) 249–252 Color Macro 63 (wheel slot 64)

10CH (continued)

Ch	Function	Default	DMX values
7	Effect	0	0–0 Off 1–20 Auto Program 1 21–40 Auto Program 2 41–60 Auto Program 3 61–80 Auto Program 4 81–100 Auto Program 5 101–120 Auto Program 6 121–140 Auto Program 7 141–160 Auto Program 8 161–180 Auto Program 9 181–200 Auto Program 10 201–220 Auto Program 11 221–240 Auto Program 12 241–250 Auto Program 13 251–255 Gradient Effect
8	Effect Speed	0	
9	Effects1Fade	0	
10	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–255 Default to unit setting

12CH

12 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	50	0–31 Closed 32–63 Open 64–94 Strobe Min 95–95 Strobe Max 96–127 Open 128–158 Strobe Pulse Min 159–159 Strobe Pulse Max 160–191 Open 192–222 Random Strobe Min 223–223 Random Strobe Max 224–255 Open
2	Red	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
3	Green	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
4	Blue	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
5	Color Add GY	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%

12CH (continued)

Ch	Function	Default	DMX values
6	H SBBrightness	0	0–24 0% 25–50 10% 51–63 20% 64–75 25% 76–101 30% 102–127 40% 128–152 50% 153–178 60% 179–190 70% 191–203 75% 204–229 80% 230–254 90% 255–255 100%
7	Color Wheel 2	0	0–0 Open (wheel slot 1) 1–42 2700 K (wheel slot 5) 43–85 3200 K (wheel slot 10) 86–128 4000 K (wheel slot 18) 129–171 5600 K (wheel slot 34) 172–214 6500 K (wheel slot 43) 215–255 7000 K (wheel slot 48)

12CH (continued)

Ch	Function	Default	DMX values
8	Color Wheel	0	0–0 Open (wheel slot 1) 1–4 Color Macro 1 (wheel slot 2) 5–8 Color Macro 2 (wheel slot 3) 9–12 Color Macro 3 (wheel slot 4) 13–16 Color Macro 4 (wheel slot 5) 17–20 Color Macro 5 (wheel slot 6) 21–24 Color Macro 6 (wheel slot 7) 25–28 Color Macro 7 (wheel slot 8) 29–32 Color Macro 8 (wheel slot 9) 33–36 Color Macro 9 (wheel slot 10) 37–40 Color Macro 10 (wheel slot 11) 41–44 Color Macro 11 (wheel slot 12) 45–48 Color Macro 12 (wheel slot 13) 49–52 Color Macro 13 (wheel slot 14) 53–56 Color Macro 14 (wheel slot 15) 57–60 Color Macro 15 (wheel slot 16) 61–64 Color Macro 16 (wheel slot 17) 65–68 Color Macro 17 (wheel slot 18) 69–72 Color Macro 18 (wheel slot 19) 73–76 Color Macro 19 (wheel slot 20) 77–80 Color Macro 20 (wheel slot 21) 81–84 Color Macro 21 (wheel slot 22) 85–88 Color Macro 22 (wheel slot 23) 89–92 Color Macro 23 (wheel slot 24) 93–96 Color Macro 24 (wheel slot 25) 97–100 Color Macro 25 (wheel slot 26) 101–104 Color Macro 26 (wheel slot 27) 105–108 Color Macro 27 (wheel slot 28) 109–112 Color Macro 28 (wheel slot 29) 113–116 Color Macro 29 (wheel slot 30) 117–120 Color Macro 30 (wheel slot 31) 121–124 Color Macro 31 (wheel slot 32) 125–128 Color Macro 32 (wheel slot 33) 129–132 Color Macro 33 (wheel slot 34) 133–136 Color Macro 34 (wheel slot 35) 137–140 Color Macro 35 (wheel slot 36) 141–144 Color Macro 36 (wheel slot 37) 145–148 Color Macro 37 (wheel slot 38) 149–152 Color Macro 38 (wheel slot 39) 153–156 Color Macro 39 (wheel slot 40) 157–160 Color Macro 40 (wheel slot 41) 161–164 Color Macro 41 (wheel slot 42) 165–168 Color Macro 42 (wheel slot 43) 169–172 Color Macro 43 (wheel slot 44) 173–176 Color Macro 44 (wheel slot 45) 177–180 Color Macro 45 (wheel slot 46) 181–184 Color Macro 46 (wheel slot 47) 185–188 Color Macro 47 (wheel slot 48) 189–192 Color Macro 48 (wheel slot 49) 193–196 Color Macro 49 (wheel slot 50) 197–200 Color Macro 50 (wheel slot 51) 201–204 Color Macro 51 (wheel slot 52) 205–208 Color Macro 52 (wheel slot 53) 209–212 Color Macro 53 (wheel slot 54) 213–216 Color Macro 54 (wheel slot 55) 217–220 Color Macro 55 (wheel slot 56) 221–224 Color Macro 56 (wheel slot 57) 225–228 Color Macro 57 (wheel slot 58) 229–232 Color Macro 58 (wheel slot 59) 233–236 Color Macro 59 (wheel slot 60) 237–240 Color Macro 60 (wheel slot 61) 241–244 Color Macro 61 (wheel slot 62) 245–248 Color Macro 62 (wheel slot 63) 249–252 Color Macro 63 (wheel slot 64)

12CH (continued)

Ch	Function	Default	DMX values
9	Effect	0	0–0 Off 1–20 Auto Program 1 21–40 Auto Program 2 41–60 Auto Program 3 61–80 Auto Program 4 81–100 Auto Program 5 101–120 Auto Program 6 121–140 Auto Program 7 141–160 Auto Program 8 161–180 Auto Program 9 181–200 Auto Program 10 201–220 Auto Program 11 221–240 Auto Program 12 241–250 Auto Program 13 251–255 Gradient Effect
10	Effect Speed	0	
11	Effects1Fade	0	
12	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–255 Default to unit setting

13Ch

13 channels

Ch	Function	Default	DMX values
1	Red	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
2	Green	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
3	Blue	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
4	Color Add GY	255	0–63 0% 64–127 25% 128–190 50% 191–254 75% 255–255 100%
5	Color Wheel 2	0	0–0 Open (wheel slot 1) 1–42 2700 K (wheel slot 5) 43–85 3200 K (wheel slot 10) 86–128 4000 K (wheel slot 18) 129–171 5600 K (wheel slot 34) 172–214 6500 K (wheel slot 43) 215–255 7000 K (wheel slot 48)

13Ch (continued)

Ch	Function	Default	DMX values
6	Color Wheel	0	0–0 Open (wheel slot 1) 1–4 Color Macro 1 (wheel slot 2) 5–8 Color Macro 2 (wheel slot 3) 9–12 Color Macro 3 (wheel slot 4) 13–16 Color Macro 4 (wheel slot 5) 17–20 Color Macro 5 (wheel slot 6) 21–24 Color Macro 6 (wheel slot 7) 25–28 Color Macro 7 (wheel slot 8) 29–32 Color Macro 8 (wheel slot 9) 33–36 Color Macro 9 (wheel slot 10) 37–40 Color Macro 10 (wheel slot 11) 41–44 Color Macro 11 (wheel slot 12) 45–48 Color Macro 12 (wheel slot 13) 49–52 Color Macro 13 (wheel slot 14) 53–56 Color Macro 14 (wheel slot 15) 57–60 Color Macro 15 (wheel slot 16) 61–64 Color Macro 16 (wheel slot 17) 65–68 Color Macro 17 (wheel slot 18) 69–72 Color Macro 18 (wheel slot 19) 73–76 Color Macro 19 (wheel slot 20) 77–80 Color Macro 20 (wheel slot 21) 81–84 Color Macro 21 (wheel slot 22) 85–88 Color Macro 22 (wheel slot 23) 89–92 Color Macro 23 (wheel slot 24) 93–96 Color Macro 24 (wheel slot 25) 97–100 Color Macro 25 (wheel slot 26) 101–104 Color Macro 26 (wheel slot 27) 105–108 Color Macro 27 (wheel slot 28) 109–112 Color Macro 28 (wheel slot 29) 113–116 Color Macro 29 (wheel slot 30) 117–120 Color Macro 30 (wheel slot 31) 121–124 Color Macro 31 (wheel slot 32) 125–128 Color Macro 32 (wheel slot 33) 129–132 Color Macro 33 (wheel slot 34) 133–136 Color Macro 34 (wheel slot 35) 137–140 Color Macro 35 (wheel slot 36) 141–144 Color Macro 36 (wheel slot 37) 145–148 Color Macro 37 (wheel slot 38) 149–152 Color Macro 38 (wheel slot 39) 153–156 Color Macro 39 (wheel slot 40) 157–160 Color Macro 40 (wheel slot 41) 161–164 Color Macro 41 (wheel slot 42) 165–168 Color Macro 42 (wheel slot 43) 169–172 Color Macro 43 (wheel slot 44) 173–176 Color Macro 44 (wheel slot 45) 177–180 Color Macro 45 (wheel slot 46) 181–184 Color Macro 46 (wheel slot 47) 185–188 Color Macro 47 (wheel slot 48) 189–192 Color Macro 48 (wheel slot 49) 193–196 Color Macro 49 (wheel slot 50) 197–200 Color Macro 50 (wheel slot 51) 201–204 Color Macro 51 (wheel slot 52) 205–208 Color Macro 52 (wheel slot 53) 209–212 Color Macro 53 (wheel slot 54) 213–216 Color Macro 54 (wheel slot 55) 217–220 Color Macro 55 (wheel slot 56) 221–224 Color Macro 56 (wheel slot 57) 225–228 Color Macro 57 (wheel slot 58) 229–232 Color Macro 58 (wheel slot 59) 233–236 Color Macro 59 (wheel slot 60) 237–240 Color Macro 60 (wheel slot 61) 241–244 Color Macro 61 (wheel slot 62) 245–248 Color Macro 62 (wheel slot 63) 249–252 Color Macro 63 (wheel slot 64)

13Ch (continued)

Ch	Function	Default	DMX values
7	Shutter / Strobe	50	0–31 Closed 32–63 Open 64–94 Strobe Min 95–95 Strobe Max 96–127 Open 128–158 Strobe Pulse Min 159–159 Strobe Pulse Max 160–191 Open 192–222 Random Strobe Min 223–223 Random Strobe Max 224–255 Open
8	Dimmer	0	0–24 0% 25–50 10% 51–63 20% 64–75 25% 76–101 30% 102–127 40% 128–152 50% 153–178 60% 179–190 70% 191–203 75% 204–229 80% 230–254 90% 255–255 100%
9	Dimmer Fine	0	Fine byte of Dimmer
10	Effect	0	0–0 Off 1–20 Auto Program 1 21–40 Auto Program 2 41–60 Auto Program 3 61–80 Auto Program 4 81–100 Auto Program 5 101–120 Auto Program 6 121–140 Auto Program 7 141–160 Auto Program 8 161–180 Auto Program 9 181–200 Auto Program 10 201–220 Auto Program 11 221–240 Auto Program 12 241–250 Auto Program 13 251–255 Gradient Effect
11	Effect Speed	0	
12	Effects1Fade	0	
13	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–255 Default to unit setting