
Astera LED Technology

FP3 Hyperion Tube

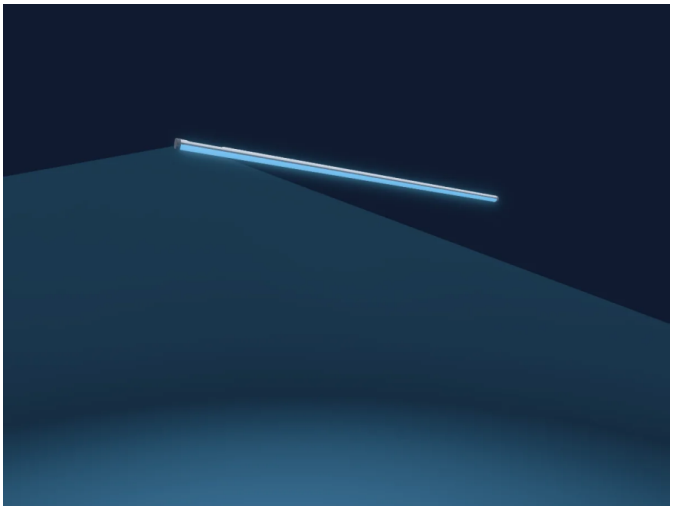

Manufacturer	**Astera LED Technology**
Type	**PAR**
DMX modes	**165**
DMX footprint	**3, 4, 5, 6, 7, 8, 9, 10, 12, 13, 25, 32, 33, 41, 49, 57, 64, 65, 73, 81,**
Beam angle	**135°**
Heads / cells	**32**
Size (W × H × D)	**42 × 42 × 2031 mm**
GDTF fixture type	**1D3F5EC4-0208-4A99-A1F5-A0…**

Controls

Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Strobe · Dimmer · Pixel control

DMX modes

1: RGB	3 ch
17: RGB*RGB* 1	3 ch
18: RGB RGB	3 ch
41: RGB*RGB*	3 ch
42: RGB RGB	3 ch
65: RGB*RGB*	3 ch
66: RGB RGB	3 ch
19: RGBW RGBW	4 ch
2: RGBW	4 ch
21: DIM RGB DIM RGB	4 ch
25: RGB*RGBS	4 ch
33: RGBS RGBS	4 ch
4: DIM RGB	4 ch
43: RGBW RGBW	4 ch
45: DIM RGB DIM RGB	4 ch
49: RGB*RGBS	4 ch
57: RGBS RGBS	4 ch
67: RGBW RGBW	4 ch
69: DIM RGB DIM RGB	4 ch
73: RGB*RGBS	4 ch
8: RGBS	4 ch
81: RGBS RGBS	4 ch
11: DIM RGBS	5 ch
112: D CCT GM HUE SAT	5 ch
125: D CCT GM HUE SAT	5 ch
20: RGBAW RGBAW	5 ch
22: DIM RGBW DIM RGBW	5 ch

3: RGBAW	5 ch
35: RGBWS RGBWS	5 ch
37: DIM RGBS DIM RGBS	5 ch
44: RGBAW RGBAW	5 ch
46: DIM RGBW DIM RGBW	5 ch
5: DIM RGBW	5 ch
59: RGBWS RGBWS	5 ch
61: DIM RGBS DIM RGBS	5 ch
68: RGBAW RGBAW	5 ch
70: DIM RGBW DIM RGBW	5 ch
83: RGBWS RGBWS	5 ch
85: DIM RGBS DIM RGBS	5 ch
9: RGBWS	5 ch
90: D CCT GM HUE SAT	5 ch
99: D CCT GM HUE SAT	5 ch
10: RGBAWS	6 ch
102: D16 X Y	6 ch
108: D CCT GM HUE SAT S	6 ch
115: D16 X Y	6 ch
12: DIM RGBWS	6 ch
121: D CCT GM HUE SAT S	6 ch
128: D16 X Y	6 ch
134: D CCT GM HUE SAT S	6 ch
23: DIM RGBAW DIM RGBAW	6 ch
24: RGB CCT DIM IND	6 ch
36: RGBAWS RGBAWS	6 ch
38: DIM RGBWS DIM RGBWS	6 ch
47: DIM RGBAW DIM RGBAW	6 ch
48: RGB CCT DIM IND	6 ch
6: DIM RGBAW	6 ch
60: RGBAWS RGBAWS	6 ch
62: DIM RGBWS DIM RGBWS	6 ch
7: RGB CCT DIM IND	6 ch
71: DIM RGBAW DIM RGBAW	6 ch
72: RGB CCT DIM IND	6 ch
84: RGBAWS RGBAWS	6 ch
86: DIM RGBWS DIM RGBWS	6 ch
93: D16 X Y	6 ch
95: D CCT GM HUE SAT S	6 ch
101: D16 CCT GM H SAT	7 ch
110: D16 X Y S	7 ch
111: D CCT GM CRO RGB	7 ch
114: D16 CCT GM H SAT	7 ch
123: D16 X Y S	7 ch
124: D CCT GM CRO RGB	7 ch
127: D16 CCT GM H SAT	7 ch
13: DIM RGBAWS	7 ch
136: D16 X Y S	7 ch
14: RGB CCT DIM IND S	7 ch
39 DIM RGBAWS DIM RGBAWS	7 ch
40: RGB CCT DIM IND S	7 ch

63: DIM RGBAWS DIM RGBAWS	7 ch
64: RGB CCT DIM IND S	7 ch
87 DIM RGBAWS RGBAWS	7 ch
88: RGB CCT DIM IND S	7 ch
89: D CCT GM CRO RGB	7 ch
92: D16 CCT GM H SAT	7 ch
97: D16 X Y S	7 ch
98: D CCT GM CRO RGB	7 ch
100: D16 CCT GM C RGB	8 ch
107: D CCT GM CRO RGB S	8 ch
109: D16 CCT GM H SAT S	8 ch
113: D16 CCT GM C RGB	8 ch
120: D CCT GM CRO RGB S	8 ch
122: D16 CCT GM H SAT S	8 ch
126: D16 CCT GM C RGB	8 ch
133: D CCT GM CRO RGB S	8 ch
135: D16 CCT GM H SAT S	8 ch
168: D CCT GM C CRO XY	8 ch
178: D CCT GM C CRO XY	8 ch
184: D CCT GM C CRO XY	8 ch
190: D CCT GM C CRO XY	8 ch
91: D16 CCT GM C RGB	8 ch
94: D CCT GM CRO RGB S	8 ch
96: D16 CCT GM H SAT S	8 ch
137: D16 CCT GM C RGB S	9 ch
139: D16 CCT GM C RGB S	9 ch
141: D16 CCT GM C RGB S	9 ch
143: D16 CCT GM C RGB S	9 ch
169: D16 CCT GM C CRO XY	9 ch
170: D CCT GM C CRO XY S	9 ch
179: D16 CCT GM C CRO XY	9 ch
182: D CCT GM C CRO XY S	9 ch
185: D16 CCT GM C CRO XY	9 ch
188: D CCT GM C CRO XY S	9 ch
191: D16 CCT GM C CRO XY	9 ch
194: D CCT GM C CRO XY S	9 ch
171: D16 CCT GM C CRO XY S	10 ch
183: D16 CCT GM C CRO XY S	10 ch
189: D16 CCT GM C CRO XY S	10 ch
195: D16 CCT GM C CRO XY S	10 ch
16: Effect Mode RGB	12 ch
15: Effect Mode Fix	13 ch
26: RGB RGB S	25 ch
34: RGB RGB SS	32 ch
27: RGBW RGBW S	33 ch
29: DIM RGB DIM RGB S	33 ch
104: D CCT GM HUE SAT S	41 ch
28: RGBAW RGBAW S	41 ch
30: DIM RGBW DIM RGBW S	41 ch
106: D16 X Y S	49 ch
31 DIM RGBAW RGBAW S	49 ch

32: RGB CCT DIM IND S	49 ch
74: RGB RGB S	49 ch
103: D CCT GM CRO RGB S	57 ch
105: D16 CCT GM H SAT S	57 ch
82: RGB RGB SS	64 ch
138: D16 CCT GM C RGB S	65 ch
180: D CCT GM C CRO XY S	65 ch
75: RGBW RGBW S	65 ch
77: DIM RGB DIM RGB S	65 ch
181: D16 CCT GM C CRO XY S	73 ch
130: D CCT GM HUE SAT S	81 ch
76: RGBAW RGBAW S	81 ch
78: DIM RGBW DIM RGBW S	81 ch
132: D16 X Y S	97 ch
50: RGB*RGB S	97 ch
79 DIM RGBAW RGBAW S	97 ch
80: RGB CCT DIM IND S	97 ch
129: D CCT GM CRO RGB S	113 ch
131: D16 CCT GM H SAT S	113 ch
58: RGB RGB SS	128 ch
142: D16 CCT GM C RGB S	129 ch
186: D CCT GM C CRO XY S	129 ch
51: RGBW RGBW S	129 ch
53: DIM RGB DIM RGB S	129 ch
187: D16 CCT GM C CRO XY S	145 ch
117: D CCT GM HUE SAT S	161 ch
52: RGBAW RGBAW S	161 ch
54: DIM RGBW DIM RGBW S	161 ch
119: D16 X Y S	193 ch
55 DIM RGBAW RGBAW S	193 ch
56: RGB CCT DIM IND S	193 ch
116: D CCT GM CRO RGB S	255 ch
118: D16 CCT GM H SAT S	255 ch
140: D16 CCT GM C RGB S	257 ch
192: D CCT GM C CRO XY S	257 ch
193: D16 CCT GM C CRO XY S	289 ch

1: RGB

3 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	

17: RGB*RGB* 1

3 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	

18: RGB RGB

3 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	

41: RGB*RGB*

3 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	

42: RGB RGB

3 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	

65: RGB*RGB*

3 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	

66: RGB RGB

3 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	

19: RGBW RGBW

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	

2: RGBW

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	

21: DIM RGB DIM RGB

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	211	
4	Blue	150	

25: RGB*RGBS

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	210	
3	Blue	150	
4	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

33: RGBS RGBS

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

4: DIM RGB

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	211	
4	Blue	150	

43: RGBW RGBW

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	

45: DIM RGB DIM RGB

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	211	
4	Blue	150	

49: RGB*RGBS

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

57: RGBS RGBS

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

67: RGBW RGBW

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	

69: DIM RGB DIM RGB

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	211	
4	Blue	150	

73: RGB*RGBS

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

8: RGBS

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

81: RGBS RGBS

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	

81: RGBS RGBS (continued)

Ch	Function	Default	DMX values
4	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

11: DIM RGBS

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	211	
4	Blue	150	
5	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

112: D CCT GM HUE SAT

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	H SBHue	0	
5	H SBSaturation	0	

125: D CCT GM HUE SAT

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	H SBHue	0	
5	H SBSaturation	0	

20: RGBAW RGBAW

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	

22: DIM RGBW DIM RGBW

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	255	

3: RGBAW

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	

35: RGBWS RGBWS

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	
5	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

37: DIM RGBS DIM RGBS

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	211	
4	Blue	150	

37: DIM RGBS DIM RGBS (continued)

Ch	Function	Default	DMX values
5	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

44: RGBAW RGBAW

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	

46: DIM RGBW DIM RGBW

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	255	

5: DIM RGBW

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	255	

59: RGBWS RGBWS

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	
5	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

61: DIM RGBS DIM RGBS

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	211	
4	Blue	150	
5	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

68: RGBAW RGBAW

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	

70: DIM RGBW DIM RGBW

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	255	

83: RGBWS RGBWS

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	
5	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

85: DIM RGBS DIM RGBS

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open

85: DIM RGBS DIM RGBS (continued)

Ch	Function	Default	DMX values
2	Red	255	
3	Green	211	
4	Blue	150	
5	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

9: RGBWS

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	
5	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

90: D CCT GM HUE SAT

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	H SBHue	0	
5	H SBSaturation	0	

99: D CCT GM HUE SAT

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	H SBHue	0	
5	H SBSaturation	0	

10: RGBAWS

6 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	
6	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

102: D16 X Y

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C IEX	106	
4	C IEX Fine	96	Fine byte of C IEX
5	C IEY	111	
6	C IEY Fine	46	Fine byte of C IEY

108: D CCT GM HUE SAT S

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	H SBHue	0	
5	H SBSaturation	0	
6	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

115: D16 X Y

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C IEX	106	
4	C IEX Fine	96	Fine byte of C IEX

115: D16 X Y (continued)

Ch	Function	Default	DMX values
5	C IEY	111	
6	C IEY Fine	46	Fine byte of C IEY

12: DIM RGBWS

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	255	
6	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

121: D CCT GM HUE SAT S

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	H SBHue	0	
5	H SBSaturation	0	
6	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

128: D16 X Y

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C IEX	106	
4	C IEX Fine	96	Fine byte of C IEX
5	C IEY	111	
6	C IEY Fine	46	Fine byte of C IEY

134: D CCT GM HUE SAT S

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	H SBHue	0	
5	H SBSaturation	0	
6	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

23: DIM RGBAW DIM RGBAW

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	Color Add RY	255	
6	White	255	

24: RGB CCT DIM IND

6 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	C TC	175	0–4 No effect 5–255 CTC 2
5	Dimmer	0	0–254 Closed 255–255 Open

24: RGB CCT DIM IND (continued)

Ch	Function	Default	DMX values
6	Color Wheel	254	0–3 No effect (wheel slot 1) 4–6 Medium Bastard Amber (wheel slot 4) 7–7 Pale Yellow (wheel slot 5) 8–8 Dark Salmon (wheel slot 6) 9–9 Pale Amber Gold (wheel slot 7) 10–12 Medium Yellow (wheel slot 8) 13–14 Straw Tint (wheel slot 9) 15–16 Deep Straw (wheel slot 10) 17–18 Surprise Peach (wheel slot 11) 19–19 Fire (wheel slot 12) 20–20 Medium Amber (wheel slot 13) 21–21 Gold Amber (wheel slot 14) 22–23 Dark Amber (wheel slot 15) 24–24 Scarlet (wheel slot 16) 25–25 Sunset Red (wheel slot 17) 26–26 Bright Red (wheel slot 18) 27–28 Medium Red (wheel slot 19) 29–34 Plasa Red (wheel slot 20) 35–35 Light Pink (wheel slot 21) 36–45 Medium Pink (wheel slot 22) 46–47 Dark Magenta (wheel slot 23) 48–48 Rose Purple (wheel slot 24) 49–51 Medium Purple (wheel slot 25) 52–52 Light Lavender (wheel slot 26) 53–57 Paler Lavender (wheel slot 27) 58–60 Lavender (wheel slot 28) 61–62 Mist Blue (wheel slot 29) 63–67 Pale Blue (wheel slot 30) 68–70 Sky Blue (wheel slot 31) 71–74 Tokyo Blue (wheel slot 32) 75–78 Evening Blue (wheel slot 33) 79–84 Just Blue (wheel slot 34) 85–87 Deeper Blue (wheel slot 35) 88–88 Lime Green (wheel slot 36) 89–89 Moss Green (wheel slot 37) 90–99 Dark Yellow Green (wheel slot 38) 100–100 Spring Yellow (wheel slot 39) 101–101 Yellow (wheel slot 40) 102–102 Light Amber (wheel slot 41) 103–103 Straw (wheel slot 42) 104–104 Deep Amber (wheel slot 43) 105–105 Orange (wheel slot 44) 106–106 Primary Red (wheel slot 45) 107–107 Light Rose (wheel slot 46) 108–108 English Rose (wheel slot 47) 109–109 Light Salmon (wheel slot 48) 110–110 Middle Rose (wheel slot 49) 111–112 Dark Pink (wheel slot 50) 113–114 Magenta (wheel slot 51) 115–115 Peacock Blue (wheel slot 52) 116–116 Medium Blue-Green (wheel slot 53) 117–117 Steel Blue (wheel slot 54) 118–131 Light Blue (wheel slot 55) 132–133 Medium Blue (wheel slot 56) 134–134 Golden Amber (wheel slot 57) 135–135 Deep Golden Amber (wheel slot 58) 136–136 Pale Lavender (wheel slot 59) 137–137 Special Lavender (wheel slot 60) 138–138 Pale Green (wheel slot 61) 139–139 Primary Green (wheel slot 62) 140–140 Summer Blue (wheel slot 63) 141–141 Bright Blue (wheel slot 64) 142–142 Pale Violet (wheel slot 65) 143–143 Pale Navy Blue (wheel slot 66)

36: RGBAWS RGBAWS

6 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	
6	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

38: DIM RGBWS DIM RGBWS

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	255	
6	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

47: DIM RGBAW DIM RGBAW

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	Color Add RY	255	
6	White	255	

48: RGB CCT DIM IND

6 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	C TC	175	0–4 No effect 5–255 CTC 2
5	Dimmer	0	0–254 Closed 255–255 Open

48: RGB CCT DIM IND (continued)

Ch	Function	Default	DMX values
6	Color Wheel	254	0–3 No effect (wheel slot 1) 4–6 Medium Bastard Amber (wheel slot 4) 7–7 Pale Yellow (wheel slot 5) 8–8 Dark Salmon (wheel slot 6) 9–9 Pale Amber Gold (wheel slot 7) 10–12 Medium Yellow (wheel slot 8) 13–14 Straw Tint (wheel slot 9) 15–16 Deep Straw (wheel slot 10) 17–18 Surprise Peach (wheel slot 11) 19–19 Fire (wheel slot 12) 20–20 Medium Amber (wheel slot 13) 21–21 Gold Amber (wheel slot 14) 22–23 Dark Amber (wheel slot 15) 24–24 Scarlet (wheel slot 16) 25–25 Sunset Red (wheel slot 17) 26–26 Bright Red (wheel slot 18) 27–28 Medium Red (wheel slot 19) 29–34 Plasa Red (wheel slot 20) 35–35 Light Pink (wheel slot 21) 36–45 Medium Pink (wheel slot 22) 46–47 Dark Magenta (wheel slot 23) 48–48 Rose Purple (wheel slot 24) 49–51 Medium Purple (wheel slot 25) 52–52 Light Lavender (wheel slot 26) 53–57 Paler Lavender (wheel slot 27) 58–60 Lavender (wheel slot 28) 61–62 Mist Blue (wheel slot 29) 63–67 Pale Blue (wheel slot 30) 68–70 Sky Blue (wheel slot 31) 71–74 Tokyo Blue (wheel slot 32) 75–78 Evening Blue (wheel slot 33) 79–84 Just Blue (wheel slot 34) 85–87 Deeper Blue (wheel slot 35) 88–88 Lime Green (wheel slot 36) 89–89 Moss Green (wheel slot 37) 90–99 Dark Yellow Green (wheel slot 38) 100–100 Spring Yellow (wheel slot 39) 101–101 Yellow (wheel slot 40) 102–102 Light Amber (wheel slot 41) 103–103 Straw (wheel slot 42) 104–104 Deep Amber (wheel slot 43) 105–105 Orange (wheel slot 44) 106–106 Primary Red (wheel slot 45) 107–107 Light Rose (wheel slot 46) 108–108 English Rose (wheel slot 47) 109–109 Light Salmon (wheel slot 48) 110–110 Middle Rose (wheel slot 49) 111–112 Dark Pink (wheel slot 50) 113–114 Magenta (wheel slot 51) 115–115 Peacock Blue (wheel slot 52) 116–116 Medium Blue-Green (wheel slot 53) 117–117 Steel Blue (wheel slot 54) 118–131 Light Blue (wheel slot 55) 132–133 Medium Blue (wheel slot 56) 134–134 Golden Amber (wheel slot 57) 135–135 Deep Golden Amber (wheel slot 58) 136–136 Pale Lavender (wheel slot 59) 137–137 Special Lavender (wheel slot 60) 138–138 Pale Green (wheel slot 61) 139–139 Primary Green (wheel slot 62) 140–140 Summer Blue (wheel slot 63) 141–141 Bright Blue (wheel slot 64) 142–142 Pale Violet (wheel slot 65) 143–143 Pale Navy Blue (wheel slot 66)

6: DIM RGBAW

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	Color Add RY	255	
6	White	255	

60: RGBAWS RGBAWS

6 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	
6	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

62: DIM RGBWS DIM RGBWS

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	255	
6	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

7: RGB CCT DIM IND

6 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	C TC	175	0–4 No effect 5–255 CTC 2
5	Dimmer	0	0–254 Closed 255–255 Open

7: RGB CCT DIM IND (continued)

Ch	Function	Default	DMX values
6	Color Wheel	254	0–3 No effect (wheel slot 1) 4–6 Medium Bastard Amber (wheel slot 4) 7–7 Pale Yellow (wheel slot 5) 8–8 Dark Salmon (wheel slot 6) 9–9 Pale Amber Gold (wheel slot 7) 10–12 Medium Yellow (wheel slot 8) 13–14 Straw Tint (wheel slot 9) 15–16 Deep Straw (wheel slot 10) 17–18 Surprise Peach (wheel slot 11) 19–19 Fire (wheel slot 12) 20–20 Medium Amber (wheel slot 13) 21–21 Gold Amber (wheel slot 14) 22–23 Dark Amber (wheel slot 15) 24–24 Scarlet (wheel slot 16) 25–25 Sunset Red (wheel slot 17) 26–26 Bright Red (wheel slot 18) 27–28 Medium Red (wheel slot 19) 29–34 Plasa Red (wheel slot 20) 35–35 Light Pink (wheel slot 21) 36–45 Medium Pink (wheel slot 22) 46–47 Dark Magenta (wheel slot 23) 48–48 Rose Purple (wheel slot 24) 49–51 Medium Purple (wheel slot 25) 52–52 Light Lavender (wheel slot 26) 53–57 Paler Lavender (wheel slot 27) 58–60 Lavender (wheel slot 28) 61–62 Mist Blue (wheel slot 29) 63–67 Pale Blue (wheel slot 30) 68–70 Sky Blue (wheel slot 31) 71–74 Tokyo Blue (wheel slot 32) 75–78 Evening Blue (wheel slot 33) 79–84 Just Blue (wheel slot 34) 85–87 Deeper Blue (wheel slot 35) 88–88 Lime Green (wheel slot 36) 89–89 Moss Green (wheel slot 37) 90–99 Dark Yellow Green (wheel slot 38) 100–100 Spring Yellow (wheel slot 39) 101–101 Yellow (wheel slot 40) 102–102 Light Amber (wheel slot 41) 103–103 Straw (wheel slot 42) 104–104 Deep Amber (wheel slot 43) 105–105 Orange (wheel slot 44) 106–106 Primary Red (wheel slot 45) 107–107 Light Rose (wheel slot 46) 108–108 English Rose (wheel slot 47) 109–109 Light Salmon (wheel slot 48) 110–110 Middle Rose (wheel slot 49) 111–112 Dark Pink (wheel slot 50) 113–114 Magenta (wheel slot 51) 115–115 Peacock Blue (wheel slot 52) 116–116 Medium Blue-Green (wheel slot 53) 117–117 Steel Blue (wheel slot 54) 118–131 Light Blue (wheel slot 55) 132–133 Medium Blue (wheel slot 56) 134–134 Golden Amber (wheel slot 57) 135–135 Deep Golden Amber (wheel slot 58) 136–136 Pale Lavender (wheel slot 59) 137–137 Special Lavender (wheel slot 60) 138–138 Pale Green (wheel slot 61) 139–139 Primary Green (wheel slot 62) 140–140 Summer Blue (wheel slot 63) 141–141 Bright Blue (wheel slot 64) 142–142 Pale Violet (wheel slot 65) 143–143 Pale Navy Blue (wheel slot 66)

71: DIM RGBAW DIM RGBAW

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	Color Add RY	255	
6	White	255	

72: RGB CCT DIM IND

6 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	C TC	175	0–4 No effect 5–255 CTC 2
5	Dimmer	0	0–254 Closed 255–255 Open

72: RGB CCT DIM IND (continued)

Ch	Function	Default	DMX values
6	Color Wheel	254	0–3 No effect (wheel slot 1) 4–6 Medium Bastard Amber (wheel slot 4) 7–7 Pale Yellow (wheel slot 5) 8–8 Dark Salmon (wheel slot 6) 9–9 Pale Amber Gold (wheel slot 7) 10–12 Medium Yellow (wheel slot 8) 13–14 Straw Tint (wheel slot 9) 15–16 Deep Straw (wheel slot 10) 17–18 Surprise Peach (wheel slot 11) 19–19 Fire (wheel slot 12) 20–20 Medium Amber (wheel slot 13) 21–21 Gold Amber (wheel slot 14) 22–23 Dark Amber (wheel slot 15) 24–24 Scarlet (wheel slot 16) 25–25 Sunset Red (wheel slot 17) 26–26 Bright Red (wheel slot 18) 27–28 Medium Red (wheel slot 19) 29–34 Plasa Red (wheel slot 20) 35–35 Light Pink (wheel slot 21) 36–45 Medium Pink (wheel slot 22) 46–47 Dark Magenta (wheel slot 23) 48–48 Rose Purple (wheel slot 24) 49–51 Medium Purple (wheel slot 25) 52–52 Light Lavender (wheel slot 26) 53–57 Paler Lavender (wheel slot 27) 58–60 Lavender (wheel slot 28) 61–62 Mist Blue (wheel slot 29) 63–67 Pale Blue (wheel slot 30) 68–70 Sky Blue (wheel slot 31) 71–74 Tokyo Blue (wheel slot 32) 75–78 Evening Blue (wheel slot 33) 79–84 Just Blue (wheel slot 34) 85–87 Deeper Blue (wheel slot 35) 88–88 Lime Green (wheel slot 36) 89–89 Moss Green (wheel slot 37) 90–99 Dark Yellow Green (wheel slot 38) 100–100 Spring Yellow (wheel slot 39) 101–101 Yellow (wheel slot 40) 102–102 Light Amber (wheel slot 41) 103–103 Straw (wheel slot 42) 104–104 Deep Amber (wheel slot 43) 105–105 Orange (wheel slot 44) 106–106 Primary Red (wheel slot 45) 107–107 Light Rose (wheel slot 46) 108–108 English Rose (wheel slot 47) 109–109 Light Salmon (wheel slot 48) 110–110 Middle Rose (wheel slot 49) 111–112 Dark Pink (wheel slot 50) 113–114 Magenta (wheel slot 51) 115–115 Peacock Blue (wheel slot 52) 116–116 Medium Blue-Green (wheel slot 53) 117–117 Steel Blue (wheel slot 54) 118–131 Light Blue (wheel slot 55) 132–133 Medium Blue (wheel slot 56) 134–134 Golden Amber (wheel slot 57) 135–135 Deep Golden Amber (wheel slot 58) 136–136 Pale Lavender (wheel slot 59) 137–137 Special Lavender (wheel slot 60) 138–138 Pale Green (wheel slot 61) 139–139 Primary Green (wheel slot 62) 140–140 Summer Blue (wheel slot 63) 141–141 Bright Blue (wheel slot 64) 142–142 Pale Violet (wheel slot 65) 143–143 Pale Navy Blue (wheel slot 66)

84: RGBAWS RGBAWS

6 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	
6	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

86: DIM RGBWS DIM RGBWS

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	255	
6	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

93: D16 X Y

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C IEX	106	
4	C IEX Fine	96	Fine byte of C IEX
5	C IEY	111	
6	C IEY Fine	46	Fine byte of C IEY

95: D CCT GM HUE SAT S

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	H SBHue	0	

95: D CCT GM HUE SAT S (continued)

Ch	Function	Default	DMX values
5	H SBSaturation	0	
6	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

101: D16 CCT GM H SAT

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	H SBHue	0	
6	H SBHue Fine	0	Fine byte of H SBHue
7	H SBSaturation	0	

110: D16 X Y S

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C IEX	106	
4	C IEX Fine	96	Fine byte of C IEX
5	C IEY	111	
6	C IEY Fine	46	Fine byte of C IEY
7	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

111: D CCT GM CRO RGB

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	Color Mix Mode	0	0–254 Full CCT 255–255 Full RGB

111: D CCT GM CRO RGB (continued)

Ch	Function	Default	DMX values
5	Red	255	
6	Green	211	
7	Blue	150	

114: D16 CCT GM H SAT

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	H SBHue	0	
6	H SBHue Fine	0	Fine byte of H SBHue
7	H SBSaturation	0	

123: D16 X Y S

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C IEX	106	
4	C IEX Fine	96	Fine byte of C IEX
5	C IEY	111	
6	C IEY Fine	46	Fine byte of C IEY
7	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

124: D CCT GM CRO RGB

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	Color Mix Mode	0	0–254 Full CCT 255–255 Full RGB
5	Red	255	
6	Green	211	

124: D CCT GM CRO RGB (continued)

Ch	Function	Default	DMX values
7	Blue	150	

127: D16 CCT GM H SAT

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	H SBHue	0	
6	H SBHue Fine	0	Fine byte of H SBHue
7	H SBSaturation	0	

13: DIM RGBAWS

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	Color Add RY	255	
6	White	255	
7	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

136: D16 X Y S

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C IEX	106	
4	C IEX Fine	96	Fine byte of C IEX
5	C IEY	111	
6	C IEY Fine	46	Fine byte of C IEY
7	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

14: RGB CCT DIM IND S

7 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	C TC	175	0–4 No effect 5–255 CTC 2
5	Dimmer	0	0–254 Closed 255–255 Open

14: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
6	Color Wheel	254	0–3 No effect (wheel slot 1) 4–6 Medium Bastard Amber (wheel slot 4) 7–7 Pale Yellow (wheel slot 5) 8–8 Dark Salmon (wheel slot 6) 9–9 Pale Amber Gold (wheel slot 7) 10–12 Medium Yellow (wheel slot 8) 13–14 Straw Tint (wheel slot 9) 15–16 Deep Straw (wheel slot 10) 17–18 Surprise Peach (wheel slot 11) 19–19 Fire (wheel slot 12) 20–20 Medium Amber (wheel slot 13) 21–21 Gold Amber (wheel slot 14) 22–23 Dark Amber (wheel slot 15) 24–24 Scarlet (wheel slot 16) 25–25 Sunset Red (wheel slot 17) 26–26 Bright Red (wheel slot 18) 27–28 Medium Red (wheel slot 19) 29–34 Plasa Red (wheel slot 20) 35–35 Light Pink (wheel slot 21) 36–45 Medium Pink (wheel slot 22) 46–47 Dark Magenta (wheel slot 23) 48–48 Rose Purple (wheel slot 24) 49–51 Medium Purple (wheel slot 25) 52–52 Light Lavender (wheel slot 26) 53–57 Paler Lavender (wheel slot 27) 58–60 Lavender (wheel slot 28) 61–62 Mist Blue (wheel slot 29) 63–67 Pale Blue (wheel slot 30) 68–70 Sky Blue (wheel slot 31) 71–74 Tokyo Blue (wheel slot 32) 75–78 Evening Blue (wheel slot 33) 79–84 Just Blue (wheel slot 34) 85–87 Deeper Blue (wheel slot 35) 88–88 Lime Green (wheel slot 36) 89–89 Moss Green (wheel slot 37) 90–99 Dark Yellow Green (wheel slot 38) 100–100 Spring Yellow (wheel slot 39) 101–101 Yellow (wheel slot 40) 102–102 Light Amber (wheel slot 41) 103–103 Straw (wheel slot 42) 104–104 Deep Amber (wheel slot 43) 105–105 Orange (wheel slot 44) 106–106 Primary Red (wheel slot 45) 107–107 Light Rose (wheel slot 46) 108–108 English Rose (wheel slot 47) 109–109 Light Salmon (wheel slot 48) 110–110 Middle Rose (wheel slot 49) 111–112 Dark Pink (wheel slot 50) 113–114 Magenta (wheel slot 51) 115–115 Peacock Blue (wheel slot 52) 116–116 Medium Blue-Green (wheel slot 53) 117–117 Steel Blue (wheel slot 54) 118–131 Light Blue (wheel slot 55) 132–133 Medium Blue (wheel slot 56) 134–134 Golden Amber (wheel slot 57) 135–135 Deep Golden Amber (wheel slot 58) 136–136 Pale Lavender (wheel slot 59) 137–137 Special Lavender (wheel slot 60) 138–138 Pale Green (wheel slot 61) 139–139 Primary Green (wheel slot 62) 140–140 Summer Blue (wheel slot 63) 141–141 Bright Blue (wheel slot 64) 142–142 Pale Violet (wheel slot 65) 143–143 Pale Navy Blue (wheel slot 66)

14: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
7	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

39 DIM RGBAWS DIM RGBAWS

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	Color Add RY	255	
6	White	255	
7	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

40: RGB CCT DIM IND S

7 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	C TC	175	0–4 No effect 5–255 CTC 2
5	Dimmer	0	0–254 Closed 255–255 Open

40: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
6	Color Wheel	254	0–3 No effect (wheel slot 1) 4–6 Medium Bastard Amber (wheel slot 4) 7–7 Pale Yellow (wheel slot 5) 8–8 Dark Salmon (wheel slot 6) 9–9 Pale Amber Gold (wheel slot 7) 10–12 Medium Yellow (wheel slot 8) 13–14 Straw Tint (wheel slot 9) 15–16 Deep Straw (wheel slot 10) 17–18 Surprise Peach (wheel slot 11) 19–19 Fire (wheel slot 12) 20–20 Medium Amber (wheel slot 13) 21–21 Gold Amber (wheel slot 14) 22–23 Dark Amber (wheel slot 15) 24–24 Scarlet (wheel slot 16) 25–25 Sunset Red (wheel slot 17) 26–26 Bright Red (wheel slot 18) 27–28 Medium Red (wheel slot 19) 29–34 Plasa Red (wheel slot 20) 35–35 Light Pink (wheel slot 21) 36–45 Medium Pink (wheel slot 22) 46–47 Dark Magenta (wheel slot 23) 48–48 Rose Purple (wheel slot 24) 49–51 Medium Purple (wheel slot 25) 52–52 Light Lavender (wheel slot 26) 53–57 Paler Lavender (wheel slot 27) 58–60 Lavender (wheel slot 28) 61–62 Mist Blue (wheel slot 29) 63–67 Pale Blue (wheel slot 30) 68–70 Sky Blue (wheel slot 31) 71–74 Tokyo Blue (wheel slot 32) 75–78 Evening Blue (wheel slot 33) 79–84 Just Blue (wheel slot 34) 85–87 Deeper Blue (wheel slot 35) 88–88 Lime Green (wheel slot 36) 89–89 Moss Green (wheel slot 37) 90–99 Dark Yellow Green (wheel slot 38) 100–100 Spring Yellow (wheel slot 39) 101–101 Yellow (wheel slot 40) 102–102 Light Amber (wheel slot 41) 103–103 Straw (wheel slot 42) 104–104 Deep Amber (wheel slot 43) 105–105 Orange (wheel slot 44) 106–106 Primary Red (wheel slot 45) 107–107 Light Rose (wheel slot 46) 108–108 English Rose (wheel slot 47) 109–109 Light Salmon (wheel slot 48) 110–110 Middle Rose (wheel slot 49) 111–112 Dark Pink (wheel slot 50) 113–114 Magenta (wheel slot 51) 115–115 Peacock Blue (wheel slot 52) 116–116 Medium Blue-Green (wheel slot 53) 117–117 Steel Blue (wheel slot 54) 118–131 Light Blue (wheel slot 55) 132–133 Medium Blue (wheel slot 56) 134–134 Golden Amber (wheel slot 57) 135–135 Deep Golden Amber (wheel slot 58) 136–136 Pale Lavender (wheel slot 59) 137–137 Special Lavender (wheel slot 60) 138–138 Pale Green (wheel slot 61) 139–139 Primary Green (wheel slot 62) 140–140 Summer Blue (wheel slot 63) 141–141 Bright Blue (wheel slot 64) 142–142 Pale Violet (wheel slot 65) 143–143 Pale Navy Blue (wheel slot 66)

40: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
7	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

63: DIM RGBAWS DIM RGBAWS

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	Color Add RY	255	
6	White	255	
7	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

64: RGB CCT DIM IND S

7 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	C TC	175	0–4 No effect 5–255 CTC 2
5	Dimmer	0	0–254 Closed 255–255 Open

64: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
6	Color Wheel	254	0–3 No effect (wheel slot 1) 4–6 Medium Bastard Amber (wheel slot 4) 7–7 Pale Yellow (wheel slot 5) 8–8 Dark Salmon (wheel slot 6) 9–9 Pale Amber Gold (wheel slot 7) 10–12 Medium Yellow (wheel slot 8) 13–14 Straw Tint (wheel slot 9) 15–16 Deep Straw (wheel slot 10) 17–18 Surprise Peach (wheel slot 11) 19–19 Fire (wheel slot 12) 20–20 Medium Amber (wheel slot 13) 21–21 Gold Amber (wheel slot 14) 22–23 Dark Amber (wheel slot 15) 24–24 Scarlet (wheel slot 16) 25–25 Sunset Red (wheel slot 17) 26–26 Bright Red (wheel slot 18) 27–28 Medium Red (wheel slot 19) 29–34 Plasa Red (wheel slot 20) 35–35 Light Pink (wheel slot 21) 36–45 Medium Pink (wheel slot 22) 46–47 Dark Magenta (wheel slot 23) 48–48 Rose Purple (wheel slot 24) 49–51 Medium Purple (wheel slot 25) 52–52 Light Lavender (wheel slot 26) 53–57 Paler Lavender (wheel slot 27) 58–60 Lavender (wheel slot 28) 61–62 Mist Blue (wheel slot 29) 63–67 Pale Blue (wheel slot 30) 68–70 Sky Blue (wheel slot 31) 71–74 Tokyo Blue (wheel slot 32) 75–78 Evening Blue (wheel slot 33) 79–84 Just Blue (wheel slot 34) 85–87 Deeper Blue (wheel slot 35) 88–88 Lime Green (wheel slot 36) 89–89 Moss Green (wheel slot 37) 90–99 Dark Yellow Green (wheel slot 38) 100–100 Spring Yellow (wheel slot 39) 101–101 Yellow (wheel slot 40) 102–102 Light Amber (wheel slot 41) 103–103 Straw (wheel slot 42) 104–104 Deep Amber (wheel slot 43) 105–105 Orange (wheel slot 44) 106–106 Primary Red (wheel slot 45) 107–107 Light Rose (wheel slot 46) 108–108 English Rose (wheel slot 47) 109–109 Light Salmon (wheel slot 48) 110–110 Middle Rose (wheel slot 49) 111–112 Dark Pink (wheel slot 50) 113–114 Magenta (wheel slot 51) 115–115 Peacock Blue (wheel slot 52) 116–116 Medium Blue-Green (wheel slot 53) 117–117 Steel Blue (wheel slot 54) 118–131 Light Blue (wheel slot 55) 132–133 Medium Blue (wheel slot 56) 134–134 Golden Amber (wheel slot 57) 135–135 Deep Golden Amber (wheel slot 58) 136–136 Pale Lavender (wheel slot 59) 137–137 Special Lavender (wheel slot 60) 138–138 Pale Green (wheel slot 61) 139–139 Primary Green (wheel slot 62) 140–140 Summer Blue (wheel slot 63) 141–141 Bright Blue (wheel slot 64) 142–142 Pale Violet (wheel slot 65) 143–143 Pale Navy Blue (wheel slot 66)

64: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
7	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

87 DIM RGBAWS RGBAWS

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	Color Add RY	255	
6	White	255	
7	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

88: RGB CCT DIM IND S

7 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	C TC	175	0–4 No effect 5–255 CTC 2
5	Dimmer	0	0–254 Closed 255–255 Open

88: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
6	Color Wheel	254	0–3 No effect (wheel slot 1) 4–6 Medium Bastard Amber (wheel slot 4) 7–7 Pale Yellow (wheel slot 5) 8–8 Dark Salmon (wheel slot 6) 9–9 Pale Amber Gold (wheel slot 7) 10–12 Medium Yellow (wheel slot 8) 13–14 Straw Tint (wheel slot 9) 15–16 Deep Straw (wheel slot 10) 17–18 Surprise Peach (wheel slot 11) 19–19 Fire (wheel slot 12) 20–20 Medium Amber (wheel slot 13) 21–21 Gold Amber (wheel slot 14) 22–23 Dark Amber (wheel slot 15) 24–24 Scarlet (wheel slot 16) 25–25 Sunset Red (wheel slot 17) 26–26 Bright Red (wheel slot 18) 27–28 Medium Red (wheel slot 19) 29–34 Plasa Red (wheel slot 20) 35–35 Light Pink (wheel slot 21) 36–45 Medium Pink (wheel slot 22) 46–47 Dark Magenta (wheel slot 23) 48–48 Rose Purple (wheel slot 24) 49–51 Medium Purple (wheel slot 25) 52–52 Light Lavender (wheel slot 26) 53–57 Paler Lavender (wheel slot 27) 58–60 Lavender (wheel slot 28) 61–62 Mist Blue (wheel slot 29) 63–67 Pale Blue (wheel slot 30) 68–70 Sky Blue (wheel slot 31) 71–74 Tokyo Blue (wheel slot 32) 75–78 Evening Blue (wheel slot 33) 79–84 Just Blue (wheel slot 34) 85–87 Deeper Blue (wheel slot 35) 88–88 Lime Green (wheel slot 36) 89–89 Moss Green (wheel slot 37) 90–99 Dark Yellow Green (wheel slot 38) 100–100 Spring Yellow (wheel slot 39) 101–101 Yellow (wheel slot 40) 102–102 Light Amber (wheel slot 41) 103–103 Straw (wheel slot 42) 104–104 Deep Amber (wheel slot 43) 105–105 Orange (wheel slot 44) 106–106 Primary Red (wheel slot 45) 107–107 Light Rose (wheel slot 46) 108–108 English Rose (wheel slot 47) 109–109 Light Salmon (wheel slot 48) 110–110 Middle Rose (wheel slot 49) 111–112 Dark Pink (wheel slot 50) 113–114 Magenta (wheel slot 51) 115–115 Peacock Blue (wheel slot 52) 116–116 Medium Blue-Green (wheel slot 53) 117–117 Steel Blue (wheel slot 54) 118–131 Light Blue (wheel slot 55) 132–133 Medium Blue (wheel slot 56) 134–134 Golden Amber (wheel slot 57) 135–135 Deep Golden Amber (wheel slot 58) 136–136 Pale Lavender (wheel slot 59) 137–137 Special Lavender (wheel slot 60) 138–138 Pale Green (wheel slot 61) 139–139 Primary Green (wheel slot 62) 140–140 Summer Blue (wheel slot 63) 141–141 Bright Blue (wheel slot 64) 142–142 Pale Violet (wheel slot 65) 143–143 Pale Navy Blue (wheel slot 66)

88: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
7	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

89: D CCT GM CRO RGB

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	Color Mix Mode	0	0–254 Full CCT 255–255 Full RGB
5	Red	255	
6	Green	211	
7	Blue	150	

92: D16 CCT GM H SAT

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	H SBHue	0	
6	H SBHue Fine	0	Fine byte of H SBHue
7	H SBSaturation	0	

97: D16 X Y S

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C IEX	106	
4	C IEX Fine	96	Fine byte of C IEX
5	C IEY	111	
6	C IEY Fine	46	Fine byte of C IEY

97: D16 X Y S (continued)

Ch	Function	Default	DMX values
7	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

98: D CCT GM CRO RGB

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	Color Mix Mode	0	0–254 Full CCT 255–255 Full RGB
5	Red	255	
6	Green	211	
7	Blue	150	

100: D16 CCT GM C RGB

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	Color Mix Mode	0	0–254 Full CCT 255–255 Full RGB
6	Red	255	
7	Green	211	
8	Blue	150	

107: D CCT GM CRO RGB S

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	Color Mix Mode	0	0–254 Full CCT 255–255 Full RGB

107: D CCT GM CRO RGB S (continued)

Ch	Function	Default	DMX values
5	Red	255	
6	Green	211	
7	Blue	150	
8	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

109: D16 CCT GM H SAT S

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	H SBHue	0	
6	H SBHue Fine	0	Fine byte of H SBHue
7	H SBSaturation	0	
8	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

113: D16 CCT GM C RGB

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	Color Mix Mode	0	0–254 Full CCT 255–255 Full RGB
6	Red	255	
7	Green	211	
8	Blue	150	

120: D CCT GM CRO RGB S

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	Color Mix Mode	0	0–254 Full CCT 255–255 Full RGB
5	Red	255	
6	Green	211	
7	Blue	150	
8	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

122: D16 CCT GM H SAT S

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	H SBHue	0	
6	H SBHue Fine	0	Fine byte of H SBHue
7	H SBSaturation	0	
8	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

126: D16 CCT GM C RGB

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green

126: D16 CCT GM C RGB (continued)

Ch	Function	Default	DMX values
5	Color Mix Mode	0	0–254 Full CCT 255–255 Full RGB
6	Red	255	
7	Green	211	
8	Blue	150	

133: D CCT GM CRO RGB S

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	Color Mix Mode	0	0–254 Full CCT 255–255 Full RGB
5	Red	255	
6	Green	211	
7	Blue	150	
8	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

135: D16 CCT GM H SAT S

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	H SBHue	0	
6	H SBHue Fine	0	Fine byte of H SBHue
7	H SBSaturation	0	
8	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

168: D CCT GM C CRO XY

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	Color Mix Mode	0	0–254 Full CCT 255–255 Full X Y
5	C IEX	106	
6	C IEX Fine	96	Fine byte of C IEX
7	C IEY	111	
8	C IEY Fine	46	Fine byte of C IEY

178: D CCT GM C CRO XY

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	Color Mix Mode	0	0–254 Full CCT 255–255 Full X Y
5	C IEX	106	
6	C IEX Fine	96	Fine byte of C IEX
7	C IEY	111	
8	C IEY Fine	46	Fine byte of C IEY

184: D CCT GM C CRO XY

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	Color Mix Mode	0	0–254 Full CCT 255–255 Full X Y
5	C IEX	106	
6	C IEX Fine	96	Fine byte of C IEX
7	C IEY	111	
8	C IEY Fine	46	Fine byte of C IEY

190: D CCT GM C CRO XY

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	Color Mix Mode	0	0–254 Full CCT 255–255 Full X Y
5	C IEX	106	
6	C IEX Fine	96	Fine byte of C IEX
7	C IEY	111	
8	C IEY Fine	46	Fine byte of C IEY

91: D16 CCT GM C RGB

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	Color Mix Mode	0	0–254 Full CCT 255–255 Full RGB
6	Red	255	
7	Green	211	
8	Blue	150	

94: D CCT GM CRO RGB S

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	Color Mix Mode	0	0–254 Full CCT 255–255 Full RGB
5	Red	255	
6	Green	211	
7	Blue	150	

94: D CCT GM CRO RGB S (continued)

Ch	Function	Default	DMX values
8	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

96: D16 CCT GM H SAT S

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	H SBHue	0	
6	H SBHue Fine	0	Fine byte of H SBHue
7	H SBSaturation	0	
8	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

137: D16 CCT GM C RGB S

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	Color Mix Mode	0	0–254 Full CCT 255–255 Full RGB
6	Red	255	
7	Green	211	
8	Blue	150	
9	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

139: D16 CCT GM C RGB S

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	Color Mix Mode	0	0–254 Full CCT 255–255 Full RGB
6	Red	255	
7	Green	211	
8	Blue	150	
9	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

141: D16 CCT GM C RGB S

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	Color Mix Mode	0	0–254 Full CCT 255–255 Full RGB
6	Red	255	
7	Green	211	
8	Blue	150	
9	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

143: D16 CCT GM C RGB S

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	

143: D16 CCT GM C RGB S (continued)

Ch	Function	Default	DMX values
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	Color Mix Mode	0	0–254 Full CCT 255–255 Full RGB
6	Red	255	
7	Green	211	
8	Blue	150	
9	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

169: D16 CCT GM C CRO XY

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	Color Mix Mode	0	0–254 Full CCT 255–255 Full X Y
6	C IEX	106	
7	C IEX Fine	96	Fine byte of C IEX
8	C IEY	111	
9	C IEY Fine	46	Fine byte of C IEY

170: D CCT GM C CRO XY S

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	Color Mix Mode	0	0–254 Full CCT 255–255 Full X Y
5	C IEX	106	
6	C IEX Fine	96	Fine byte of C IEX
7	C IEY	111	
8	C IEY Fine	46	Fine byte of C IEY

170: D CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
9	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

179: D16 CCT GM C CRO XY

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	Color Mix Mode	0	0–254 Full CCT 255–255 Full X Y
6	C IEX	106	
7	C IEX Fine	96	Fine byte of C IEX
8	C IEY	111	
9	C IEY Fine	46	Fine byte of C IEY

182: D CCT GM C CRO XY S

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	Color Mix Mode	0	0–254 Full CCT 255–255 Full X Y
5	C IEX	106	
6	C IEX Fine	96	Fine byte of C IEX
7	C IEY	111	
8	C IEY Fine	46	Fine byte of C IEY
9	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

185: D16 CCT GM C CRO XY

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	Color Mix Mode	0	0–254 Full CCT 255–255 Full X Y
6	C IEX	106	
7	C IEX Fine	96	Fine byte of C IEX
8	C IEY	111	
9	C IEY Fine	46	Fine byte of C IEY

188: D CCT GM C CRO XY S

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	Color Mix Mode	0	0–254 Full CCT 255–255 Full X Y
5	C IEX	106	
6	C IEX Fine	96	Fine byte of C IEX
7	C IEY	111	
8	C IEY Fine	46	Fine byte of C IEY
9	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

191: D16 CCT GM C CRO XY

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	Color Mix Mode	0	0–254 Full CCT 255–255 Full X Y

191: D16 CCT GM C CRO XY (continued)

Ch	Function	Default	DMX values
6	C IEX	106	
7	C IEX Fine	96	Fine byte of C IEX
8	C IEY	111	
9	C IEY Fine	46	Fine byte of C IEY

194: D CCT GM C CRO XY S

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	Color Mix Mode	0	0–254 Full CCT 255–255 Full X Y
5	C IEX	106	
6	C IEX Fine	96	Fine byte of C IEX
7	C IEY	111	
8	C IEY Fine	46	Fine byte of C IEY
9	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

171: D16 CCT GM C CRO XY S

10 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	Color Mix Mode	0	0–254 Full CCT 255–255 Full X Y
6	C IEX	106	
7	C IEX Fine	96	Fine byte of C IEX
8	C IEY	111	
9	C IEY Fine	46	Fine byte of C IEY
10	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

183: D16 CCT GM C CRO XY S

10 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	Color Mix Mode	0	0–254 Full CCT 255–255 Full X Y
6	C IEX	106	
7	C IEX Fine	96	Fine byte of C IEX
8	C IEY	111	
9	C IEY Fine	46	Fine byte of C IEY
10	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

189: D16 CCT GM C CRO XY S

10 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	Color Mix Mode	0	0–254 Full CCT 255–255 Full X Y
6	C IEX	106	
7	C IEX Fine	96	Fine byte of C IEX
8	C IEY	111	
9	C IEY Fine	46	Fine byte of C IEY
10	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

195: D16 CCT GM C CRO XY S

10 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	

195: D16 CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	Color Mix Mode	0	0–254 Full CCT 255–255 Full X Y
6	C IEX	106	
7	C IEX Fine	96	Fine byte of C IEX
8	C IEY	111	
9	C IEY Fine	46	Fine byte of C IEY
10	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

16: Effect Mode RGB

12 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
3	Color Macro1	0	0–7 One Color Static 8–15 Two Color Static 16–23 Three Color Static 24–31 Four Color Static 32–39 One Color Fade 40–47 Two Color Fade 48–55 Three Color Fade 56–63 Four Color Fade 64–71 Simple Running 72–79 Double Running 80–87 Two Col Running 88–95 Flag Running 96–101 Double Flag Running 102–109 Spiral 4 Color 110–117 Spiral 2 Color 118–125 Rainbow 126–133 Fire 134–141 Rotor 142–149 Rotor Split 2 150–157 Rotor Split 4 158–255 NoFeature 1
4	Color Macro1Rate	0	0–254 Slow 255–255 Fast
5	Crossfade	0	0–254 No Fade 255–255 Smooth Fade
6	Direction	0	0–63 Forward with Loop 64–127 Forward one time and stop 128–190 Reverse one time and stop 191–255 Reverse with Loop

16: Effect Mode RGB (continued)

Ch	Function	Default	DMX values
7	Size	0	0–63 1 Group 64–127 2 Groups 128–190 3 Groups 191–255 4 Groups
8	Offset	0	
9	Restart Program	0	0–0 No Function 1–255 Restart Color Macro
10	Red	255	
11	Green	210	
12	Blue	150	

15: Effect Mode Fix

13 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
3	Color Macro1	0	0–7 One Color Static 8–15 Two Color Static 16–23 Three Color Static 24–31 Four Color Static 32–39 One Color Fade 40–47 Two Color Fade 48–55 Three Color Fade 56–63 Four Color Fade 64–71 Simple Running 72–79 Double Running 80–87 Two Col Running 88–95 Flag Running 96–101 Double Flag Running 102–109 Spiral 4 Color 110–117 Spiral 2 Color 118–125 Rainbow 126–133 Fire 134–141 Rotor 142–149 Rotor Split 2 150–157 Rotor Split 4 158–255 NoFeature 1
4	Color Macro1Rate	0	0–254 Slow 255–255 Fast
5	Crossfade	0	0–254 No Fade 255–255 Smooth Fade
6	Direction	0	0–63 Forward with Loop 64–127 Forward one time and stop 128–190 Reverse one time and stop 191–255 Reverse with Loop
7	Size	0	0–63 1 Group 64–127 2 Groups 128–190 3 Groups 191–255 4 Groups
8	Offset	0	

15: Effect Mode Fix (continued)

Ch	Function	Default	DMX values
9	Restart Program	0	0–0 No Function 1–255 Restart Color Macro

15: Effect Mode Fix (continued)

Ch	Function	Default	DMX values
10	Color Wheel	254	0–1 No effect (wheel slot 1) 2–2 Rose Pink (wheel slot 2) 3–3 Lavender Tint (wheel slot 3) 4–6 Medium Bastard Amber (wheel slot 4) 7–7 Pale Yellow (wheel slot 5) 8–8 Dark Salmon (wheel slot 6) 9–9 Pale Amber Gold (wheel slot 7) 10–12 Medium Yellow (wheel slot 8) 13–14 Straw Tint (wheel slot 9) 15–16 Deep Straw (wheel slot 10) 17–18 Surprise Peach (wheel slot 11) 19–19 Fire (wheel slot 12) 20–20 Medium Amber (wheel slot 13) 21–21 Gold Amber (wheel slot 14) 22–23 Dark Amber (wheel slot 15) 24–24 Scarlet (wheel slot 16) 25–25 Sunset Red (wheel slot 17) 26–26 Bright Red (wheel slot 18) 27–28 Medium Red (wheel slot 19) 29–34 Plasa Red (wheel slot 20) 35–35 Light Pink (wheel slot 21) 36–45 Medium Pink (wheel slot 22) 46–47 Dark Magenta (wheel slot 23) 48–48 Rose Purple (wheel slot 24) 49–51 Medium Purple (wheel slot 25) 52–52 Light Lavender (wheel slot 26) 53–57 Paler Lavender (wheel slot 27) 58–60 Lavender (wheel slot 28) 61–62 Mist Blue (wheel slot 29) 63–67 Pale Blue (wheel slot 30) 68–70 Sky Blue (wheel slot 31) 71–74 Tokyo Blue (wheel slot 32) 75–78 Evening Blue (wheel slot 33) 79–84 Just Blue (wheel slot 34) 85–87 Deeper Blue (wheel slot 35) 88–88 Lime Green (wheel slot 36) 89–89 Moss Green (wheel slot 37) 90–99 Dark Yellow Green (wheel slot 38) 100–100 Spring Yellow (wheel slot 39) 101–101 Yellow (wheel slot 40) 102–102 Light Amber (wheel slot 41) 103–103 Straw (wheel slot 42) 104–104 Deep Amber (wheel slot 43) 105–105 Orange (wheel slot 44) 106–106 Primary Red (wheel slot 45) 107–107 Light Rose (wheel slot 46) 108–108 English Rose (wheel slot 47) 109–109 Light Salmon (wheel slot 48) 110–110 Middle Rose (wheel slot 49) 111–112 Dark Pink (wheel slot 50) 113–114 Magenta (wheel slot 51) 115–115 Peacock Blue (wheel slot 52) 116–116 Medium Blue-Green (wheel slot 53) 117–117 Steel Blue (wheel slot 54) 118–131 Light Blue (wheel slot 55) 132–133 Medium Blue (wheel slot 56) 134–134 Golden Amber (wheel slot 57) 135–135 Deep Golden Amber (wheel slot 58) 136–136 Pale Lavender (wheel slot 59) 137–137 Special Lavender (wheel slot 60) 138–138 Pale Green (wheel slot 61) 139–139 Primary Green (wheel slot 62) 140–140 Summer Blue (wheel slot 63) 141–141 Bright Blue (wheel slot 64)

15: Effect Mode Fix (continued)

Ch	Function	Default	DMX values
11	Color Wheel 2	254	0–1 No effect (wheel slot 1) 2–2 Rose Pink (wheel slot 2) 3–3 Lavender Tint (wheel slot 3) 4–6 Medium Bastard Amber (wheel slot 4) 7–7 Pale Yellow (wheel slot 5) 8–8 Dark Salmon (wheel slot 6) 9–9 Pale Amber Gold (wheel slot 7) 10–12 Medium Yellow (wheel slot 8) 13–14 Straw Tint (wheel slot 9) 15–16 Deep Straw (wheel slot 10) 17–18 Surprise Peach (wheel slot 11) 19–19 Fire (wheel slot 12) 20–20 Medium Amber (wheel slot 13) 21–21 Gold Amber (wheel slot 14) 22–23 Dark Amber (wheel slot 15) 24–24 Scarlet (wheel slot 16) 25–25 Sunset Red (wheel slot 17) 26–26 Bright Red (wheel slot 18) 27–28 Medium Red (wheel slot 19) 29–34 Plasa Red (wheel slot 20) 35–35 Light Pink (wheel slot 21) 36–45 Medium Pink (wheel slot 22) 46–47 Dark Magenta (wheel slot 23) 48–48 Rose Purple (wheel slot 24) 49–51 Medium Purple (wheel slot 25) 52–52 Light Lavender (wheel slot 26) 53–57 Paler Lavender (wheel slot 27) 58–60 Lavender (wheel slot 28) 61–62 Mist Blue (wheel slot 29) 63–67 Pale Blue (wheel slot 30) 68–70 Sky Blue (wheel slot 31) 71–74 Tokyo Blue (wheel slot 32) 75–78 Evening Blue (wheel slot 33) 79–84 Just Blue (wheel slot 34) 85–87 Deeper Blue (wheel slot 35) 88–88 Lime Green (wheel slot 36) 89–89 Moss Green (wheel slot 37) 90–99 Dark Yellow Green (wheel slot 38) 100–100 Spring Yellow (wheel slot 39) 101–101 Yellow (wheel slot 40) 102–102 Light Amber (wheel slot 41) 103–103 Straw (wheel slot 42) 104–104 Deep Amber (wheel slot 43) 105–105 Orange (wheel slot 44) 106–106 Primary Red (wheel slot 45) 107–107 Light Rose (wheel slot 46) 108–108 English Rose (wheel slot 47) 109–109 Light Salmon (wheel slot 48) 110–110 Middle Rose (wheel slot 49) 111–112 Dark Pink (wheel slot 50) 113–114 Magenta (wheel slot 51) 115–115 Peacock Blue (wheel slot 52) 116–116 Medium Blue-Green (wheel slot 53) 117–117 Steel Blue (wheel slot 54) 118–131 Light Blue (wheel slot 55) 132–133 Medium Blue (wheel slot 56) 134–134 Golden Amber (wheel slot 57) 135–135 Deep Golden Amber (wheel slot 58) 136–136 Pale Lavender (wheel slot 59) 137–137 Special Lavender (wheel slot 60) 138–138 Pale Green (wheel slot 61) 139–139 Primary Green (wheel slot 62) 140–140 Summer Blue (wheel slot 63) 141–141 Bright Blue (wheel slot 64)

15: Effect Mode Fix (continued)

Ch	Function	Default	DMX values
12	Color3	254	
13	Color4	254	

26: RGB RGB S

25 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	210	
3	Blue	150	
4	Reserved 4	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

34: RGB RGB SS

32 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	Red	255	
5	Green	211	
6	Blue	150	
7	Red	255	

34: RGB RGB SS (continued)

Ch	Function	Default	DMX values
8	Green	211	
9	Blue	150	
10	Red	255	
11	Green	211	
12	Blue	150	
13	Red	255	
14	Green	211	
15	Blue	150	
16	Red	255	
17	Green	211	
18	Blue	150	
19	Red	255	
20	Green	211	
21	Blue	150	
22	Red	255	
23	Green	211	
24	Blue	150	
25	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
26	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
27	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
28	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
29	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
30	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

34: RGB RGB SS (continued)

Ch	Function	Default	DMX values
31	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
32	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

27: RGBW RGBW S

33 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	

27: RGBW RGBW S (continued)

Ch	Function	Default	DMX values
33	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

29: DIM RGB DIM RGB S

33 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	211	
4	Blue	150	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

104: D CCT GM HUE SAT S

41 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	H SBHue	0	
5	H SBSaturation	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	

104: D CCT GM HUE SAT S (continued)

Ch	Function	Default	DMX values
41	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

28: RGBAW RGBAW S

41 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	

28: RGBAW RGBAW S (continued)

Ch	Function	Default	DMX values
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

30: DIM RGBW DIM RGBW S

41 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	255	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	

30: DIM RGBW DIM RGBW S (continued)

Ch	Function	Default	DMX values
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

106: D16 X Y S

49 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C IEX	106	
4	C IEX Fine	96	Fine byte of C IEX
5	C IEY	111	
6	C IEY Fine	46	Fine byte of C IEY
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	

106: D16 X Y S (continued)

Ch	Function	Default	DMX values
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

31 DIM RGBAW RGBAW S

49 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	Color Add RY	255	
6	White	255	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	

31 DIM RGBAW RGBAW S (continued)

Ch	Function	Default	DMX values
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

32: RGB CCT DIM IND S

49 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	C TC	175	0–4 No effect 5–255 CTC 2

32: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
5	Dimmer	0	0–254 Closed 255–255 Open

32: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
6	Color Wheel	254	0–3 No effect (wheel slot 1) 4–6 Medium Bastard Amber (wheel slot 4) 7–7 Pale Yellow (wheel slot 5) 8–8 Dark Salmon (wheel slot 6) 9–9 Pale Amber Gold (wheel slot 7) 10–12 Medium Yellow (wheel slot 8) 13–14 Straw Tint (wheel slot 9) 15–16 Deep Straw (wheel slot 10) 17–18 Surprise Peach (wheel slot 11) 19–19 Fire (wheel slot 12) 20–20 Medium Amber (wheel slot 13) 21–21 Gold Amber (wheel slot 14) 22–23 Dark Amber (wheel slot 15) 24–24 Scarlet (wheel slot 16) 25–25 Sunset Red (wheel slot 17) 26–26 Bright Red (wheel slot 18) 27–28 Medium Red (wheel slot 19) 29–34 Plasa Red (wheel slot 20) 35–35 Light Pink (wheel slot 21) 36–45 Medium Pink (wheel slot 22) 46–47 Dark Magenta (wheel slot 23) 48–48 Rose Purple (wheel slot 24) 49–51 Medium Purple (wheel slot 25) 52–52 Light Lavender (wheel slot 26) 53–57 Paler Lavender (wheel slot 27) 58–60 Lavender (wheel slot 28) 61–62 Mist Blue (wheel slot 29) 63–67 Pale Blue (wheel slot 30) 68–70 Sky Blue (wheel slot 31) 71–74 Tokyo Blue (wheel slot 32) 75–78 Evening Blue (wheel slot 33) 79–84 Just Blue (wheel slot 34) 85–87 Deeper Blue (wheel slot 35) 88–88 Lime Green (wheel slot 36) 89–89 Moss Green (wheel slot 37) 90–99 Dark Yellow Green (wheel slot 38) 100–100 Spring Yellow (wheel slot 39) 101–101 Yellow (wheel slot 40) 102–102 Light Amber (wheel slot 41) 103–103 Straw (wheel slot 42) 104–104 Deep Amber (wheel slot 43) 105–105 Orange (wheel slot 44) 106–106 Primary Red (wheel slot 45) 107–107 Light Rose (wheel slot 46) 108–108 English Rose (wheel slot 47) 109–109 Light Salmon (wheel slot 48) 110–110 Middle Rose (wheel slot 49) 111–112 Dark Pink (wheel slot 50) 113–114 Magenta (wheel slot 51) 115–115 Peacock Blue (wheel slot 52) 116–116 Medium Blue-Green (wheel slot 53) 117–117 Steel Blue (wheel slot 54) 118–131 Light Blue (wheel slot 55) 132–133 Medium Blue (wheel slot 56) 134–134 Golden Amber (wheel slot 57) 135–135 Deep Golden Amber (wheel slot 58) 136–136 Pale Lavender (wheel slot 59) 137–137 Special Lavender (wheel slot 60) 138–138 Pale Green (wheel slot 61) 139–139 Primary Green (wheel slot 62) 140–140 Summer Blue (wheel slot 63) 141–141 Bright Blue (wheel slot 64) 142–142 Pale Violet (wheel slot 65) 143–143 Pale Navy Blue (wheel slot 66)

32: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	

32: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
49	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

74: RGB RGB S

49 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	Reserved 4	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	

74: RGB RGB S (continued)

Ch	Function	Default	DMX values
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

103: D CCT GM CRO RGB S

57 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	117	
3	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
4	Color Mix Mode	0	0–254 Full CCT 255–255 Full RGB
5	Red	255	
6	Green	211	
7	Blue	150	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	

103: D CCT GM CRO RGB S (continued)

Ch	Function	Default	DMX values
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

105: D16 CCT GM H SAT S

57 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer

105: D16 CCT GM H SAT S (continued)

Ch	Function	Default	DMX values
3	C TC	117	
4	Green Magenta	0	0–4 No effect 5–127 Magenta 128–254 No shift 255–255 Green
5	H SBHue	0	
6	H SBHue Fine	0	Fine byte of H SBHue
7	H SBSaturation	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	

105: D16 CCT GM H SAT S (continued)

Ch	Function	Default	DMX values
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

82: RGB RGB SS

64 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	Red	255	
5	Green	211	
6	Blue	150	
7	Red	255	
8	Green	211	
9	Blue	150	
10	Red	255	
11	Green	211	
12	Blue	150	
13	Red	255	
14	Green	211	
15	Blue	150	
16	Red	255	
17	Green	211	
18	Blue	150	
19	Red	255	
20	Green	211	
21	Blue	150	
22	Red	255	
23	Green	211	
24	Blue	150	
25	Red	255	
26	Green	211	

82: RGB RGB SS (continued)

Ch	Function	Default	DMX values
27	Blue	150	
28	Red	255	
29	Green	211	
30	Blue	150	
31	Red	255	
32	Green	211	
33	Blue	150	
34	Red	255	
35	Green	211	
36	Blue	150	
37	Red	255	
38	Green	211	
39	Blue	150	
40	Red	255	
41	Green	211	
42	Blue	150	
43	Red	255	
44	Green	211	
45	Blue	150	
46	Red	255	
47	Green	211	
48	Blue	150	
49	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
50	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
51	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
52	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
53	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

82: RGB RGB SS (continued)

Ch	Function	Default	DMX values
54	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
55	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
56	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
57	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
58	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
59	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
60	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
61	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
62	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

82: RGB RGB SS (continued)

Ch	Function	Default	DMX values
63	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
64	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

138: D16 CCT GM C RGB S

65 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	
5	Color Mix Mode	0	
6	Red	255	
7	Green	211	
8	Blue	150	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	

138: D16 CCT GM C RGB S (continued)

Ch	Function	Default	DMX values
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

180: D CCT GM C CRO XY S

65 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	C TC	117	
3	Green Magenta	0	
4	Color Mix Mode	0	
5	C IEX	106	

180: D CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
6	C IEX Fine	96	Fine byte of C IEX
7	C IEY	111	
8	C IEY Fine	46	Fine byte of C IEY
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	

180: D CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

75: RGBW RGBW S

65 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	

75: RGBW RGBW S (continued)

Ch	Function	Default	DMX values
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

77: DIM RGB DIM RGB S

65 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Red	255	
3	Green	211	
4	Blue	150	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	

77: DIM RGB DIM RGB S (continued)

Ch	Function	Default	DMX values
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

181: D16 CCT GM C CRO XY S

73 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	
5	Color Mix Mode	0	
6	C IEX	106	
7	C IEX Fine	96	Fine byte of C IEX
8	C IEY	111	
9	C IEY Fine	46	Fine byte of C IEY
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	

181: D16 CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	

181: D16 CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

130: D CCT GM HUE SAT S

81 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	C TC	117	
3	Green Magenta	0	
4	H SBHue	0	
5	H SBSaturation	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	

130: D CCT GM HUE SAT S (continued)

Ch	Function	Default	DMX values
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	

130: D CCT GM HUE SAT S (continued)

Ch	Function	Default	DMX values
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

76: RGBAW RGBAW S

81 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	

76: RGBAW RGBAW S (continued)

Ch	Function	Default	DMX values
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	

76: RGBAW RGBAW S (continued)

Ch	Function	Default	DMX values
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

78: DIM RGBW DIM RGBW S

81 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	255	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	

78: DIM RGBW DIM RGBW S (continued)

Ch	Function	Default	DMX values
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	

78: DIM RGBW DIM RGBW S (continued)

Ch	Function	Default	DMX values
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

132: D16 X Y S

97 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	C IEX	106	
4	C IEX Fine	96	Fine byte of C IEX
5	C IEY	111	
6	C IEY Fine	46	Fine byte of C IEY
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	

132: D16 X Y S (continued)

Ch	Function	Default	DMX values
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	

132: D16 X Y S (continued)

Ch	Function	Default	DMX values
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

50: RGB*RGB S

97 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	Reserved 4	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	

50: RGB*RGB S (continued)

Ch	Function	Default	DMX values
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	

50: RGB*RGB S (continued)

Ch	Function	Default	DMX values
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

79 DIM RGBAW RGBAW S

97 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Red	255	
3	Green	255	
4	Blue	255	
5	Color Add RY	255	
6	White	255	

79 DIM RGBAW RGBAW S (continued)

Ch	Function	Default	DMX values
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	

79 DIM RGBAW RGBAW S (continued)

Ch	Function	Default	DMX values
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	

79 DIM RGBAW RGBAW S (continued)

Ch	Function	Default	DMX values
97	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

80: RGB CCT DIM IND S

97 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	C TC	175	
5	Dimmer	0	

80: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
6	Color Wheel	254	0–3 No effect (wheel slot 1) 4–6 Medium Bastard Amber (wheel slot 4) 7–7 Pale Yellow (wheel slot 5) 8–8 Dark Salmon (wheel slot 6) 9–9 Pale Amber Gold (wheel slot 7) 10–12 Medium Yellow (wheel slot 8) 13–14 Straw Tint (wheel slot 9) 15–16 Deep Straw (wheel slot 10) 17–18 Surprise Peach (wheel slot 11) 19–19 Fire (wheel slot 12) 20–20 Medium Amber (wheel slot 13) 21–21 Gold Amber (wheel slot 14) 22–23 Dark Amber (wheel slot 15) 24–24 Scarlet (wheel slot 16) 25–25 Sunset Red (wheel slot 17) 26–26 Bright Red (wheel slot 18) 27–28 Medium Red (wheel slot 19) 29–34 Plasa Red (wheel slot 20) 35–35 Light Pink (wheel slot 21) 36–45 Medium Pink (wheel slot 22) 46–47 Dark Magenta (wheel slot 23) 48–48 Rose Purple (wheel slot 24) 49–51 Medium Purple (wheel slot 25) 52–52 Light Lavender (wheel slot 26) 53–57 Paler Lavender (wheel slot 27) 58–60 Lavender (wheel slot 28) 61–62 Mist Blue (wheel slot 29) 63–67 Pale Blue (wheel slot 30) 68–70 Sky Blue (wheel slot 31) 71–74 Tokyo Blue (wheel slot 32) 75–78 Evening Blue (wheel slot 33) 79–84 Just Blue (wheel slot 34) 85–87 Deeper Blue (wheel slot 35) 88–88 Lime Green (wheel slot 36) 89–89 Moss Green (wheel slot 37) 90–99 Dark Yellow Green (wheel slot 38) 100–100 Spring Yellow (wheel slot 39) 101–101 Yellow (wheel slot 40) 102–102 Light Amber (wheel slot 41) 103–103 Straw (wheel slot 42) 104–104 Deep Amber (wheel slot 43) 105–105 Orange (wheel slot 44) 106–106 Primary Red (wheel slot 45) 107–107 Light Rose (wheel slot 46) 108–108 English Rose (wheel slot 47) 109–109 Light Salmon (wheel slot 48) 110–110 Middle Rose (wheel slot 49) 111–112 Dark Pink (wheel slot 50) 113–114 Magenta (wheel slot 51) 115–115 Peacock Blue (wheel slot 52) 116–116 Medium Blue-Green (wheel slot 53) 117–117 Steel Blue (wheel slot 54) 118–131 Light Blue (wheel slot 55) 132–133 Medium Blue (wheel slot 56) 134–134 Golden Amber (wheel slot 57) 135–135 Deep Golden Amber (wheel slot 58) 136–136 Pale Lavender (wheel slot 59) 137–137 Special Lavender (wheel slot 60) 138–138 Pale Green (wheel slot 61) 139–139 Primary Green (wheel slot 62) 140–140 Summer Blue (wheel slot 63) 141–141 Bright Blue (wheel slot 64) 142–142 Pale Violet (wheel slot 65) 143–143 Pale Navy Blue (wheel slot 66)

80: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	

80: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	

80: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
97	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

129: D CCT GM CRO RGB S

113 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	C TC	117	
3	Green Magenta	0	
4	Color Mix Mode	0	
5	Red	255	
6	Green	211	
7	Blue	150	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	

129: D CCT GM CRO RGB S (continued)

Ch	Function	Default	DMX values
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	

129: D CCT GM CRO RGB S (continued)

Ch	Function	Default	DMX values
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

131: D16 CCT GM H SAT S

113 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	
5	H SBHue	0	
6	H SBHue Fine	0	Fine byte of H SBHue
7	H SBSaturation	0	

131: D16 CCT GM H SAT S (continued)

Ch	Function	Default	DMX values
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	

131: D16 CCT GM H SAT S (continued)

Ch	Function	Default	DMX values
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	

131: D16 CCT GM H SAT S (continued)

Ch	Function	Default	DMX values
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

58: RGB RGB SS

128 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	Red	255	
5	Green	211	
6	Blue	150	
7	Red	255	
8	Green	211	
9	Blue	150	
10	Red	255	
11	Green	211	
12	Blue	150	
13	Red	255	
14	Green	211	
15	Blue	150	
16	Red	255	
17	Green	211	
18	Blue	150	
19	Red	255	
20	Green	211	
21	Blue	150	
22	Red	255	

58: RGB RGB SS (continued)

Ch	Function	Default	DMX values
23	Green	211	
24	Blue	150	
25	Red	255	
26	Green	211	
27	Blue	150	
28	Red	255	
29	Green	211	
30	Blue	150	
31	Red	255	
32	Green	211	
33	Blue	150	
34	Red	255	
35	Green	211	
36	Blue	150	
37	Red	255	
38	Green	211	
39	Blue	150	
40	Red	255	
41	Green	211	
42	Blue	150	
43	Red	255	
44	Green	211	
45	Blue	150	
46	Red	255	
47	Green	211	
48	Blue	150	
49	Red	255	
50	Green	211	
51	Blue	150	
52	Red	255	
53	Green	211	
54	Blue	150	
55	Red	255	
56	Green	211	
57	Blue	150	
58	Red	255	
59	Green	211	
60	Blue	150	
61	Red	255	
62	Green	211	
63	Blue	150	
64	Red	255	
65	Green	211	
66	Blue	150	
67	Red	255	

58: RGB RGB SS (continued)

Ch	Function	Default	DMX values
68	Green	211	
69	Blue	150	
70	Red	255	
71	Green	211	
72	Blue	150	
73	Red	255	
74	Green	211	
75	Blue	150	
76	Red	255	
77	Green	211	
78	Blue	150	
79	Red	255	
80	Green	211	
81	Blue	150	
82	Red	255	
83	Green	211	
84	Blue	150	
85	Red	255	
86	Green	211	
87	Blue	150	
88	Red	255	
89	Green	211	
90	Blue	150	
91	Red	255	
92	Green	211	
93	Blue	150	
94	Red	255	
95	Green	211	
96	Blue	150	
97	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
98	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
99	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

58: RGB RGB SS (continued)

Ch	Function	Default	DMX values
100	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
101	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
102	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
103	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
104	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
105	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
106	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
107	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
108	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

58: RGB RGB SS (continued)

Ch	Function	Default	DMX values
109	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
110	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
111	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
112	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
113	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
114	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
115	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
116	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
117	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

58: RGB RGB SS (continued)

Ch	Function	Default	DMX values
118	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
119	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
120	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
121	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
122	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
123	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
124	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
125	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
126	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

58: RGB RGB SS (continued)

Ch	Function	Default	DMX values
127	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz
128	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

142: D16 CCT GM C RGB S

129 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	
5	Color Mix Mode	0	
6	Red	255	
7	Green	211	
8	Blue	150	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	

142: D16 CCT GM C RGB S (continued)

Ch	Function	Default	DMX values
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	

142: D16 CCT GM C RGB S (continued)

Ch	Function	Default	DMX values
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	
122	Reserved 122	0	

142: D16 CCT GM C RGB S (continued)

Ch	Function	Default	DMX values
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

186: D CCT GM C CRO XY S

129 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	C TC	117	
3	Green Magenta	0	
4	Color Mix Mode	0	
5	C IEX	106	
6	C IEX Fine	96	Fine byte of C IEX
7	C IEY	111	
8	C IEY Fine	46	Fine byte of C IEY
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	

186: D CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	

186: D CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	

186: D CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

51: RGBW RGBW S

129 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	

51: RGBW RGBW S (continued)

Ch	Function	Default	DMX values
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	

51: RGBW RGBW S (continued)

Ch	Function	Default	DMX values
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	

51: RGBW RGBW S (continued)

Ch	Function	Default	DMX values
121	Reserved 121	0	
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

53: DIM RGB DIM RGB S

129 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Red	255	
3	Green	211	
4	Blue	150	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	

53: DIM RGB DIM RGB S (continued)

Ch	Function	Default	DMX values
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	

53: DIM RGB DIM RGB S (continued)

Ch	Function	Default	DMX values
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	
119	Reserved 119	0	

53: DIM RGB DIM RGB S (continued)

Ch	Function	Default	DMX values
120	Reserved 120	0	
121	Reserved 121	0	
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

187: D16 CCT GM C CRO XY S

145 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	
5	Color Mix Mode	0	
6	C IEX	106	
7	C IEX Fine	96	Fine byte of C IEX
8	C IEY	111	
9	C IEY Fine	46	Fine byte of C IEY
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	

187: D16 CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	

187: D16 CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	

187: D16 CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Reserved 129	0	
130	Reserved 130	0	
131	Reserved 131	0	
132	Reserved 132	0	
133	Reserved 133	0	
134	Reserved 134	0	
135	Reserved 135	0	
136	Reserved 136	0	
137	Reserved 137	0	
138	Reserved 138	0	
139	Reserved 139	0	
140	Reserved 140	0	
141	Reserved 141	0	
142	Reserved 142	0	
143	Reserved 143	0	
144	Reserved 144	0	
145	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

117: D CCT GM HUE SAT S

161 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	C TC	117	
3	Green Magenta	0	
4	H SBHue	0	
5	H SBSaturation	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	

117: D CCT GM HUE SAT S (continued)

Ch	Function	Default	DMX values
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	

117: D CCT GM HUE SAT S (continued)

Ch	Function	Default	DMX values
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	

117: D CCT GM HUE SAT S (continued)

Ch	Function	Default	DMX values
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Reserved 129	0	
130	Reserved 130	0	
131	Reserved 131	0	
132	Reserved 132	0	
133	Reserved 133	0	
134	Reserved 134	0	
135	Reserved 135	0	
136	Reserved 136	0	
137	Reserved 137	0	
138	Reserved 138	0	
139	Reserved 139	0	
140	Reserved 140	0	
141	Reserved 141	0	
142	Reserved 142	0	
143	Reserved 143	0	
144	Reserved 144	0	
145	Reserved 145	0	
146	Reserved 146	0	

117: D CCT GM HUE SAT S (continued)

Ch	Function	Default	DMX values
147	Reserved 147	0	
148	Reserved 148	0	
149	Reserved 149	0	
150	Reserved 150	0	
151	Reserved 151	0	
152	Reserved 152	0	
153	Reserved 153	0	
154	Reserved 154	0	
155	Reserved 155	0	
156	Reserved 156	0	
157	Reserved 157	0	
158	Reserved 158	0	
159	Reserved 159	0	
160	Reserved 160	0	
161	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

52: RGBAW RGBAW S

161 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	

52: RGBAW RGBAW S (continued)

Ch	Function	Default	DMX values
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	

52: RGBAW RGBAW S (continued)

Ch	Function	Default	DMX values
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	

52: RGBAW RGBAW S (continued)

Ch	Function	Default	DMX values
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Reserved 129	0	
130	Reserved 130	0	
131	Reserved 131	0	
132	Reserved 132	0	
133	Reserved 133	0	
134	Reserved 134	0	
135	Reserved 135	0	
136	Reserved 136	0	
137	Reserved 137	0	
138	Reserved 138	0	
139	Reserved 139	0	
140	Reserved 140	0	
141	Reserved 141	0	
142	Reserved 142	0	
143	Reserved 143	0	
144	Reserved 144	0	
145	Reserved 145	0	
146	Reserved 146	0	
147	Reserved 147	0	
148	Reserved 148	0	
149	Reserved 149	0	
150	Reserved 150	0	
151	Reserved 151	0	
152	Reserved 152	0	
153	Reserved 153	0	
154	Reserved 154	0	
155	Reserved 155	0	
156	Reserved 156	0	
157	Reserved 157	0	
158	Reserved 158	0	

52: RGBAW RGBAW S (continued)

Ch	Function	Default	DMX values
159	Reserved 159	0	
160	Reserved 160	0	
161	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

54: DIM RGBW DIM RGBW S

161 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	255	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	

54: DIM RGBW DIM RGBW S (continued)

Ch	Function	Default	DMX values
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	

54: DIM RGBW DIM RGBW S (continued)

Ch	Function	Default	DMX values
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	

54: DIM RGBW DIM RGBW S (continued)

Ch	Function	Default	DMX values
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Reserved 129	0	
130	Reserved 130	0	
131	Reserved 131	0	
132	Reserved 132	0	
133	Reserved 133	0	
134	Reserved 134	0	
135	Reserved 135	0	
136	Reserved 136	0	
137	Reserved 137	0	
138	Reserved 138	0	
139	Reserved 139	0	
140	Reserved 140	0	
141	Reserved 141	0	
142	Reserved 142	0	
143	Reserved 143	0	
144	Reserved 144	0	
145	Reserved 145	0	
146	Reserved 146	0	
147	Reserved 147	0	
148	Reserved 148	0	
149	Reserved 149	0	
150	Reserved 150	0	
151	Reserved 151	0	
152	Reserved 152	0	
153	Reserved 153	0	
154	Reserved 154	0	
155	Reserved 155	0	
156	Reserved 156	0	
157	Reserved 157	0	
158	Reserved 158	0	
159	Reserved 159	0	
160	Reserved 160	0	
161	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

119: D16 X Y S

193 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer

119: D16 X Y S (continued)

Ch	Function	Default	DMX values
3	C IEX	106	
4	C IEX Fine	96	Fine byte of C IEX
5	C IEY	111	
6	C IEY Fine	46	Fine byte of C IEY
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	

119: D16 X Y S (continued)

Ch	Function	Default	DMX values
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	

119: D16 X Y S (continued)

Ch	Function	Default	DMX values
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Reserved 129	0	
130	Reserved 130	0	
131	Reserved 131	0	
132	Reserved 132	0	
133	Reserved 133	0	
134	Reserved 134	0	
135	Reserved 135	0	
136	Reserved 136	0	
137	Reserved 137	0	

119: D16 X Y S (continued)

Ch	Function	Default	DMX values
138	Reserved 138	0	
139	Reserved 139	0	
140	Reserved 140	0	
141	Reserved 141	0	
142	Reserved 142	0	
143	Reserved 143	0	
144	Reserved 144	0	
145	Reserved 145	0	
146	Reserved 146	0	
147	Reserved 147	0	
148	Reserved 148	0	
149	Reserved 149	0	
150	Reserved 150	0	
151	Reserved 151	0	
152	Reserved 152	0	
153	Reserved 153	0	
154	Reserved 154	0	
155	Reserved 155	0	
156	Reserved 156	0	
157	Reserved 157	0	
158	Reserved 158	0	
159	Reserved 159	0	
160	Reserved 160	0	
161	Reserved 161	0	
162	Reserved 162	0	
163	Reserved 163	0	
164	Reserved 164	0	
165	Reserved 165	0	
166	Reserved 166	0	
167	Reserved 167	0	
168	Reserved 168	0	
169	Reserved 169	0	
170	Reserved 170	0	
171	Reserved 171	0	
172	Reserved 172	0	
173	Reserved 173	0	
174	Reserved 174	0	
175	Reserved 175	0	
176	Reserved 176	0	
177	Reserved 177	0	
178	Reserved 178	0	
179	Reserved 179	0	
180	Reserved 180	0	
181	Reserved 181	0	
182	Reserved 182	0	

119: D16 X Y S (continued)

Ch	Function	Default	DMX values
183	Reserved 183	0	
184	Reserved 184	0	
185	Reserved 185	0	
186	Reserved 186	0	
187	Reserved 187	0	
188	Reserved 188	0	
189	Reserved 189	0	
190	Reserved 190	0	
191	Reserved 191	0	
192	Reserved 192	0	
193	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

55 DIM RGBAW RGBAW S

193 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Red	255	
3	Green	255	
4	Blue	255	
5	Color Add RY	255	
6	White	255	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	

55 DIM RGBAW RGBAW S (continued)

Ch	Function	Default	DMX values
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	

55 DIM RGBAW RGBAW S (continued)

Ch	Function	Default	DMX values
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	

55 DIM RGBAW RGBAW S (continued)

Ch	Function	Default	DMX values
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Reserved 129	0	
130	Reserved 130	0	
131	Reserved 131	0	
132	Reserved 132	0	
133	Reserved 133	0	
134	Reserved 134	0	
135	Reserved 135	0	
136	Reserved 136	0	
137	Reserved 137	0	
138	Reserved 138	0	
139	Reserved 139	0	
140	Reserved 140	0	
141	Reserved 141	0	
142	Reserved 142	0	
143	Reserved 143	0	
144	Reserved 144	0	
145	Reserved 145	0	
146	Reserved 146	0	
147	Reserved 147	0	
148	Reserved 148	0	
149	Reserved 149	0	
150	Reserved 150	0	
151	Reserved 151	0	
152	Reserved 152	0	
153	Reserved 153	0	
154	Reserved 154	0	
155	Reserved 155	0	
156	Reserved 156	0	
157	Reserved 157	0	
158	Reserved 158	0	
159	Reserved 159	0	
160	Reserved 160	0	
161	Reserved 161	0	
162	Reserved 162	0	

55 DIM RGBAW RGBAW S (continued)

Ch	Function	Default	DMX values
163	Reserved 163	0	
164	Reserved 164	0	
165	Reserved 165	0	
166	Reserved 166	0	
167	Reserved 167	0	
168	Reserved 168	0	
169	Reserved 169	0	
170	Reserved 170	0	
171	Reserved 171	0	
172	Reserved 172	0	
173	Reserved 173	0	
174	Reserved 174	0	
175	Reserved 175	0	
176	Reserved 176	0	
177	Reserved 177	0	
178	Reserved 178	0	
179	Reserved 179	0	
180	Reserved 180	0	
181	Reserved 181	0	
182	Reserved 182	0	
183	Reserved 183	0	
184	Reserved 184	0	
185	Reserved 185	0	
186	Reserved 186	0	
187	Reserved 187	0	
188	Reserved 188	0	
189	Reserved 189	0	
190	Reserved 190	0	
191	Reserved 191	0	
192	Reserved 192	0	
193	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

56: RGB CCT DIM IND S

193 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	211	
3	Blue	150	
4	C TC	175	
5	Dimmer	0	

56: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
6	Color Wheel	254	0–3 No effect (wheel slot 1) 4–6 Medium Bastard Amber (wheel slot 4) 7–7 Pale Yellow (wheel slot 5) 8–8 Dark Salmon (wheel slot 6) 9–9 Pale Amber Gold (wheel slot 7) 10–12 Medium Yellow (wheel slot 8) 13–14 Straw Tint (wheel slot 9) 15–16 Deep Straw (wheel slot 10) 17–18 Surprise Peach (wheel slot 11) 19–19 Fire (wheel slot 12) 20–20 Medium Amber (wheel slot 13) 21–21 Gold Amber (wheel slot 14) 22–23 Dark Amber (wheel slot 15) 24–24 Scarlet (wheel slot 16) 25–25 Sunset Red (wheel slot 17) 26–26 Bright Red (wheel slot 18) 27–28 Medium Red (wheel slot 19) 29–34 Plasa Red (wheel slot 20) 35–35 Light Pink (wheel slot 21) 36–45 Medium Pink (wheel slot 22) 46–47 Dark Magenta (wheel slot 23) 48–48 Rose Purple (wheel slot 24) 49–51 Medium Purple (wheel slot 25) 52–52 Light Lavender (wheel slot 26) 53–57 Paler Lavender (wheel slot 27) 58–60 Lavender (wheel slot 28) 61–62 Mist Blue (wheel slot 29) 63–67 Pale Blue (wheel slot 30) 68–70 Sky Blue (wheel slot 31) 71–74 Tokyo Blue (wheel slot 32) 75–78 Evening Blue (wheel slot 33) 79–84 Just Blue (wheel slot 34) 85–87 Deeper Blue (wheel slot 35) 88–88 Lime Green (wheel slot 36) 89–89 Moss Green (wheel slot 37) 90–99 Dark Yellow Green (wheel slot 38) 100–100 Spring Yellow (wheel slot 39) 101–101 Yellow (wheel slot 40) 102–102 Light Amber (wheel slot 41) 103–103 Straw (wheel slot 42) 104–104 Deep Amber (wheel slot 43) 105–105 Orange (wheel slot 44) 106–106 Primary Red (wheel slot 45) 107–107 Light Rose (wheel slot 46) 108–108 English Rose (wheel slot 47) 109–109 Light Salmon (wheel slot 48) 110–110 Middle Rose (wheel slot 49) 111–112 Dark Pink (wheel slot 50) 113–114 Magenta (wheel slot 51) 115–115 Peacock Blue (wheel slot 52) 116–116 Medium Blue-Green (wheel slot 53) 117–117 Steel Blue (wheel slot 54) 118–131 Light Blue (wheel slot 55) 132–133 Medium Blue (wheel slot 56) 134–134 Golden Amber (wheel slot 57) 135–135 Deep Golden Amber (wheel slot 58) 136–136 Pale Lavender (wheel slot 59) 137–137 Special Lavender (wheel slot 60) 138–138 Pale Green (wheel slot 61) 139–139 Primary Green (wheel slot 62) 140–140 Summer Blue (wheel slot 63) 141–141 Bright Blue (wheel slot 64) 142–142 Pale Violet (wheel slot 65) 143–143 Pale Navy Blue (wheel slot 66)

56: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	

56: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	

56: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Reserved 129	0	
130	Reserved 130	0	
131	Reserved 131	0	
132	Reserved 132	0	
133	Reserved 133	0	
134	Reserved 134	0	
135	Reserved 135	0	
136	Reserved 136	0	
137	Reserved 137	0	
138	Reserved 138	0	
139	Reserved 139	0	
140	Reserved 140	0	
141	Reserved 141	0	

56: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
142	Reserved 142	0	
143	Reserved 143	0	
144	Reserved 144	0	
145	Reserved 145	0	
146	Reserved 146	0	
147	Reserved 147	0	
148	Reserved 148	0	
149	Reserved 149	0	
150	Reserved 150	0	
151	Reserved 151	0	
152	Reserved 152	0	
153	Reserved 153	0	
154	Reserved 154	0	
155	Reserved 155	0	
156	Reserved 156	0	
157	Reserved 157	0	
158	Reserved 158	0	
159	Reserved 159	0	
160	Reserved 160	0	
161	Reserved 161	0	
162	Reserved 162	0	
163	Reserved 163	0	
164	Reserved 164	0	
165	Reserved 165	0	
166	Reserved 166	0	
167	Reserved 167	0	
168	Reserved 168	0	
169	Reserved 169	0	
170	Reserved 170	0	
171	Reserved 171	0	
172	Reserved 172	0	
173	Reserved 173	0	
174	Reserved 174	0	
175	Reserved 175	0	
176	Reserved 176	0	
177	Reserved 177	0	
178	Reserved 178	0	
179	Reserved 179	0	
180	Reserved 180	0	
181	Reserved 181	0	
182	Reserved 182	0	
183	Reserved 183	0	
184	Reserved 184	0	
185	Reserved 185	0	
186	Reserved 186	0	

56: RGB CCT DIM IND S (continued)

Ch	Function	Default	DMX values
187	Reserved 187	0	
188	Reserved 188	0	
189	Reserved 189	0	
190	Reserved 190	0	
191	Reserved 191	0	
192	Reserved 192	0	
193	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

116: D CCT GM CRO RGB S

255 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	C TC	117	
3	Green Magenta	0	
4	Color Mix Mode	0	
5	Red	255	
6	Green	211	
7	Blue	150	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	

116: D CCT GM CRO RGB S (continued)

Ch	Function	Default	DMX values
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	

116: D CCT GM CRO RGB S (continued)

Ch	Function	Default	DMX values
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	

116: D CCT GM CRO RGB S (continued)

Ch	Function	Default	DMX values
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Reserved 129	0	
130	Reserved 130	0	
131	Reserved 131	0	
132	Reserved 132	0	
133	Reserved 133	0	
134	Reserved 134	0	
135	Reserved 135	0	
136	Reserved 136	0	
137	Reserved 137	0	
138	Reserved 138	0	
139	Reserved 139	0	
140	Reserved 140	0	
141	Reserved 141	0	
142	Reserved 142	0	
143	Reserved 143	0	
144	Reserved 144	0	
145	Reserved 145	0	
146	Reserved 146	0	
147	Reserved 147	0	
148	Reserved 148	0	
149	Reserved 149	0	
150	Reserved 150	0	
151	Reserved 151	0	
152	Reserved 152	0	
153	Reserved 153	0	
154	Reserved 154	0	
155	Reserved 155	0	
156	Reserved 156	0	
157	Reserved 157	0	
158	Reserved 158	0	
159	Reserved 159	0	
160	Reserved 160	0	
161	Reserved 161	0	
162	Reserved 162	0	
163	Reserved 163	0	
164	Reserved 164	0	
165	Reserved 165	0	
166	Reserved 166	0	

116: D CCT GM CRO RGB S (continued)

Ch	Function	Default	DMX values
167	Reserved 167	0	
168	Reserved 168	0	
169	Reserved 169	0	
170	Reserved 170	0	
171	Reserved 171	0	
172	Reserved 172	0	
173	Reserved 173	0	
174	Reserved 174	0	
175	Reserved 175	0	
176	Reserved 176	0	
177	Reserved 177	0	
178	Reserved 178	0	
179	Reserved 179	0	
180	Reserved 180	0	
181	Reserved 181	0	
182	Reserved 182	0	
183	Reserved 183	0	
184	Reserved 184	0	
185	Reserved 185	0	
186	Reserved 186	0	
187	Reserved 187	0	
188	Reserved 188	0	
189	Reserved 189	0	
190	Reserved 190	0	
191	Reserved 191	0	
192	Reserved 192	0	
193	Reserved 193	0	
194	Reserved 194	0	
195	Reserved 195	0	
196	Reserved 196	0	
197	Reserved 197	0	
198	Reserved 198	0	
199	Reserved 199	0	
200	Reserved 200	0	
201	Reserved 201	0	
202	Reserved 202	0	
203	Reserved 203	0	
204	Reserved 204	0	
205	Reserved 205	0	
206	Reserved 206	0	
207	Reserved 207	0	
208	Reserved 208	0	
209	Reserved 209	0	
210	Reserved 210	0	
211	Reserved 211	0	

116: D CCT GM CRO RGB S (continued)

Ch	Function	Default	DMX values
212	Reserved 212	0	
213	Reserved 213	0	
214	Reserved 214	0	
215	Reserved 215	0	
216	Reserved 216	0	
217	Reserved 217	0	
218	Reserved 218	0	
219	Reserved 219	0	
220	Reserved 220	0	
221	Reserved 221	0	
222	Reserved 222	0	
223	Reserved 223	0	
224	Reserved 224	0	
225	Reserved 225	0	
226	Reserved 226	0	
227	Reserved 227	0	
228	Reserved 228	0	
229	Reserved 229	0	
230	Reserved 230	0	
231	Reserved 231	0	
232	Reserved 232	0	
233	Reserved 233	0	
234	Reserved 234	0	
235	Reserved 235	0	
236	Reserved 236	0	
237	Reserved 237	0	
238	Reserved 238	0	
239	Reserved 239	0	
240	Reserved 240	0	
241	Reserved 241	0	
242	Reserved 242	0	
243	Reserved 243	0	
244	Reserved 244	0	
245	Reserved 245	0	
246	Reserved 246	0	
247	Reserved 247	0	
248	Reserved 248	0	
249	Reserved 249	0	
250	Reserved 250	0	
251	Reserved 251	0	
252	Reserved 252	0	
253	Reserved 253	0	
254	Reserved 254	0	

116: D CCT GM CRO RGB S (continued)

Ch	Function	Default	DMX values
255	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

118: D16 CCT GM H SAT S

255 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	
5	H SBHue	0	
6	H SBHue Fine	0	Fine byte of H SBHue
7	H SBSaturation	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	

118: D16 CCT GM H SAT S (continued)

Ch	Function	Default	DMX values
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	

118: D16 CCT GM H SAT S (continued)

Ch	Function	Default	DMX values
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	

118: D16 CCT GM H SAT S (continued)

Ch	Function	Default	DMX values
128	Reserved 128	0	
129	Reserved 129	0	
130	Reserved 130	0	
131	Reserved 131	0	
132	Reserved 132	0	
133	Reserved 133	0	
134	Reserved 134	0	
135	Reserved 135	0	
136	Reserved 136	0	
137	Reserved 137	0	
138	Reserved 138	0	
139	Reserved 139	0	
140	Reserved 140	0	
141	Reserved 141	0	
142	Reserved 142	0	
143	Reserved 143	0	
144	Reserved 144	0	
145	Reserved 145	0	
146	Reserved 146	0	
147	Reserved 147	0	
148	Reserved 148	0	
149	Reserved 149	0	
150	Reserved 150	0	
151	Reserved 151	0	
152	Reserved 152	0	
153	Reserved 153	0	
154	Reserved 154	0	
155	Reserved 155	0	
156	Reserved 156	0	
157	Reserved 157	0	
158	Reserved 158	0	
159	Reserved 159	0	
160	Reserved 160	0	
161	Reserved 161	0	
162	Reserved 162	0	
163	Reserved 163	0	
164	Reserved 164	0	
165	Reserved 165	0	
166	Reserved 166	0	
167	Reserved 167	0	
168	Reserved 168	0	
169	Reserved 169	0	
170	Reserved 170	0	
171	Reserved 171	0	
172	Reserved 172	0	

118: D16 CCT GM H SAT S (continued)

Ch	Function	Default	DMX values
173	Reserved 173	0	
174	Reserved 174	0	
175	Reserved 175	0	
176	Reserved 176	0	
177	Reserved 177	0	
178	Reserved 178	0	
179	Reserved 179	0	
180	Reserved 180	0	
181	Reserved 181	0	
182	Reserved 182	0	
183	Reserved 183	0	
184	Reserved 184	0	
185	Reserved 185	0	
186	Reserved 186	0	
187	Reserved 187	0	
188	Reserved 188	0	
189	Reserved 189	0	
190	Reserved 190	0	
191	Reserved 191	0	
192	Reserved 192	0	
193	Reserved 193	0	
194	Reserved 194	0	
195	Reserved 195	0	
196	Reserved 196	0	
197	Reserved 197	0	
198	Reserved 198	0	
199	Reserved 199	0	
200	Reserved 200	0	
201	Reserved 201	0	
202	Reserved 202	0	
203	Reserved 203	0	
204	Reserved 204	0	
205	Reserved 205	0	
206	Reserved 206	0	
207	Reserved 207	0	
208	Reserved 208	0	
209	Reserved 209	0	
210	Reserved 210	0	
211	Reserved 211	0	
212	Reserved 212	0	
213	Reserved 213	0	
214	Reserved 214	0	
215	Reserved 215	0	
216	Reserved 216	0	
217	Reserved 217	0	

118: D16 CCT GM H SAT S (continued)

Ch	Function	Default	DMX values
218	Reserved 218	0	
219	Reserved 219	0	
220	Reserved 220	0	
221	Reserved 221	0	
222	Reserved 222	0	
223	Reserved 223	0	
224	Reserved 224	0	
225	Reserved 225	0	
226	Reserved 226	0	
227	Reserved 227	0	
228	Reserved 228	0	
229	Reserved 229	0	
230	Reserved 230	0	
231	Reserved 231	0	
232	Reserved 232	0	
233	Reserved 233	0	
234	Reserved 234	0	
235	Reserved 235	0	
236	Reserved 236	0	
237	Reserved 237	0	
238	Reserved 238	0	
239	Reserved 239	0	
240	Reserved 240	0	
241	Reserved 241	0	
242	Reserved 242	0	
243	Reserved 243	0	
244	Reserved 244	0	
245	Reserved 245	0	
246	Reserved 246	0	
247	Reserved 247	0	
248	Reserved 248	0	
249	Reserved 249	0	
250	Reserved 250	0	
251	Reserved 251	0	
252	Reserved 252	0	
253	Reserved 253	0	
254	Reserved 254	0	
255	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

140: D16 CCT GM C RGB S

257 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	
5	Color Mix Mode	0	
6	Red	255	
7	Green	211	
8	Blue	150	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	

140: D16 CCT GM C RGB S (continued)

Ch	Function	Default	DMX values
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	

140: D16 CCT GM C RGB S (continued)

Ch	Function	Default	DMX values
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Reserved 129	0	
130	Reserved 130	0	
131	Reserved 131	0	
132	Reserved 132	0	
133	Reserved 133	0	
134	Reserved 134	0	
135	Reserved 135	0	

140: D16 CCT GM C RGB S (continued)

Ch	Function	Default	DMX values
136	Reserved 136	0	
137	Reserved 137	0	
138	Reserved 138	0	
139	Reserved 139	0	
140	Reserved 140	0	
141	Reserved 141	0	
142	Reserved 142	0	
143	Reserved 143	0	
144	Reserved 144	0	
145	Reserved 145	0	
146	Reserved 146	0	
147	Reserved 147	0	
148	Reserved 148	0	
149	Reserved 149	0	
150	Reserved 150	0	
151	Reserved 151	0	
152	Reserved 152	0	
153	Reserved 153	0	
154	Reserved 154	0	
155	Reserved 155	0	
156	Reserved 156	0	
157	Reserved 157	0	
158	Reserved 158	0	
159	Reserved 159	0	
160	Reserved 160	0	
161	Reserved 161	0	
162	Reserved 162	0	
163	Reserved 163	0	
164	Reserved 164	0	
165	Reserved 165	0	
166	Reserved 166	0	
167	Reserved 167	0	
168	Reserved 168	0	
169	Reserved 169	0	
170	Reserved 170	0	
171	Reserved 171	0	
172	Reserved 172	0	
173	Reserved 173	0	
174	Reserved 174	0	
175	Reserved 175	0	
176	Reserved 176	0	
177	Reserved 177	0	
178	Reserved 178	0	
179	Reserved 179	0	
180	Reserved 180	0	

140: D16 CCT GM C RGB S (continued)

Ch	Function	Default	DMX values
181	Reserved 181	0	
182	Reserved 182	0	
183	Reserved 183	0	
184	Reserved 184	0	
185	Reserved 185	0	
186	Reserved 186	0	
187	Reserved 187	0	
188	Reserved 188	0	
189	Reserved 189	0	
190	Reserved 190	0	
191	Reserved 191	0	
192	Reserved 192	0	
193	Reserved 193	0	
194	Reserved 194	0	
195	Reserved 195	0	
196	Reserved 196	0	
197	Reserved 197	0	
198	Reserved 198	0	
199	Reserved 199	0	
200	Reserved 200	0	
201	Reserved 201	0	
202	Reserved 202	0	
203	Reserved 203	0	
204	Reserved 204	0	
205	Reserved 205	0	
206	Reserved 206	0	
207	Reserved 207	0	
208	Reserved 208	0	
209	Reserved 209	0	
210	Reserved 210	0	
211	Reserved 211	0	
212	Reserved 212	0	
213	Reserved 213	0	
214	Reserved 214	0	
215	Reserved 215	0	
216	Reserved 216	0	
217	Reserved 217	0	
218	Reserved 218	0	
219	Reserved 219	0	
220	Reserved 220	0	
221	Reserved 221	0	
222	Reserved 222	0	
223	Reserved 223	0	
224	Reserved 224	0	
225	Reserved 225	0	

140: D16 CCT GM C RGB S (continued)

Ch	Function	Default	DMX values
226	Reserved 226	0	
227	Reserved 227	0	
228	Reserved 228	0	
229	Reserved 229	0	
230	Reserved 230	0	
231	Reserved 231	0	
232	Reserved 232	0	
233	Reserved 233	0	
234	Reserved 234	0	
235	Reserved 235	0	
236	Reserved 236	0	
237	Reserved 237	0	
238	Reserved 238	0	
239	Reserved 239	0	
240	Reserved 240	0	
241	Reserved 241	0	
242	Reserved 242	0	
243	Reserved 243	0	
244	Reserved 244	0	
245	Reserved 245	0	
246	Reserved 246	0	
247	Reserved 247	0	
248	Reserved 248	0	
249	Reserved 249	0	
250	Reserved 250	0	
251	Reserved 251	0	
252	Reserved 252	0	
253	Reserved 253	0	
254	Reserved 254	0	
255	Reserved 255	0	
256	Reserved 256	0	
257	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

192: D CCT GM C CRO XY S

257 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	C TC	117	
3	Green Magenta	0	
4	Color Mix Mode	0	
5	C IEX	106	
6	C IEX Fine	96	Fine byte of C IEX

192: D CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
7	C IEY	111	
8	C IEY Fine	46	Fine byte of C IEY
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	

192: D CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	

192: D CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Reserved 129	0	
130	Reserved 130	0	
131	Reserved 131	0	
132	Reserved 132	0	
133	Reserved 133	0	
134	Reserved 134	0	
135	Reserved 135	0	
136	Reserved 136	0	
137	Reserved 137	0	
138	Reserved 138	0	
139	Reserved 139	0	
140	Reserved 140	0	
141	Reserved 141	0	

192: D CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
142	Reserved 142	0	
143	Reserved 143	0	
144	Reserved 144	0	
145	Reserved 145	0	
146	Reserved 146	0	
147	Reserved 147	0	
148	Reserved 148	0	
149	Reserved 149	0	
150	Reserved 150	0	
151	Reserved 151	0	
152	Reserved 152	0	
153	Reserved 153	0	
154	Reserved 154	0	
155	Reserved 155	0	
156	Reserved 156	0	
157	Reserved 157	0	
158	Reserved 158	0	
159	Reserved 159	0	
160	Reserved 160	0	
161	Reserved 161	0	
162	Reserved 162	0	
163	Reserved 163	0	
164	Reserved 164	0	
165	Reserved 165	0	
166	Reserved 166	0	
167	Reserved 167	0	
168	Reserved 168	0	
169	Reserved 169	0	
170	Reserved 170	0	
171	Reserved 171	0	
172	Reserved 172	0	
173	Reserved 173	0	
174	Reserved 174	0	
175	Reserved 175	0	
176	Reserved 176	0	
177	Reserved 177	0	
178	Reserved 178	0	
179	Reserved 179	0	
180	Reserved 180	0	
181	Reserved 181	0	
182	Reserved 182	0	
183	Reserved 183	0	
184	Reserved 184	0	
185	Reserved 185	0	
186	Reserved 186	0	

192: D CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
187	Reserved 187	0	
188	Reserved 188	0	
189	Reserved 189	0	
190	Reserved 190	0	
191	Reserved 191	0	
192	Reserved 192	0	
193	Reserved 193	0	
194	Reserved 194	0	
195	Reserved 195	0	
196	Reserved 196	0	
197	Reserved 197	0	
198	Reserved 198	0	
199	Reserved 199	0	
200	Reserved 200	0	
201	Reserved 201	0	
202	Reserved 202	0	
203	Reserved 203	0	
204	Reserved 204	0	
205	Reserved 205	0	
206	Reserved 206	0	
207	Reserved 207	0	
208	Reserved 208	0	
209	Reserved 209	0	
210	Reserved 210	0	
211	Reserved 211	0	
212	Reserved 212	0	
213	Reserved 213	0	
214	Reserved 214	0	
215	Reserved 215	0	
216	Reserved 216	0	
217	Reserved 217	0	
218	Reserved 218	0	
219	Reserved 219	0	
220	Reserved 220	0	
221	Reserved 221	0	
222	Reserved 222	0	
223	Reserved 223	0	
224	Reserved 224	0	
225	Reserved 225	0	
226	Reserved 226	0	
227	Reserved 227	0	
228	Reserved 228	0	
229	Reserved 229	0	
230	Reserved 230	0	
231	Reserved 231	0	

192: D CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
232	Reserved 232	0	
233	Reserved 233	0	
234	Reserved 234	0	
235	Reserved 235	0	
236	Reserved 236	0	
237	Reserved 237	0	
238	Reserved 238	0	
239	Reserved 239	0	
240	Reserved 240	0	
241	Reserved 241	0	
242	Reserved 242	0	
243	Reserved 243	0	
244	Reserved 244	0	
245	Reserved 245	0	
246	Reserved 246	0	
247	Reserved 247	0	
248	Reserved 248	0	
249	Reserved 249	0	
250	Reserved 250	0	
251	Reserved 251	0	
252	Reserved 252	0	
253	Reserved 253	0	
254	Reserved 254	0	
255	Reserved 255	0	
256	Reserved 256	0	
257	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz

193: D16 CCT GM C CRO XY S

289 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	117	
4	Green Magenta	0	
5	Color Mix Mode	0	
6	C IEX	106	
7	C IEX Fine	96	Fine byte of C IEX
8	C IEY	111	
9	C IEY Fine	46	Fine byte of C IEY
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	

193: D16 CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	

193: D16 CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	

193: D16 CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Reserved 129	0	
130	Reserved 130	0	
131	Reserved 131	0	
132	Reserved 132	0	
133	Reserved 133	0	
134	Reserved 134	0	
135	Reserved 135	0	
136	Reserved 136	0	
137	Reserved 137	0	
138	Reserved 138	0	
139	Reserved 139	0	
140	Reserved 140	0	
141	Reserved 141	0	
142	Reserved 142	0	
143	Reserved 143	0	
144	Reserved 144	0	
145	Reserved 145	0	
146	Reserved 146	0	
147	Reserved 147	0	

193: D16 CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
148	Reserved 148	0	
149	Reserved 149	0	
150	Reserved 150	0	
151	Reserved 151	0	
152	Reserved 152	0	
153	Reserved 153	0	
154	Reserved 154	0	
155	Reserved 155	0	
156	Reserved 156	0	
157	Reserved 157	0	
158	Reserved 158	0	
159	Reserved 159	0	
160	Reserved 160	0	
161	Reserved 161	0	
162	Reserved 162	0	
163	Reserved 163	0	
164	Reserved 164	0	
165	Reserved 165	0	
166	Reserved 166	0	
167	Reserved 167	0	
168	Reserved 168	0	
169	Reserved 169	0	
170	Reserved 170	0	
171	Reserved 171	0	
172	Reserved 172	0	
173	Reserved 173	0	
174	Reserved 174	0	
175	Reserved 175	0	
176	Reserved 176	0	
177	Reserved 177	0	
178	Reserved 178	0	
179	Reserved 179	0	
180	Reserved 180	0	
181	Reserved 181	0	
182	Reserved 182	0	
183	Reserved 183	0	
184	Reserved 184	0	
185	Reserved 185	0	
186	Reserved 186	0	
187	Reserved 187	0	
188	Reserved 188	0	
189	Reserved 189	0	
190	Reserved 190	0	
191	Reserved 191	0	
192	Reserved 192	0	

193: D16 CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
193	Reserved 193	0	
194	Reserved 194	0	
195	Reserved 195	0	
196	Reserved 196	0	
197	Reserved 197	0	
198	Reserved 198	0	
199	Reserved 199	0	
200	Reserved 200	0	
201	Reserved 201	0	
202	Reserved 202	0	
203	Reserved 203	0	
204	Reserved 204	0	
205	Reserved 205	0	
206	Reserved 206	0	
207	Reserved 207	0	
208	Reserved 208	0	
209	Reserved 209	0	
210	Reserved 210	0	
211	Reserved 211	0	
212	Reserved 212	0	
213	Reserved 213	0	
214	Reserved 214	0	
215	Reserved 215	0	
216	Reserved 216	0	
217	Reserved 217	0	
218	Reserved 218	0	
219	Reserved 219	0	
220	Reserved 220	0	
221	Reserved 221	0	
222	Reserved 222	0	
223	Reserved 223	0	
224	Reserved 224	0	
225	Reserved 225	0	
226	Reserved 226	0	
227	Reserved 227	0	
228	Reserved 228	0	
229	Reserved 229	0	
230	Reserved 230	0	
231	Reserved 231	0	
232	Reserved 232	0	
233	Reserved 233	0	
234	Reserved 234	0	
235	Reserved 235	0	
236	Reserved 236	0	
237	Reserved 237	0	

193: D16 CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
238	Reserved 238	0	
239	Reserved 239	0	
240	Reserved 240	0	
241	Reserved 241	0	
242	Reserved 242	0	
243	Reserved 243	0	
244	Reserved 244	0	
245	Reserved 245	0	
246	Reserved 246	0	
247	Reserved 247	0	
248	Reserved 248	0	
249	Reserved 249	0	
250	Reserved 250	0	
251	Reserved 251	0	
252	Reserved 252	0	
253	Reserved 253	0	
254	Reserved 254	0	
255	Reserved 255	0	
256	Reserved 256	0	
257	Reserved 257	0	
258	Reserved 258	0	
259	Reserved 259	0	
260	Reserved 260	0	
261	Reserved 261	0	
262	Reserved 262	0	
263	Reserved 263	0	
264	Reserved 264	0	
265	Reserved 265	0	
266	Reserved 266	0	
267	Reserved 267	0	
268	Reserved 268	0	
269	Reserved 269	0	
270	Reserved 270	0	
271	Reserved 271	0	
272	Reserved 272	0	
273	Reserved 273	0	
274	Reserved 274	0	
275	Reserved 275	0	
276	Reserved 276	0	
277	Reserved 277	0	
278	Reserved 278	0	
279	Reserved 279	0	
280	Reserved 280	0	
281	Reserved 281	0	
282	Reserved 282	0	

193: D16 CCT GM C CRO XY S (continued)

Ch	Function	Default	DMX values
283	Reserved 283	0	
284	Reserved 284	0	
285	Reserved 285	0	
286	Reserved 286	0	
287	Reserved 287	0	
288	Reserved 288	0	
289	Shutter / Strobe	0	0–3 Off 4–4 Random Fast 5–5 Random Medium 6–6 Random Slow 7–254 Variable Strobe · 2/5 Hz 0.4–24.9 Hz 255–255 Variable Strobe · 25 Hz 25 Hz