
BeamZ

LUCID 2 8

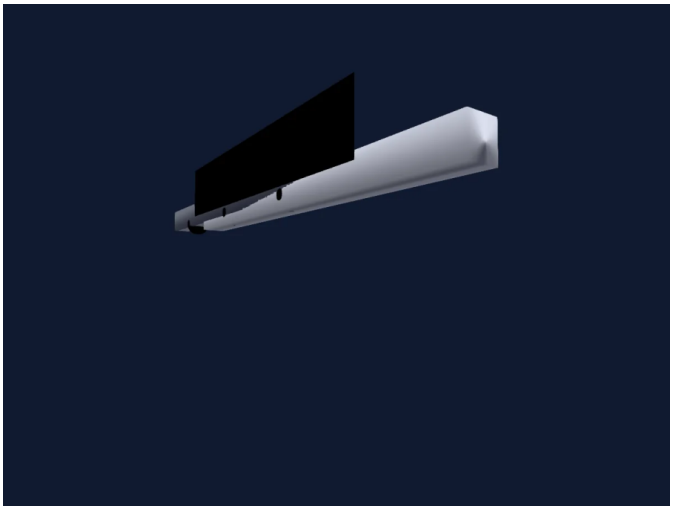

Manufacturer	**BeamZ**
Type	**LED bar**
DMX modes	**7**
DMX footprint	**3, 4, 5, 6, 12, 32, 36 channels**
Beam angle	**25°**
Size (W × H × D)	**1020 × 70 × 65 mm**
GDTF fixture type	**88F22DCF-21D5-4F65-B953-3D…**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Dimmer

Safety-relevant functions

Built-in effect programmes

DMX modes

3 channels	3 ch
4 channels	4 ch
5 channels	5 ch
6 channels	6 ch
12 channels	12 ch
32 channels	32 ch
36 channels	36 ch

3 channels

3 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Color RGBGreen	0	
3	Color RGBBlue	0	

4 channels

4 channels

Ch	Function	Default	DMX values
1	Color RGBRed	0	
2	Color RGBGreen	0	
3	Color RGBBlue	0	
4	White	0	

5 channels

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Strobe Mode Strobe	0	
3	Color Effects1	0	0–9 No function 10–19 Red 20–29 Green 30–39 Blue 40–49 White 50–59 Yellow 60–69 Magenta 70–79 Cyan 80–89 Dark orange 90–99 Green yellow 100–109 Salmon 110–119 Turquoise 120–129 Light green 130–139 Orange 140–149 Straw 150–159 Lavender 160–169 Light blue 170–179 Dark blue 180–189 Pink 190–255 Full on
4	Effect	0	0–9 No function 10–39 Auto program 1 40–69 Auto program 2 70–99 Auto program 3 100–129 Auto program 4 130–159 Sound program 1 160–189 Sound program 2 190–219 Sound program 3 220–255 Sound program 4
5	Color Consistency	0	0–9 No function 10–39 1800K 40–69 2200K 70–99 2700K 100–129 3200K 130–159 4300K 160–189 5600K 190–219 6500K 220–255 8000K

6 channels

6 channels

Ch	Function	Default	DMX values
1	Color RGBRed	0	
2	Color RGBGreen	0	
3	Color RGBBlue	0	
4	White	0	
5	Dimmer	0	
6	Strobe Mode Effect	0	0–0 No function 1–5 Sound controle 6–10 No function 11–255 Stroboscope

12 channels

12 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Strobe Mode Strobe	0	
3	Color Effects1	0	0–9 No function 10–19 Red 20–29 Green 30–39 Blue 40–49 White 50–59 Yellow 60–69 Magenta 70–79 Cyan 80–89 Dark orange 90–99 Green yellow 100–109 Salmon 110–119 Turquoise 120–129 Light green 130–139 Orange 140–149 Straw 150–159 Lavender 160–169 Light blue 170–179 Dark blue 180–189 Pink 190–255 Full on
4	Color Effects2	0	0–9 No function 10–19 Red 20–29 Green 30–39 Blue 40–49 White 50–59 Yellow 60–69 Magenta 70–79 Cyan 80–89 Dark orange 90–99 Green yellow 100–109 Salmon 110–119 Turquoise 120–129 Light green 130–139 Orange 140–149 Straw 150–159 Lavender 160–169 Light blue 170–179 Dark blue 180–189 Pink 190–255 Full on

12 channels (continued)

Ch	Function	Default	DMX values
5	Color Effects3	0	0–9 No function 10–19 Red 20–29 Green 30–39 Blue 40–49 White 50–59 Yellow 60–69 Magenta 70–79 Cyan 80–89 Dark orange 90–99 Green yellow 100–109 Salmon 110–119 Turquoise 120–129 Light green 130–139 Orange 140–149 Straw 150–159 Lavender 160–169 Light blue 170–179 Dark blue 180–189 Pink 190–255 Full on
6	Color Effects4	0	0–9 No function 10–19 Red 20–29 Green 30–39 Blue 40–49 White 50–59 Yellow 60–69 Magenta 70–79 Cyan 80–89 Dark orange 90–99 Green yellow 100–109 Salmon 110–119 Turquoise 120–129 Light green 130–139 Orange 140–149 Straw 150–159 Lavender 160–169 Light blue 170–179 Dark blue 180–189 Pink 190–255 Full on
7	Color Effects5	0	0–9 No function 10–19 Red 20–29 Green 30–39 Blue 40–49 White 50–59 Yellow 60–69 Magenta 70–79 Cyan 80–89 Dark orange 90–99 Green yellow 100–109 Salmon 110–119 Turquoise 120–129 Light green 130–139 Orange 140–149 Straw 150–159 Lavender 160–169 Light blue 170–179 Dark blue 180–189 Pink 190–255 Full on

12 channels (continued)

Ch	Function	Default	DMX values
8	Color Effects6	0	0–9 No function 10–19 Red 20–29 Green 30–39 Blue 40–49 White 50–59 Yellow 60–69 Magenta 70–79 Cyan 80–89 Dark orange 90–99 Green yellow 100–109 Salmon 110–119 Turquoise 120–129 Light green 130–139 Orange 140–149 Straw 150–159 Lavender 160–169 Light blue 170–179 Dark blue 180–189 Pink 190–255 Full on
9	Color Effects7	0	0–9 No function 10–19 Red 20–29 Green 30–39 Blue 40–49 White 50–59 Yellow 60–69 Magenta 70–79 Cyan 80–89 Dark orange 90–99 Green yellow 100–109 Salmon 110–119 Turquoise 120–129 Light green 130–139 Orange 140–149 Straw 150–159 Lavender 160–169 Light blue 170–179 Dark blue 180–189 Pink 190–255 Full on
10	Color Effects8	0	0–9 No function 10–19 Red 20–29 Green 30–39 Blue 40–49 White 50–59 Yellow 60–69 Magenta 70–79 Cyan 80–89 Dark orange 90–99 Green yellow 100–109 Salmon 110–119 Turquoise 120–129 Light green 130–139 Orange 140–149 Straw 150–159 Lavender 160–169 Light blue 170–179 Dark blue 180–189 Pink 190–255 Full on

12 channels (continued)

Ch	Function	Default	DMX values
11	Effect	0	0–9 No function 10–39 Auto program 1 40–69 Auto program 2 70–99 Auto program 3 100–129 Auto program 4 130–159 Sound program 1 160–189 Sound program 2 190–219 Sound program 3 220–255 Sound program 4
12	Color Consistency	0	0–9 No function 10–39 1800K 40–69 2200K 70–99 2700K 100–129 3200K 130–159 4300K 160–189 5600K 190–219 6500K 220–255 8000K

32 channels

32 channels

Ch	Function	Default	DMX values
1	Color RGBRed	0	
2	Color RGBGreen	0	
3	Color RGBBlue	0	
4	White	0	
5	Color RGBRed	0	
6	Color RGBGreen	0	
7	Color RGBBlue	0	
8	White	0	
9	Color RGBRed	0	
10	Color RGBGreen	0	
11	Color RGBBlue	0	
12	White	0	
13	Color RGBRed	0	
14	Color RGBGreen	0	
15	Color RGBBlue	0	
16	White	0	
17	Color RGBRed	0	
18	Color RGBGreen	0	
19	Color RGBBlue	0	
20	White	0	
21	Color RGBRed	0	
22	Color RGBGreen	0	
23	Color RGBBlue	0	
24	White	0	
25	Color RGBRed	0	
26	Color RGBGreen	0	
27	Color RGBBlue	0	
28	White	0	

32 channels (continued)

Ch	Function	Default	DMX values
29	Color RGBRed	0	
30	Color RGBGreen	0	
31	Color RGBBlue	0	
32	White	0	

36 channels

36 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Strobe Mode Strobe	0	
3	Color RGBRed	0	
4	Color RGBGreen	0	
5	Color RGBBlue	0	
6	White	0	
7	Color RGBRed	0	
8	Color RGBGreen	0	
9	Color RGBBlue	0	
10	White	0	
11	Color RGBRed	0	
12	Color RGBGreen	0	
13	Color RGBBlue	0	
14	White	0	
15	Color RGBRed	0	
16	Color RGBGreen	0	
17	Color RGBBlue	0	
18	White	0	
19	Color RGBRed	0	
20	Color RGBGreen	0	
21	Color RGBBlue	0	
22	White	0	
23	Color RGBRed	0	
24	Color RGBGreen	0	
25	Color RGBBlue	0	
26	White	0	
27	Color RGBRed	0	
28	Color RGBGreen	0	
29	Color RGBBlue	0	
30	White	0	
31	Color RGBRed	0	
32	Color RGBGreen	0	
33	Color RGBBlue	0	
34	White	0	

36 channels (continued)

Ch	Function	Default	DMX values
35	Effect	0	0–9 No function 10–39 Auto program 1 40–69 Auto program 2 70–99 Auto program 3 100–129 Auto program 4 130–159 Sound program 1 160–189 Sound program 2 190–219 Sound program 3 220–255 Sound program 4
36	Color Consistency	0	0–9 No function 10–39 1800K 40–69 2200K 70–99 2700K 100–129 3200K 130–159 4300K 160–189 5600K 190–219 6500K 220–255 8000K