
BeamZ

LUCID LED Bar

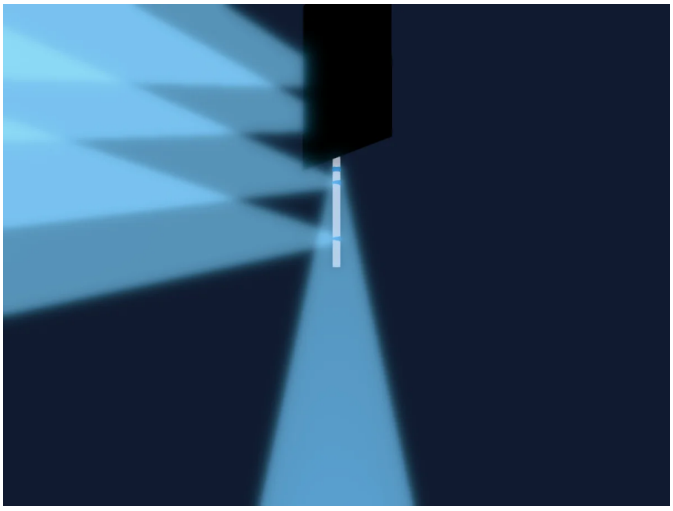

Manufacturer	**BeamZ**
Type	**LED bar**
DMX modes	**7**
DMX footprint	**3, 4, 5, 6, 8, 16, 20 channels**
Beam angle	**25°**
Heads / cells	**4**
Size (W × H × D)	**42 × 1035 × 42 mm**
GDTF fixture type	**E6A1E85C-1FB6-4C64-B703-36…**

Controls

Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Dimmer · Pixel control

Safety-relevant functions

Strobe · Built-in effect programmes

DMX modes

3 Channels	3 ch
4 Channels	4 ch
5 Channels	5 ch
6 Channels	6 ch
8 Channels	8 ch
16 Channels	16 ch
20 Channels	20 ch

3 Channels

3 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	

4 Channels

4 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	White	0	

5 Channels

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	
3	Color Macro1	0	0–9 No function 10–19 Red 20–29 Green 30–39 Blue 40–49 White 50–59 Yellow 60–69 Magenta 70–79 Cyan 80–89 Dark orange 90–99 Green yellow 100–109 Salmon 110–119 Turquoise 120–129 Light green 130–139 Orange 140–149 Straw 150–159 Lavender 160–169 Light blue 170–179 Dark blue 180–189 Pink 190–255 Full on
4	Effect	0	0–9 No function 10–39 Auto program 1 40–69 Auto program 2 70–99 Auto program 3 100–129 Auto program 4 130–159 Sound program 1 160–189 Sound program 2 190–219 Sound program 3 220–255 Sound program 4
5	C TO	0	0–9 No function 10–39 1800K 40–69 2200K 70–99 2700K 100–129 3200K 130–159 4300K 160–189 5600K 190–219 6500K 220–255 8000K

6 Channels

6 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	White	0	
5	Dimmer	0	
6	Shutter / Strobe	0	

8 Channels

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	
3	Color Macro1	0	0–9 No function 10–19 Red 20–29 Green 30–39 Blue 40–49 White 50–59 Yellow 60–69 Magenta 70–79 Cyan 80–89 Dark orange 90–99 Green yellow 100–109 Salmon 110–119 Turquoise 120–129 Light green 130–139 Orange 140–149 Straw 150–159 Lavender 160–169 Light blue 170–179 Dark blue 180–189 Pink 190–255 Full on
4	Color Macro1	0	0–9 No function 10–19 Red 20–29 Green 30–39 Blue 40–49 White 50–59 Yellow 60–69 Magenta 70–79 Cyan 80–89 Dark orange 90–99 Green yellow 100–109 Salmon 110–119 Turquoise 120–129 Light green 130–139 Orange 140–149 Straw 150–159 Lavender 160–169 Light blue 170–179 Dark blue 180–189 Pink 190–255 Full on

8 Channels (continued)

Ch	Function	Default	DMX values
5	Color Macro1	0	0–9 No function 10–19 Red 20–29 Green 30–39 Blue 40–49 White 50–59 Yellow 60–69 Magenta 70–79 Cyan 80–89 Dark orange 90–99 Green yellow 100–109 Salmon 110–119 Turquoise 120–129 Light green 130–139 Orange 140–149 Straw 150–159 Lavender 160–169 Light blue 170–179 Dark blue 180–189 Pink 190–255 Full on
6	Color Macro1	0	0–9 No function 10–19 Red 20–29 Green 30–39 Blue 40–49 White 50–59 Yellow 60–69 Magenta 70–79 Cyan 80–89 Dark orange 90–99 Green yellow 100–109 Salmon 110–119 Turquoise 120–129 Light green 130–139 Orange 140–149 Straw 150–159 Lavender 160–169 Light blue 170–179 Dark blue 180–189 Pink 190–255 Full on
7	Effect	0	0–9 No function 10–39 Auto program 1 40–69 Auto program 2 70–99 Auto program 3 100–129 Auto program 4 130–159 Sound program 1 160–189 Sound program 2 190–219 Sound program 3 220–255 Sound program 4
8	C TO	0	0–9 No function 10–39 1800K 40–69 2200K 70–99 2700K 100–129 3200K 130–159 4300K 160–189 5600K 190–219 6500K 220–255 8000K

16 Channels

16 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	White	0	
5	Red	0	
6	Green	0	
7	Blue	0	
8	White	0	
9	Red	0	
10	Green	0	
11	Blue	0	
12	White	0	
13	Red	0	
14	Green	0	
15	Blue	0	
16	White	0	

20 Channels

20 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	
3	Red	0	
4	Green	0	
5	Blue	0	
6	White	0	
7	Red	0	
8	Green	0	
9	Blue	0	
10	White	0	
11	Red	0	
12	Green	0	
13	Blue	0	
14	White	0	
15	Red	0	
16	Green	0	
17	Blue	0	
18	White	0	
19	Effect	0	0–9 No function 10–39 Auto program 1 40–69 Auto program 2 70–99 Auto program 3 100–129 Auto program 4 130–159 Sound program 1 160–189 Sound program 2 190–219 Sound program 3 220–255 Sound program 4

20 Channels (continued)

Ch	Function	Default	DMX values
20	C TO	0	0–9 No function 10–39 1800K 40–69 2200K 70–99 2700K 100–129 3200K 130–159 4300K 160–189 5600K 190–219 6500K 220–255 8000K