
BeamZ Pro

LCBP450 Combi LED Panel PIX

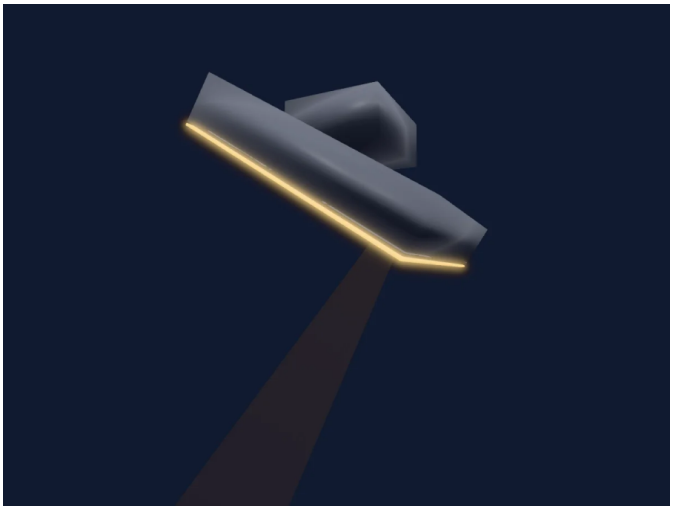

Manufacturer	**BeamZ Pro**
Type	**Moving head**
DMX modes	**3**
DMX footprint	**27, 103, 175 channels**
Beam angle	**5-25°**
Pan range	**90°**
Tilt range	**180°**
Heads / cells	**50**
Size (W × H × D)	**500 × 100 × 500 mm**
GDTF fixture type	**F9AA6BFB-2504-4AEC-A5A7-E9…**

Controls

Effect speed · Strobe · Dimmer · Pixel control · Gobos

Safety-relevant functions

Built-in effect programmes

DMX modes

27 Ch	27 ch
175 Ch + Virtual Dimmer / PT	103 ch
175 Ch	175 ch

27 Ch

27 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–63 000 64–127 025 128–191 050 192–254 075 255–255 100
2	Shutter / Strobe	2	0–3 Open 4–66 Shutter1Strobe 2 · 001 1–5.69 Hz 67–129 Shutter1Strobe 2 · 025 5.77–10.5 Hz 130–192 Shutter1Strobe 2 · 050 10.5–15.2 Hz 193–254 Shutter1Strobe 2 · 075 15.3–19.9 Hz 255–255 Shutter1Strobe 2 · 100 20 Hz
3	Red	255	0–63 000 64–127 025 128–190 050 191–253 075 254–255 100
4	Green	255	0–63 000 64–127 025 128–190 050 191–253 075 254–255 100
5	Blue	255	0–63 000 64–127 025 128–191 050 192–254 075 255–255 100
6	White	255	0–63 000 64–127 025 128–191 050 192–254 075 255–255 100
7	Gobo	0	0–3 Gobo1 Alphabet OFF (wheel slot 1) 4–7 Gobo1 Alphabet A (wheel slot 2) 8–11 Gobo1 Alphabet B (wheel slot 3) 12–15 Gobo1 Alphabet C (wheel slot 4) 16–19 Gobo1 Alphabet D (wheel slot 5) 20–23 Gobo1 Alphabet E (wheel slot 6) 24–27 Gobo1 Alphabet F (wheel slot 7) 28–31 Gobo1 Alphabet G (wheel slot 8) 32–35 Gobo1 Alphabet H (wheel slot 9) 36–39 Gobo1 Alphabet I (wheel slot 10) 40–43 Gobo1 Alphabet J (wheel slot 11) 44–47 Gobo1 Alphabet K (wheel slot 12) 48–51 Gobo1 Alphabet L (wheel slot 13) 52–55 Gobo1 Alphabet M (wheel slot 14) 56–59 Gobo1 Alphabet N (wheel slot 15) 60–63 Gobo1 Alphabet O (wheel slot 16) 64–67 Gobo1 Alphabet P (wheel slot 17) 68–71 Gobo1 Alphabet Q (wheel slot 18) 72–75 Gobo1 Alphabet R (wheel slot 19) 76–79 Gobo1 Alphabet S (wheel slot 20) 80–83 Gobo1 Alphabet T (wheel slot 21) 84–87 Gobo1 Alphabet U (wheel slot 22) 88–91 Gobo1 Alphabet V (wheel slot 23) 92–95 Gobo1 Alphabet W (wheel slot 24) 96–99 Gobo1 Alphabet X (wheel slot 25) 100–103 Gobo1 Alphabet Y (wheel slot 26) 104–107 Gobo1 Alphabet Z (wheel slot 27) 108–255 Idle (wheel slot 1)

27 Ch (continued)

Ch	Function	Default	DMX values
8	Gobo 2	0	0–3 Gobo1 Symbols OFF (wheel slot 1) 4–7 Gobo1 Symbols 1 (wheel slot 2) 8–11 Gobo1 Symbols 2 (wheel slot 3) 12–15 Gobo1 Symbols 3 (wheel slot 4) 16–19 Gobo1 Symbols 4 (wheel slot 5) 20–23 Gobo1 Symbols 5 (wheel slot 6) 24–27 Gobo1 Symbols 6 (wheel slot 7) 28–31 Gobo1 Symbols 7 (wheel slot 8) 32–35 Gobo1 Symbols 8 (wheel slot 9) 36–39 Gobo1 Symbols 9 (wheel slot 10) 40–43 Gobo1 Symbols 10 (wheel slot 11) 44–47 Gobo1 Symbols 11 (wheel slot 12) 48–51 Gobo1 Symbols 12 (wheel slot 13) 52–55 Gobo1 Symbols 13 (wheel slot 14) 56–59 Gobo1 Symbols 14 (wheel slot 15) 60–63 Gobo1 Symbols 15 (wheel slot 16) 64–67 Gobo1 Symbols 16 (wheel slot 17) 68–71 Gobo1 Symbols 17 (wheel slot 18) 72–75 Gobo1 Symbols 18 (wheel slot 19) 76–79 Gobo1 Symbols 19 (wheel slot 20) 80–83 Gobo1 Symbols 20 (wheel slot 21) 84–87 Gobo1 Symbols 21 (wheel slot 22) 88–91 Gobo1 Symbols 22 (wheel slot 23) 92–95 Gobo1 Symbols 23 (wheel slot 24) 96–99 Gobo1 Symbols 24 (wheel slot 25) 100–103 Gobo1 Symbols 25 (wheel slot 26) 104–107 Gobo1 Symbols 26 (wheel slot 27) 108–111 Gobo1 Symbols 27 (wheel slot 28) 112–115 Gobo1 Symbols 28 (wheel slot 29) 116–119 Gobo1 Symbols 29 (wheel slot 30) 120–123 Gobo1 Symbols 30 (wheel slot 31) 124–127 Gobo1 Symbols 31 (wheel slot 32) 128–131 Gobo1 Symbols 32 (wheel slot 33) 132–135 Gobo1 Symbols 33 (wheel slot 34) 136–139 Gobo1 Symbols 34 (wheel slot 35) 140–143 Gobo1 Symbols 35 (wheel slot 36) 144–147 Gobo1 Symbols 36 (wheel slot 37) 148–151 Gobo1 Symbols 37 (wheel slot 38) 152–155 Gobo1 Symbols 38 (wheel slot 39) 156–159 Gobo1 Symbols 39 (wheel slot 40) 160–163 Gobo1 Symbols 40 (wheel slot 41) 164–167 Gobo1 Symbols 41 (wheel slot 42) 168–171 Gobo1 Symbols 42 (wheel slot 43) 172–175 Gobo1 Symbols 43 (wheel slot 44) 176–179 Gobo1 Symbols 44 (wheel slot 45) 180–183 Gobo1 Symbols 45 (wheel slot 46) 184–187 Gobo1 Symbols 46 (wheel slot 47) 188–191 Gobo1 Symbols 47 (wheel slot 48) 192–195 Gobo1 Symbols 48 (wheel slot 49) 196–199 Gobo1 Symbols 49 (wheel slot 50) 200–203 Gobo1 Symbols 50 (wheel slot 51) 204–207 Gobo1 Symbols 51 (wheel slot 52) 208–211 Gobo1 Symbols 52 (wheel slot 53) 212–215 Gobo1 Symbols 53 (wheel slot 54) 216–219 Gobo1 Symbols 54 (wheel slot 55) 220–223 Gobo1 Symbols 55 (wheel slot 56) 224–227 Gobo1 Symbols 56 (wheel slot 57) 228–231 Gobo1 Symbols 57 (wheel slot 58) 232–235 Gobo1 Symbols 58 (wheel slot 59) 236–239 Gobo1 Symbols 59 (wheel slot 60) 240–243 Gobo1 Symbols 60 (wheel slot 61) 244–247 Gobo1 Symbols 61 (wheel slot 62) 248–251 Gobo1 Symbols 62 (wheel slot 63) 252–255 Gobo1 Symbols 63 (wheel slot 64)

27 Ch (continued)

Ch	Function	Default	DMX values
9	Effect	0	0–9 Wheel Slot 0 OPEN 10–21 Wheel Slot 1 22–27 Wheel Slot 2 28–33 Wheel Slot 3 34–39 Wheel Slot 4 40–45 Wheel Slot 5 46–51 Wheel Slot 6 52–57 Wheel Slot 7 58–63 Wheel Slot 8 64–69 Wheel Slot 9 70–75 Wheel Slot 10 76–81 Wheel Slot 11 82–87 Wheel Slot 12 88–93 Wheel Slot 13 94–99 Wheel Slot 14 100–105 Wheel Slot 15 106–111 Wheel Slot 16 112–117 Wheel Slot 17 118–123 Wheel Slot 18 124–129 Wheel Slot 19 130–135 Wheel Slot 20 136–141 Wheel Slot 21 142–147 Wheel Slot 22 148–153 Wheel Slot 23 154–159 Wheel Slot 24 160–165 Wheel Slot 25 166–171 Wheel Slot 26 172–177 Wheel Slot 27 178–183 Wheel Slot 28 184–189 Wheel Slot 29 190–195 Wheel Slot 30 196–201 Wheel Slot 31 202–207 Wheel Slot 32 208–213 Wheel Slot 33 214–219 Wheel Slot 34 220–225 Wheel Slot 35 226–231 Wheel Slot 36 232–237 Wheel Slot 37 238–243 Wheel Slot 38 244–249 Wheel Slot 39 250–255 Wheel Slot 40
10	Effect Speed	5	0–5 No Function 6–65 -100 66–124 -050 125–125 -001 126–190 001 191–254 050 255–255 100
11	Effects1Fade	5	0–9 No Function 10–132 000 133–254 050 255–255 100
12	Red	0	0–63 000 64–127 025 128–190 050 191–253 075 254–255 100

27 Ch (continued)

Ch	Function	Default	DMX values
13	Green	0	0–63 000 64–127 025 128–190 050 191–253 075 254–255 100
14	Blue	0	0–63 000 64–127 025 128–191 050 192–254 075 255–255 100
15	White	0	0–63 000 64–127 025 128–191 050 192–254 075 255–255 100
16	Shutter / Strobe	2	0–3 Open 4–66 Shutter1Strobe 2 · 001 1–5.69 Hz 67–129 Shutter1Strobe 2 · 025 5.77–10.5 Hz 130–192 Shutter1Strobe 2 · 050 10.5–15.2 Hz 193–254 Shutter1Strobe 2 · 075 15.3–19.9 Hz 255–255 Shutter1Strobe 2 · 100 20 Hz
17	Red	255	0–63 000 64–127 025 128–190 050 191–253 075 254–255 100
18	Green	255	0–63 000 64–127 025 128–190 050 191–253 075 254–255 100
19	Blue	255	0–63 000 64–127 025 128–191 050 192–254 075 255–255 100

27 Ch (continued)

Ch	Function	Default	DMX values
20	Gobo	255	0–3 Gobo1 Alphabet OFF (wheel slot 1) 4–7 Gobo1 Alphabet A (wheel slot 2) 8–11 Gobo1 Alphabet B (wheel slot 3) 12–15 Gobo1 Alphabet C (wheel slot 4) 16–19 Gobo1 Alphabet D (wheel slot 5) 20–23 Gobo1 Alphabet E (wheel slot 6) 24–27 Gobo1 Alphabet F (wheel slot 7) 28–31 Gobo1 Alphabet G (wheel slot 8) 32–35 Gobo1 Alphabet H (wheel slot 9) 36–39 Gobo1 Alphabet I (wheel slot 10) 40–43 Gobo1 Alphabet J (wheel slot 11) 44–47 Gobo1 Alphabet K (wheel slot 12) 48–51 Gobo1 Alphabet L (wheel slot 13) 52–55 Gobo1 Alphabet M (wheel slot 14) 56–59 Gobo1 Alphabet N (wheel slot 15) 60–63 Gobo1 Alphabet O (wheel slot 16) 64–67 Gobo1 Alphabet P (wheel slot 17) 68–71 Gobo1 Alphabet Q (wheel slot 18) 72–75 Gobo1 Alphabet R (wheel slot 19) 76–79 Gobo1 Alphabet S (wheel slot 20) 80–83 Gobo1 Alphabet T (wheel slot 21) 84–87 Gobo1 Alphabet U (wheel slot 22) 88–91 Gobo1 Alphabet V (wheel slot 23) 92–95 Gobo1 Alphabet W (wheel slot 24) 96–99 Gobo1 Alphabet X (wheel slot 25) 100–103 Gobo1 Alphabet Y (wheel slot 26) 104–107 Gobo1 Alphabet Z (wheel slot 27) 108–111 Gobo1 Alphabet a (wheel slot 28) 112–115 Gobo1 Alphabet b (wheel slot 29) 116–119 Gobo1 Alphabet c (wheel slot 30) 120–123 Gobo1 Alphabet d (wheel slot 31) 124–127 Gobo1 Alphabet (wheel slot 32) 128–131 Gobo1 Alphabet (wheel slot 33) 132–135 Gobo1 Alphabet (wheel slot 34) 136–139 Gobo1 Alphabet (wheel slot 35) 140–143 Gobo1 Alphabet (wheel slot 36) 144–147 Gobo1 Alphabet (wheel slot 37) 148–151 Gobo1 Alphabet (wheel slot 38) 152–155 Gobo1 Alphabet (wheel slot 39) 156–159 Gobo1 Alphabet (wheel slot 40) 160–163 Gobo1 Alphabet (wheel slot 41) 164–167 Gobo1 Alphabet (wheel slot 42) 168–171 Gobo1 Alphabet (wheel slot 43) 172–175 Gobo1 Alphabet (wheel slot 44) 176–179 Gobo1 Alphabet (wheel slot 45) 180–183 Gobo1 Alphabet (wheel slot 46) 184–187 Gobo1 Alphabet (wheel slot 47) 188–191 Gobo1 Alphabet (wheel slot 48) 192–195 Gobo1 Alphabet (wheel slot 49) 196–199 Gobo1 Alphabet (wheel slot 50) 200–203 Gobo1 Alphabet x (wheel slot 51) 204–207 Gobo1 Alphabet y (wheel slot 52) 208–211 Gobo1 Alphabet z (wheel slot 53) 212–255 Idle (wheel slot 1)

27 Ch (continued)

Ch	Function	Default	DMX values
21	Gobo 2	0	0–3 Gobo1 Symbols OFF (wheel slot 1) 4–7 Gobo1 Symbols 1 (wheel slot 2) 8–11 Gobo1 Symbols 2 (wheel slot 3) 12–15 Gobo1 Symbols 3 (wheel slot 4) 16–19 Gobo1 Symbols 4 (wheel slot 5) 20–23 Gobo1 Symbols 5 (wheel slot 6) 24–27 Gobo1 Symbols 6 (wheel slot 7) 28–31 Gobo1 Symbols 7 (wheel slot 8) 32–35 Gobo1 Symbols 8 (wheel slot 9) 36–39 Gobo1 Symbols 9 (wheel slot 10) 40–43 Gobo1 Symbols 10 (wheel slot 11) 44–47 Gobo1 Symbols 11 (wheel slot 12) 48–51 Gobo1 Symbols 12 (wheel slot 13) 52–55 Gobo1 Symbols 13 (wheel slot 14) 56–59 Gobo1 Symbols 14 (wheel slot 15) 60–63 Gobo1 Symbols 15 (wheel slot 16) 64–67 Gobo1 Symbols 16 (wheel slot 17) 68–71 Gobo1 Symbols 17 (wheel slot 18) 72–75 Gobo1 Symbols 18 (wheel slot 19) 76–79 Gobo1 Symbols 19 (wheel slot 20) 80–83 Gobo1 Symbols 20 (wheel slot 21) 84–87 Gobo1 Symbols 21 (wheel slot 22) 88–91 Gobo1 Symbols 22 (wheel slot 23) 92–95 Gobo1 Symbols 23 (wheel slot 24) 96–99 Gobo1 Symbols 24 (wheel slot 25) 100–103 Gobo1 Symbols 25 (wheel slot 26) 104–107 Gobo1 Symbols 26 (wheel slot 27) 108–111 Gobo1 Symbols 27 (wheel slot 28) 112–115 Gobo1 Symbols 28 (wheel slot 29) 116–119 Gobo1 Symbols 29 (wheel slot 30) 120–123 Gobo1 Symbols 30 (wheel slot 31) 124–127 Gobo1 Symbols 31 (wheel slot 32) 128–131 Gobo1 Symbols 32 (wheel slot 33) 132–135 Gobo1 Symbols 33 (wheel slot 34) 136–139 Gobo1 Symbols 34 (wheel slot 35) 140–143 Gobo1 Symbols 35 (wheel slot 36) 144–147 Gobo1 Symbols 36 (wheel slot 37) 148–151 Gobo1 Symbols 37 (wheel slot 38) 152–155 Gobo1 Symbols 38 (wheel slot 39) 156–159 Gobo1 Symbols 39 (wheel slot 40) 160–163 Gobo1 Symbols 40 (wheel slot 41) 164–167 Gobo1 Symbols 41 (wheel slot 42) 168–171 Gobo1 Symbols 42 (wheel slot 43) 172–175 Gobo1 Symbols 43 (wheel slot 44) 176–179 Gobo1 Symbols 44 (wheel slot 45) 180–183 Gobo1 Symbols 45 (wheel slot 46) 184–187 Gobo1 Symbols 46 (wheel slot 47) 188–191 Gobo1 Symbols 47 (wheel slot 48) 192–195 Gobo1 Symbols 48 (wheel slot 49) 196–199 Gobo1 Symbols 49 (wheel slot 50) 200–203 Gobo1 Symbols 50 (wheel slot 51) 204–207 Gobo1 Symbols 51 (wheel slot 52) 208–211 Gobo1 Symbols 52 (wheel slot 53) 212–215 Gobo1 Symbols 53 (wheel slot 54) 216–219 Gobo1 Symbols 54 (wheel slot 55) 220–223 Gobo1 Symbols 55 (wheel slot 56) 224–227 Gobo1 Symbols 56 (wheel slot 57) 228–231 Gobo1 Symbols 57 (wheel slot 58) 232–235 Gobo1 Symbols 58 (wheel slot 59) 236–239 Gobo1 Symbols 59 (wheel slot 60) 240–243 Gobo1 Symbols 60 (wheel slot 61) 244–247 Gobo1 Symbols 61 (wheel slot 62) 248–251 Gobo1 Symbols 62 (wheel slot 63) 252–255 Gobo1 Symbols 63 (wheel slot 64)

27 Ch (continued)

Ch	Function	Default	DMX values
22	Effect	0	0–9 Wheel Slot 00 10–21 Wheel Slot 01 22–27 Wheel Slot 02 28–33 Wheel Slot 03 34–39 Wheel Slot 04 40–45 Wheel Slot 05 46–51 Wheel Slot 06 52–57 Wheel Slot 07 58–237 Empty Channel Set 238–243 Wheel Slot 38 244–249 Wheel Slot 39 250–255 Wheel Slot 40
23	Effect Speed	0	0–5 No Function 6–65 -100 66–124 -050 125–125 -001 126–190 001 191–254 050 255–255 100
24	Effects1Fade	0	0–9 No Function 10–132 000 133–254 050 255–255 100
25	Red	0	0–63 000 64–127 025 128–190 050 191–253 075 254–255 100
26	Green	0	0–63 000 64–127 025 128–190 050 191–253 075 254–255 100
27	Blue	0	0–63 000 64–127 025 128–191 050 192–254 075 255–255 100

175 Ch + Virtual Dimmer / PT

103 channels

Ch	Function	Default	DMX values
1	Red	254	
2	Green	255	
3	Blue	255	
4	White	255	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	

175 Ch + Virtual Dimmer / PT (continued)

Ch	Function	Default	DMX values
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	

175 Ch + Virtual Dimmer / PT (continued)

Ch	Function	Default	DMX values
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Red	255	
102	Green	255	
103	Blue	255	

175 Ch

175 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	White	64	
5	Red	0	
6	Green	0	
7	Blue	0	
8	White	64	
9	Red	0	
10	Green	0	
11	Blue	0	
12	White	64	
13	Red	0	
14	Green	0	
15	Blue	0	
16	White	64	
17	Red	0	
18	Green	0	
19	Blue	0	
20	White	64	
21	Red	0	
22	Green	0	
23	Blue	0	
24	White	64	
25	Red	0	
26	Green	0	
27	Blue	0	
28	White	64	
29	Red	0	
30	Green	0	
31	Blue	0	
32	White	64	
33	Red	0	
34	Green	0	
35	Blue	0	
36	White	64	
37	Red	0	
38	Green	0	
39	Blue	0	
40	White	64	
41	Red	0	
42	Green	0	
43	Blue	0	
44	White	64	
45	Red	0	

175 Ch (continued)

Ch	Function	Default	DMX values
46	Green	0	
47	Blue	0	
48	White	64	
49	Red	0	
50	Green	0	
51	Blue	0	
52	White	64	
53	Red	0	
54	Green	0	
55	Blue	0	
56	White	64	
57	Red	0	
58	Green	0	
59	Blue	0	
60	White	64	
61	Red	0	
62	Green	0	
63	Blue	0	
64	White	64	
65	Red	0	
66	Green	0	
67	Blue	0	
68	White	64	
69	Red	0	
70	Green	0	
71	Blue	0	
72	White	64	
73	Red	0	
74	Green	0	
75	Blue	0	
76	White	64	
77	Red	0	
78	Green	0	
79	Blue	0	
80	White	64	
81	Red	0	
82	Green	0	
83	Blue	0	
84	White	64	
85	Red	0	
86	Green	0	
87	Blue	0	
88	White	64	
89	Red	0	
90	Green	0	

175 Ch (continued)

Ch	Function	Default	DMX values
91	Blue	0	
92	White	64	
93	Red	0	
94	Green	0	
95	Blue	0	
96	White	64	
97	Red	0	
98	Green	0	
99	Blue	0	
100	White	64	
101	Red	0	
102	Green	0	
103	Blue	0	
104	Red	0	
105	Green	0	
106	Blue	0	
107	Red	0	
108	Green	0	
109	Blue	0	
110	Red	0	
111	Green	0	
112	Blue	0	
113	Red	0	
114	Green	0	
115	Blue	0	
116	Red	0	
117	Green	0	
118	Blue	0	
119	Red	0	
120	Green	0	
121	Blue	0	
122	Red	0	
123	Green	0	
124	Blue	0	
125	Red	0	
126	Green	0	
127	Blue	0	
128	Red	0	
129	Green	0	
130	Blue	0	
131	Red	0	
132	Green	0	
133	Blue	0	
134	Red	0	
135	Green	0	

175 Ch (continued)

Ch	Function	Default	DMX values
136	Blue	0	
137	Red	0	
138	Green	0	
139	Blue	0	
140	Red	0	
141	Green	0	
142	Blue	0	
143	Red	0	
144	Green	0	
145	Blue	0	
146	Red	0	
147	Green	0	
148	Blue	0	
149	Red	0	
150	Green	0	
151	Blue	0	
152	Red	0	
153	Green	0	
154	Blue	0	
155	Red	0	
156	Green	0	
157	Blue	0	
158	Red	0	
159	Green	0	
160	Blue	0	
161	Red	0	
162	Green	0	
163	Blue	0	
164	Red	0	
165	Green	0	
166	Blue	0	
167	Red	0	
168	Green	0	
169	Blue	0	
170	Red	0	
171	Green	0	
172	Blue	0	
173	Red	0	
174	Green	0	
175	Blue	0	