
BeamZ Pro

StarColor 72B Flood

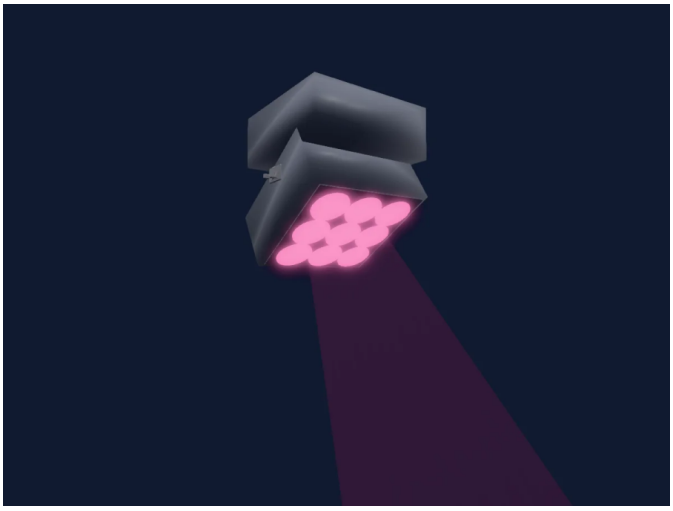

Manufacturer	**BeamZ Pro**
Type	**Moving head**
DMX modes	**1**
DMX footprint	**9 channels**
Beam angle	**20°**
Tilt range	**260°**
Size (W × H × D)	**245 × 116 × 240 mm**
GDTF fixture type	**A60AE02A-FEAA-40C9-89F0-AE...**

Controls

Extra LED colours · Colour wheel · Strobe · Dimmer · Pixel control

DMX modes

9 Ch + Virtual Tilt — 9 ch

9 Ch + Virtual Tilt

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–63 000 64–127 025 128–191 050 192–254 075 255–255 1000
2	Red	255	0–0 Min 1–127 Min>Medium 128–128 Medium 129–254 Medium>Max 255–255 Max
3	Green	255	0–0 Min 1–127 Min>Medium 128–128 Medium 129–254 Medium>Max 255–255 Max
4	Blue	255	0–0 Min 1–127 Min>Medium 128–128 Medium 129–254 Medium>Max 255–255 Max
5	Color Add CW	255	0–0 Min 1–127 Min>Medium 128–128 Medium 129–254 Medium>Max 255–255 Max
6	Color Add RY	255	0–0 Min 1–127 Min>Medium 128–128 Medium 129–254 Medium>Max 255–255 Max
7	Shutter / Strobe	0	0–12 Shutter OPEN 13–13 Shutter1Strobe 2 · Min 1 Hz 14–132 Shutter1Strobe 2 · Min>Medium 1.08–10.3 Hz 133–133 Shutter1Strobe 2 · Medium 10.4 Hz 134–254 Shutter1Strobe 2 · Medium>Max 10.5–19.9 Hz 255–255 Shutter1Strobe 2 · Max 20 Hz

9 Ch + Virtual Tilt (continued)

Ch	Function	Default	DMX values
8	Color Wheel	0	0–7 Idle (wheel slot 1) 8–9 No Color (wheel slot 1) 10–10 Wheel Slot 1 (wheel slot 2) 11–12 Wheel Slot 2 (wheel slot 3) 13–13 Wheel Slot 3 (wheel slot 4) 14–15 Wheel Slot 4 (wheel slot 5) 16–17 Wheel Slot 5 (wheel slot 6) 18–18 Wheel Slot 6 (wheel slot 7) 19–20 Wheel Slot 7 (wheel slot 8) 21–21 Wheel Slot 8 (wheel slot 9) 22–23 Wheel Slot 9 (wheel slot 10) 24–25 Wheel Slot 10 (wheel slot 11) 26–26 Wheel Slot 11 (wheel slot 12) 27–28 Wheel Slot 12 (wheel slot 13) 29–29 Wheel Slot 13 (wheel slot 14) 30–31 Wheel Slot 14 (wheel slot 15) 32–33 Wheel Slot 15 (wheel slot 16) 34–34 Wheel Slot 16 (wheel slot 17) 35–36 Wheel Slot 17 (wheel slot 18) 37–38 Wheel Slot 18 (wheel slot 19) 39–39 Wheel Slot 19 (wheel slot 20) 40–41 Wheel Slot 20 (wheel slot 21) 42–42 Wheel Slot 21 (wheel slot 22) 43–44 Wheel Slot 22 (wheel slot 23) 45–46 Wheel Slot 23 (wheel slot 24) 47–47 Wheel Slot 24 (wheel slot 25) 48–49 Wheel Slot 25 (wheel slot 26) 50–50 Wheel Slot 26 (wheel slot 27) 51–52 Wheel Slot 27 (wheel slot 28) 53–54 Wheel Slot 28 (wheel slot 29) 55–55 Wheel Slot 29 (wheel slot 30) 56–57 Wheel Slot 30 (wheel slot 31) 58–58 Wheel Slot 31 (wheel slot 32) 59–60 Wheel Slot 32 (wheel slot 33) 61–120 Jump Mode 121–180 Pulse Mode 181–255 Fade Mode

9 Ch + Virtual Tilt (continued)

Ch	Function	Default	DMX values
9	Color Effects1	128	0–0 Min 1–7 Min>Medium 8–15 Wheel Slot 1 (wheel slot 2) 16–22 Wheel Slot 2 (wheel slot 3) 23–30 Wheel Slot 3 (wheel slot 4) 31–38 Wheel Slot 4 (wheel slot 5) 39–46 Wheel Slot 5 (wheel slot 6) 47–53 Wheel Slot 6 (wheel slot 7) 54–61 Wheel Slot 7 (wheel slot 8) 62–69 Wheel Slot 8 (wheel slot 9) 70–77 Wheel Slot 9 (wheel slot 10) 78–84 Wheel Slot 10 (wheel slot 11) 85–92 Wheel Slot 11 (wheel slot 12) 93–100 Wheel Slot 12 (wheel slot 13) 101–108 Wheel Slot 13 (wheel slot 14) 109–115 Wheel Slot 14 (wheel slot 15) 116–123 Wheel Slot 15 (wheel slot 16) 124–127 Wheel Slot 16 (wheel slot 17) 128–128 Medium 129–131 Medium>Max 132–139 Wheel Slot 17 (wheel slot 18) 140–146 Wheel Slot 18 (wheel slot 19) 147–154 Wheel Slot 19 (wheel slot 20) 155–162 Wheel Slot 20 (wheel slot 21) 163–170 Wheel Slot 21 (wheel slot 22) 171–177 Wheel Slot 22 (wheel slot 23) 178–185 Wheel Slot 23 (wheel slot 24) 186–193 Wheel Slot 24 (wheel slot 25) 194–201 Wheel Slot 25 (wheel slot 26) 202–208 Wheel Slot 26 (wheel slot 27) 209–216 Wheel Slot 27 (wheel slot 28) 217–224 Wheel Slot 28 (wheel slot 29) 225–232 Wheel Slot 29 (wheel slot 30) 233–239 Wheel Slot 30 (wheel slot 31) 240–247 Wheel Slot 31 (wheel slot 32) 248–254 Wheel Slot 32 (wheel slot 33) 255–255 Max