
Briteq

BT-Nonapixel white

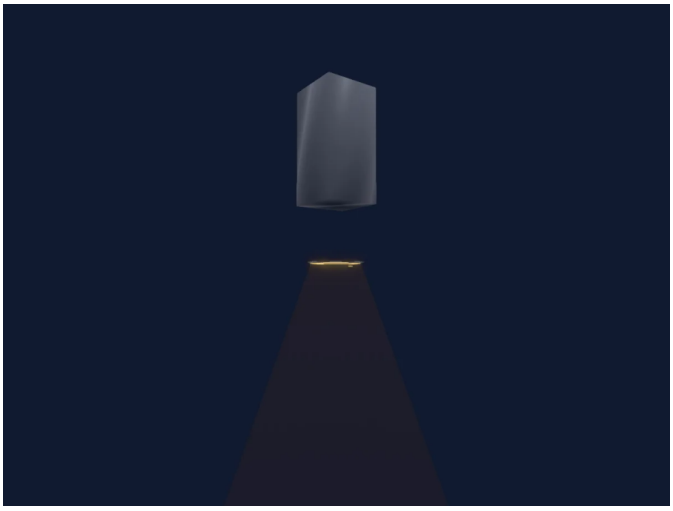

Manufacturer	**Briteq**
Type	**Effect light**
DMX modes	**4**
DMX footprint	**5, 12, 16, 95 channels**
Beam angle	**4-80°**
Heads / cells	**3**
Size (W × H × D)	**150 × 307 × 150 mm**
GDTF fixture type	**7825AEC8-804C-4E9D-9B2A-8C…**

Controls

Extra LED colours · Effect speed · Strobe · Dimmer · Pixel control

Safety-relevant functions

Built-in effect programmes

DMX modes

5CH	5 ch
12CH	12 ch
16CH	16 ch
95CH	95 ch

5CH

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Color Add WW	255	
3	Color Add CW	0	
4	Shutter / Strobe	7	0–7 Open 8–66 Rnd Strobe · min 67–67 Rnd Strobe · max 68–254 Strobe · min 255–255 Strobe · max
5	Control1	0	0–7 No Function 8–107 Beam dimmer speed max 108–108 Beam Dimmer speed min 109–114 No Function 115–120 Linear 121–126 Square 127–132 Inv Square 133–138 S-Curve 139–144 No function 145–150 Load saved factory settings 151–156 No function 157–162 Pixel1 = 12h 163–168 Pixel1 = 3h 169–174 Pixel1 = 6h 175–180 Pixel1 = 9h 181–186 No function 187–237 Halo simmer speed 238–255 No function

12CH

12 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Color Add WW	255	
3	Color Add CW	0	
4	Shutter / Strobe	7	0–7 Open 8–66 StrobeRandom · min 67–67 StrobeRandom · max 68–254 Strobe · min 1–24.9 Hz 255–255 Strobe · max 25 Hz
5	Dimmer	0	0–254 Closed 255–255 Open
6	Shutter / Strobe	7	0–7 Open 8–66 StrobeRandom · min 67–67 StrobeRandom · max 68–254 Strobe · min 1–24.9 Hz 255–255 Strobe · max 25 Hz
7	Red	0	
8	Green	0	
9	Blue	0	

12CH (continued)

Ch	Function	Default	DMX values
10	Effect	0	0–7 Color mix 8–48 Color Fade 49–89 Chase 1 90–130 Chase 2 131–171 Chase 3 172–212 Chase 4 213–255 Chase 5
11	Effect Speed	128	0–124 CW max 125–125 CW min 126–129 Stop 130–254 CCW min 255–255 CCW max
12	Control1	0	0–7 No Function 8–107 Beam Simmer speed max 108–108 Beam Dimmer speed min 109–114 No Function 115–120 Linear 121–126 Square 127–132 Inv Square 133–138 S-Curve 139–144 No function 145–150 Load saved factory settings 151–156 No function 157–162 Pixel1 = 12h 163–168 Pixel1 = 3h 169–174 Pixel1 = 6h 175–180 Pixel1 = 9h 181–186 No function 187–237 Halo simmer speed 238–255 No function

16CH

16 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Color Add WW	255	
3	Color Add CW	0	
4	Shutter / Strobe	7	0–7 Open 8–66 StrobeRandom · min 67–67 StrobeRandom · max 68–254 Strobe · min 1–24.9 Hz 255–255 Strobe · max 25 Hz
5	Dimmer	0	
6	Shutter / Strobe	7	0–7 Open 8–66 StrobeRandom · min 67–67 StrobeRandom · max 68–254 Strobe · min 1–24.9 Hz 255–255 Strobe · max 25 Hz
7	Red	0	
8	Green	0	
9	Blue	0	
10	Red	0	
11	Green	0	
12	Blue	0	

16CH (continued)

Ch	Function	Default	DMX values
13	Effect	8	0–7 Color mix 8–48 Chase 1 49–89 Chase 2 90–130 Chase 3 131–171 Chase 4 172–212 Chase 5 213–255 Chase 6
14	Effects1Pos	175	0–8 Step 1 9–11 Step 2 12–14 Step 3 15–17 Step 4 18–20 Step 5 21–23 Step 6 24–26 Step 7 27–29 Step 8 30–32 Step 9 33–35 Step 10 36–38 Step 11 39–41 Step 12 42–44 Step 13 45–47 Step 14 48–50 Step 15 51–53 Step 16 54–56 Step 17 57–59 Step 18 60–62 Step 19 63–65 Step 20 66–68 Step 21 69–71 Step 22 72–74 Step 23 75–77 Step 24 78–80 Step 25 81–83 Step 26 84–86 Step 27 87–89 Step 28 90–92 Step 29 93–95 Step 30 96–174 CW 175–176 Stop 177–255 CCW
15	Effects1Fade	255	
16	Control1	7	0–7 No Function 8–107 Beam Dimmer speed max 108–108 Beam Dim Speed min 109–114 No Function 115–120 Linear 121–126 Square 127–132 Inv Square 133–138 S-Curve 139–144 No function 145–150 Load saved factory settings 151–156 No function 157–162 Pixel1 = 12h 163–168 Pixel1 = 3h 169–174 Pixel1 = 6h 175–180 Pixel1 = 9h 181–186 No function 187–237 Halo simmer speed 238–255 No function

95CH

95 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Color Add WW	255	
3	Color Add CW	0	
4	Shutter / Strobe	7	0–7 Open 8–67 Random strobe 68–255 Strobe
5	Red	0	
6	Green	0	
7	Blue	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	

95CH (continued)

Ch	Function	Default	DMX values
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	

95CH (continued)

Ch	Function	Default	DMX values
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Control1	0	