
Briteq

BT-THEATRE 60FCL

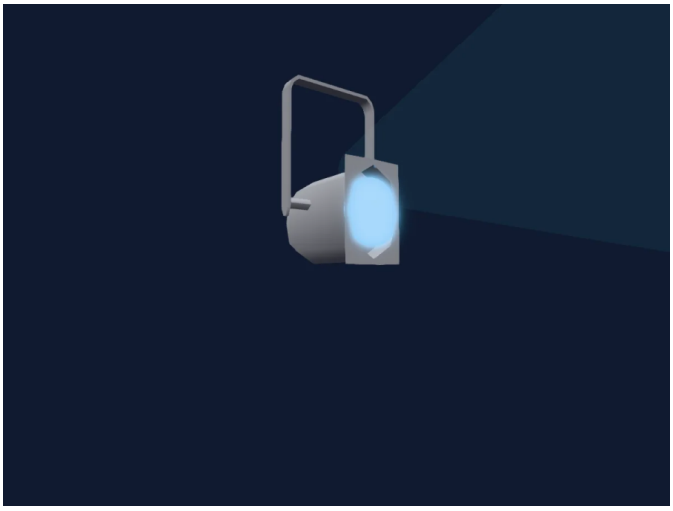

Manufacturer	**Briteq**
Type	**PAR**
DMX modes	**7**
DMX footprint	**4, 5, 6, 7, 8 channels**
Beam angle	**15-41°**
Size (W × H × D)	**195 × 250 × 25 mm**
GDTF fixture type	**BBB7042F-88B1-4668-80B9-7A...**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Strobe · Dimmer

Safety-relevant functions

Strobe

DMX modes

4Ch	4 ch
4Ch RGB+Dim	5 ch
5Ch	5 ch
6Ch	6 ch
6Ch+	6 ch
7Ch	7 ch
8Ch	8 ch

4Ch

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add GY	0	

4Ch RGB+Dim

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Reserved 4	0	
5	Dimmer	0	0–189 Closed 190–190 Open 191–200 Sound Strobe 201–247 Strobe 248–255 Open

5Ch

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add GY	0	
5	Dimmer	0	0–189 Closed 190–190 Open 191–200 Sound Strobe 201–247 Strobe 248–255 Open

6Ch

6 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add GY	0	
5	Dimmer	0	0–254 Closed 255–255 Open
6	Shutter / Strobe	0	0–4 Open 5–24 Sound strobe 25–34 Open 68–255 Strobe

6Ch+

6 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	

6Ch+ (continued)

Ch	Function	Default	DMX values
3	Blue	255	
4	Color Add GY	0	
5	Dimmer	0	0–254 Closed 255–255 Open
6	Shutter / Strobe	0	0–4 Open 5–255 Strobe

7Ch

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–7 Open 8–37 Random strobe 38–67 Sound strobe 68–255 Strobe
3	Color Wheel	0	0–7 Disabled (wheel slot 1) 8–12 2700K (wheel slot 2) 13–17 3000K (wheel slot 3) 18–22 3200K (wheel slot 4) 23–27 4000K (wheel slot 5) 28–32 5600K (wheel slot 6) 33–37 Red (wheel slot 7) 38–42 Orange (wheel slot 8) 43–47 Yellow (wheel slot 9) 48–52 Green (wheel slot 10) 53–57 Cyan (wheel slot 11) 58–62 Blue (wheel slot 12) 63–67 Purple (wheel slot 13) 68–72 User color (wheel slot 14) 73–161 Color change 162–250 Color fade 251–255 Sound control
4	Red	255	
5	Green	255	
6	Blue	255	
7	Color Add GY	0	

8Ch

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–7 Open 8–37 Random strobe 38–67 Sound strobe 68–255 Strobe

8Ch (continued)

Ch	Function	Default	DMX values
3	Color Wheel	0	0–7 Disabled (wheel slot 1) 8–12 2700K (wheel slot 2) 13–17 3000K (wheel slot 3) 18–22 3200K (wheel slot 4) 23–27 4000K (wheel slot 5) 28–32 5600K (wheel slot 6) 33–37 Red (wheel slot 7) 38–42 Orange (wheel slot 8) 43–47 Yellow (wheel slot 9) 48–52 Green (wheel slot 10) 53–57 Cyan (wheel slot 11) 58–62 Blue (wheel slot 12) 63–67 Purple (wheel slot 13) 68–72 User color (wheel slot 14) 73–161 Color change 162–250 Color fade 251–255 Sound control
4	Red	255	
5	Green	255	
6	Blue	255	
7	Color Add GY	0	
8	Control1	0	0–7 No function 8–18 Dim curve: Linear 19–29 Dim curve: Square 30–40 Dim curve: InvSquare 41–51 Dim curve: S-curve 52–62 Dim behavior: Halogen 63–73 Dim behavior: LEd 74–84 Fan mode: Silent 85–95 Fan mode: Auto 96–106 Delay time 0s 107–117 Delay time 3s 118–255 NoFeature 1