
Chauvet DJ

SlimBANK Q18 ILS

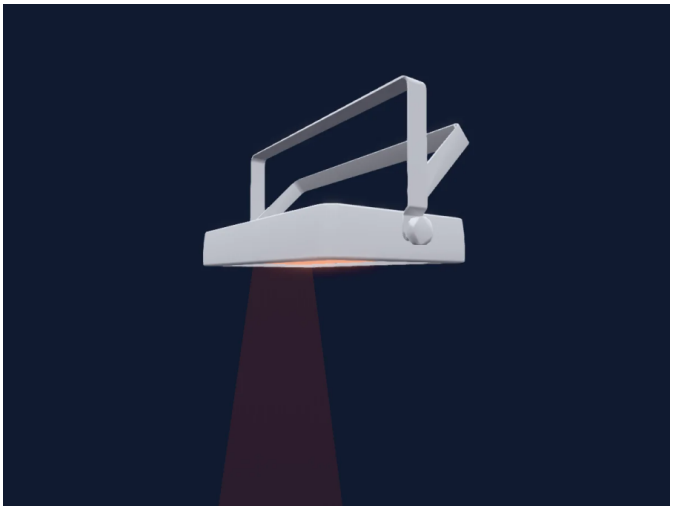

Manufacturer	**Chauvet DJ**
Type	**Effect light**
DMX modes	**4**
DMX footprint	**4, 6, 10, 16 channels**
Beam angle	**17°**
Heads / cells	**3**
Size (W × H × D)	**397 × 177 × 109 mm**
GDTF fixture type	**FB070C50-8DDC-4401-BEA8-CE…**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Effect speed · Strobe · Dimmer · Pixel control

Safety-relevant functions

Strobe · Built-in effect programmes

DMX modes

4Ch Mode	4 ch
6Ch Mode	6 ch
10Ch Mode	10 ch
16Ch Mode	16 ch

4Ch Mode

4 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	255	0–0 Min 1–254 Min > Max 255–255 Max

6Ch Mode

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
2	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Color Add RY	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Shutter / Strobe	0	0–10 Open - Shutter Open 11–255 Strobe S > F - Strobe

10Ch Mode

10 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
2	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Color Add RY	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Shutter / Strobe	0	0–10 Open - Shutter Open 11–255 Strobe S > F - Strobe

10Ch Mode (continued)

Ch	Function	Default	DMX values
7	Color Macro1	0	0–10 No Func - Custom 11–255 Color Macro - Macro
8	Effect	0	0–10 No Func - Custom 11–28 Auto Program 1 - Macro 29–45 Auto Program 2 - Macro 46–62 Auto Program 3 - Macro 63–79 Auto Program 4 - Macro 80–96 Auto Program 5 - Macro 97–113 Auto Program 6 - Macro 114–130 Auto Program 7 - Macro 131–147 Auto Program 8 - Macro 148–164 Auto Program 9 - Macro 165–181 Auto Program 10 - Macro 182–198 Auto Program 11 - Macro 199–215 Auto Program 12 - Macro 216–232 Auto Program 13 - Macro 233–250 Auto Program 14 - Macro 251–255 Sound-Active Program - Macro
9	Effect Speed	0	0–0 Min 1–254 Min > Max 255–255 Max
10	Intensity MSpeed	0	0–51 Default Dim Spd Set Fr Menu - Custom 52–101 Dim Spd Mode Off - Speed 102–152 Dim Spd Mode 1 (Fast Speed) - Speed 153–203 Dim Spd Mode 2 (Medium Speed) - Speed 204–255 Dim Spd Mode 3 (Slow Speed) - Speed

16Ch Mode

16 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Color Add RY	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

16Ch Mode (continued)

Ch	Function	Default	DMX values
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Color Add RY	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Effect	0	0–10 No Func - Custom 11–28 Auto Program 1 - Macro 29–45 Auto Program 2 - Macro 46–62 Auto Program 3 - Macro 63–79 Auto Program 4 - Macro 80–96 Auto Program 5 - Macro 97–113 Auto Program 6 - Macro 114–130 Auto Program 7 - Macro 131–147 Auto Program 8 - Macro 148–164 Auto Program 9 - Macro 165–181 Auto Program 10 - Macro 182–198 Auto Program 11 - Macro 199–215 Auto Program 12 - Macro 216–232 Auto Program 13 - Macro 233–250 Auto Program 14 - Macro 251–255 Sound-Active Program - Macro
14	Effect Speed	0	0–0 Min 1–254 Min > Max 255–255 Max
15	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
16	Shutter / Strobe	0	0–10 Open - Shutter Open 11–255 Strobe S > F - Strobe