
Chauvet Professional

COLORado Batten 72X

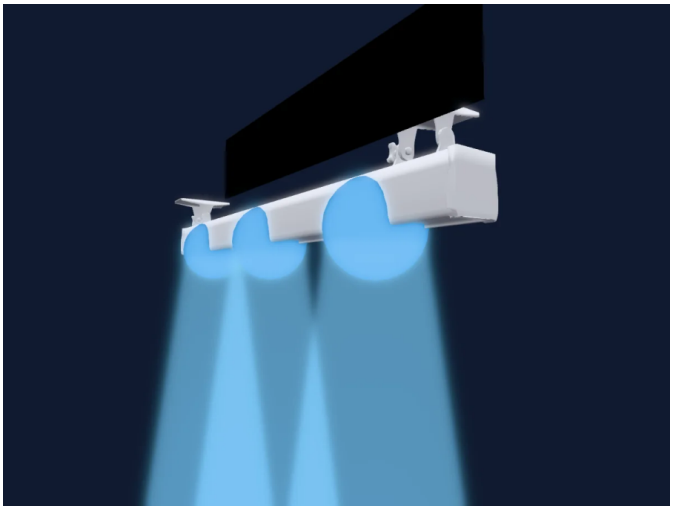

Manufacturer	**Chauvet Professional**
Type	**LED bar**
DMX modes	**18**
DMX footprint	**3, 4, 5, 8, 9, 10, 12, 15, 16, 21, 22, 24, 27, 30, 43 channels**
Beam angle	**18°**
Heads / cells	**3**
Size (W × H × D)	**909 × 60 × 137 mm**
GDTF fixture type	**8256EC60-93F3-448B-824F-1B…**

Controls

Extra LED colours · Hue and saturation · RGB colour mixing · Colour temperature · Colour wheel · Strobe · Dimmer · Pixel control

Safety-relevant functions

Built-in effect programmes

DMX modes

1 RGB	3 ch
1 RGBA	4 ch
1 RGBAW	5 ch
1 HSIC	8 ch
1 RGB EXT	8 ch
1 RGBA EXT	9 ch
3 RGB	9 ch
1 RGBAW EXT	10 ch
1 RGBAW FIN	10 ch
3 RGBA	12 ch
3 RGBAW	15 ch
1 RGBAW FUL	16 ch
3 RGB EXT	21 ch
3 HSIC	22 ch
3 RGBA EXT	24 ch
3 RGBAW EXT	27 ch
3 RGBAW FIN	30 ch
3 RGBAW Full	43 ch

1 RGB

3 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

1 RGBA

4 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

1 RGBAW

5 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
5	White	255	0–0 Min 1–254 Min > Max 255–255 Max

1 HSIC

8 channels

Ch	Function	Default	DMX values
1	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBHue	0	
3	H SBHue Fine	0	Fine byte of H SBHue

1 HSIC (continued)

Ch	Function	Default	DMX values
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	Shutter / Strobe	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random
6	Color Macro1	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)
7	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC
8	Intensity MSpeed	0	0–9 Preset Dim Spd Fr Disp Menu - Custom 10–29 Dim Spd Mode Off - Speed 30–69 Dim Spd Mode 1 (Fastest) - Speed 70–129 Dim Spd Mode 2 - Speed 130–189 Dim Spd Mode 3 - Speed 190–255 Dim Spd Mode 4 (Slowest) - Speed

1 RGB EXT

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

1 RGB EXT (continued)

Ch	Function	Default	DMX values
6	Color Macro1	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)
7	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC
8	Shutter / Strobe	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random

1 RGBA EXT

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

1 RGBA EXT (continued)

Ch	Function	Default	DMX values
7	Color Macro1	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)
8	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC
9	Shutter / Strobe	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random

3 RGB

9 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

3 RGB (continued)

Ch	Function	Default	DMX values
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

1 RGBAW EXT

10 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	White	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Color Macro1	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)
9	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC

1 RGBAW EXT (continued)

Ch	Function	Default	DMX values
10	Shutter / Strobe	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random

1 RGBAW FIN

10 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Red Fine	255	Fine byte of Red
3	Green	255	
4	Green Fine	255	Fine byte of Green
5	Blue	255	
6	Blue Fine	255	Fine byte of Blue
7	Color Add RY	0	
8	Color Add RY Fine	0	Fine byte of Color Add RY
9	White	255	
10	White Fine	255	Fine byte of White

3 RGBA

12 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
5	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

3 RGBA (continued)

Ch	Function	Default	DMX values
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

3 RGBAW

15 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
5	White	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
10	White	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

3 RGBAW (continued)

Ch	Function	Default	DMX values
15	White	255	0–0 Min 1–254 Min > Max 255–255 Max

1 RGBAW FUL

16 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	Red	255	
4	Red Fine	255	Fine byte of Red
5	Green	255	
6	Green Fine	255	Fine byte of Green
7	Blue	255	
8	Blue Fine	255	Fine byte of Blue
9	Color Add RY	0	
10	Color Add RY Fine	0	Fine byte of Color Add RY
11	White	255	
12	White Fine	255	Fine byte of White
13	Color Macro1	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)
14	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC
15	Shutter / Strobe	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random

1 RGBAW FUL (continued)

Ch	Function	Default	DMX values
16	Intensity MSpeed	0	0–9 Preset Dim Spd Fr Disp Menu - Custom 10–29 Dim Spd Mode Off - Custom 30–69 Dim Spd Mode 1 (Fastest) - Speed 70–129 Dim Spd Mode 2 - Speed 130–189 Dim Spd Mode 3 - Speed 190–255 Dim Spd Mode 4 (Slowest) - Speed

3 RGB EXT

21 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Macro1	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)
7	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC
8	Shutter / Strobe	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

3 RGB EXT (continued)

Ch	Function	Default	DMX values
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Color Macro2	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)
13	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC
14	Shutter / Strobe 2	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Color Macro3	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)

3 RGB EXT (continued)

Ch	Function	Default	DMX values
19	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC
20	Shutter / Strobe 3	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random
21	Effect	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random

3 HSIC

22 channels

Ch	Function	Default	DMX values
1	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBHue	0	
3	H SBHue Fine	0	Fine byte of H SBHue
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	Shutter / Strobe	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random
6	Color Macro1	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)

3 HSIC (continued)

Ch	Function	Default	DMX values
7	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC
8	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBHue	0	
10	H SBHue Fine	0	Fine byte of H SBHue
11	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
12	Shutter / Strobe 2	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random
13	Color Macro2	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)
14	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC
15	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
16	H SBHue	0	
17	H SBHue Fine	0	Fine byte of H SBHue

3 HSIC (continued)

Ch	Function	Default	DMX values
18	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
19	Shutter / Strobe 3	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random
20	Color Macro3	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)
21	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC
22	Intensity MSpeed	0	0–9 Preset Dim Spd Fr Disp Menu - Custom 10–29 Dim Spd Mode Off - Speed 30–69 Dim Spd Mode 1 (Fastest) - Speed 70–129 Dim Spd Mode 2 - Speed 130–189 Dim Spd Mode 3 - Speed 190–255 Dim Spd Mode 4 (Slowest) - Speed

3 RGBA EXT

24 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

3 RGBA EXT (continued)

Ch	Function	Default	DMX values
7	Color Macro1	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)
8	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC
9	Shutter / Strobe	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random
10	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
14	Color Macro2	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)

3 RGBA EXT (continued)

Ch	Function	Default	DMX values
15	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC
16	Shutter / Strobe 2	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random
17	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
21	Color Macro3	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)
22	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC

3 RGBA EXT (continued)

Ch	Function	Default	DMX values
23	Shutter / Strobe 3	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random
24	Effect	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random

3 RGBAW EXT

27 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	White	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Color Macro1	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)
9	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC

3 RGBAW EXT (continued)

Ch	Function	Default	DMX values
10	Shutter / Strobe	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
15	White	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Color Macro2	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)
17	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC
18	Shutter / Strobe 2	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random
19	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

3 RGBAW EXT (continued)

Ch	Function	Default	DMX values
21	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
23	White	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Color Macro3	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)
25	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC
26	Shutter / Strobe 3	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random
27	Effect	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random

3 RGBAW FIN

30 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Red Fine	255	Fine byte of Red
3	Green	255	
4	Green Fine	255	Fine byte of Green
5	Blue	255	
6	Blue Fine	255	Fine byte of Blue
7	Color Add RY	0	

3 RGBAW FIN (continued)

Ch	Function	Default	DMX values
8	Color Add RY Fine	0	Fine byte of Color Add RY
9	White	255	
10	White Fine	255	Fine byte of White
11	Red	255	
12	Red Fine	255	Fine byte of Red
13	Green	255	
14	Green Fine	255	Fine byte of Green
15	Blue	255	
16	Blue Fine	255	Fine byte of Blue
17	Color Add RY	0	
18	Color Add RY Fine	0	Fine byte of Color Add RY
19	White	255	
20	White Fine	255	Fine byte of White
21	Red	255	
22	Red Fine	255	Fine byte of Red
23	Green	255	
24	Green Fine	255	Fine byte of Green
25	Blue	255	
26	Blue Fine	255	Fine byte of Blue
27	Color Add RY	0	
28	Color Add RY Fine	0	Fine byte of Color Add RY
29	White	255	
30	White Fine	255	Fine byte of White

3 RGBAW Full

43 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	Red	255	
4	Red Fine	255	Fine byte of Red
5	Green	255	
6	Green Fine	255	Fine byte of Green
7	Blue	255	
8	Blue Fine	255	Fine byte of Blue
9	Color Add RY	0	
10	Color Add RY Fine	0	Fine byte of Color Add RY
11	White	255	
12	White Fine	255	Fine byte of White

3 RGBAW Full (continued)

Ch	Function	Default	DMX values
13	Color Macro1	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)
14	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC
15	Shutter / Strobe	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random
16	Red	255	
17	Red Fine	255	Fine byte of Red
18	Green	255	
19	Green Fine	255	Fine byte of Green
20	Blue	255	
21	Blue Fine	255	Fine byte of Blue
22	Color Add RY	0	
23	Color Add RY Fine	0	Fine byte of Color Add RY
24	White	255	
25	White Fine	255	Fine byte of White
26	Color Macro2	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)

3 RGBAW Full (continued)

Ch	Function	Default	DMX values
27	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC
28	Shutter / Strobe 2	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random
29	Red	255	
30	Red Fine	255	Fine byte of Red
31	Green	255	
32	Green Fine	255	Fine byte of Green
33	Blue	255	
34	Blue Fine	255	Fine byte of Blue
35	Color Add RY	0	
36	Color Add RY Fine	0	Fine byte of Color Add RY
37	White	255	
38	White Fine	255	Fine byte of White
39	Color Macro3	0	0–10 No Func - Custom 11–34 R:100% G:0-100% B:0% A:0% W:0% - Color (wheel slot... 35–59 R:100-0% G:100% B:0% A:0% W:0% - Color (wheel slot... 60–84 R:0% G:100% B:0-100% A:0% W:0% - Color (wheel slot... 85–109 R:0% G:100-0% B:100% A:0% W:0% - Color (wheel sl... 110–134 R:0-100% G:0% B:100% A:0% W:0% - Color (wheel s... 135–159 R:100% G:0% B:100-0% A:0% W:0% - Color (wheel s... 160–184 R:100% G:0-100% B:0-100% A:0% W:0% - Color (wh... 185–209 R:100-0% G:100-0% B:100% A:0% W:0% - Color (wh... 210–255 RGBAW:100% - Color (wheel slot 9)
40	C TC	0	0–10 No Func - Custom 11–28 White 1 - CTC 29–46 White 2 - CTC 47–64 White 3 - CTC 65–82 White 4 - CTC 83–100 White 5 - CTC 101–118 White 6 - CTC 119–136 White 7 - CTC 137–154 White 8 - CTC 155–172 White 9 - CTC 173–190 White 10 - CTC 191–208 White 11 - CTC 209–226 White 12 - CTC 227–244 White 13 - CTC 245–255 White 14 - CTC

3 RGBAW Full (continued)

Ch	Function	Default	DMX values
41	Shutter / Strobe 3	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random
42	Effect	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–109 Open - Shutter Open 110–179 Pulse Strobe S > F - Strobe Pulse Random 180–189 Open - Shutter Open 190–255 Strobe Random S > F - Strobe Random
43	Intensity MSpeed	0	0–9 Preset Dim Spd Fr Disp Menu - Custom 10–29 Dim Spd Mode Off - Speed 30–69 Dim Spd Mode 1 (Fastest) - Speed 70–129 Dim Spd Mode 2 - Speed 130–189 Dim Spd Mode 3 - Speed 190–255 Dim Spd Mode 4 (Slowest) - Speed