
Chauvet Professional

# Strike P38

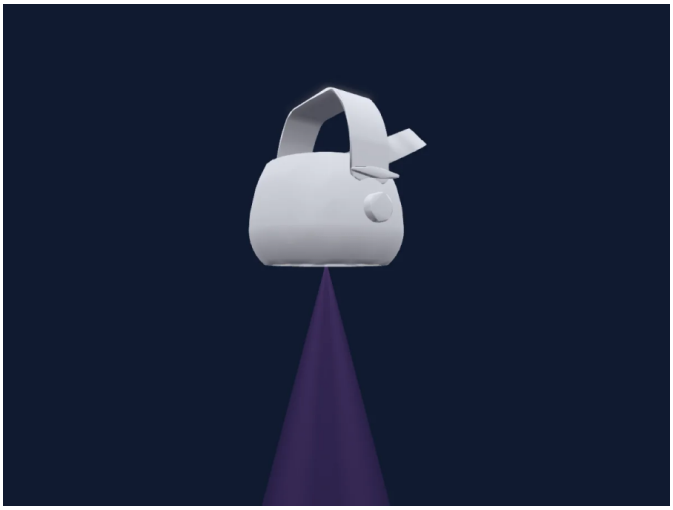

| | |
|---|---|
| Manufacturer | **Chauvet Professional** |
| Type | **Blinder** |
| DMX modes | **6** |
| DMX footprint | **1, 3, 4, 5, 6, 7 channels** |
| Beam angle | **30°** |
| Size (W × H × D) | **303 × 184 × 261 mm** |
| GDTF fixture type | **A9FF8F2E-3220-11E8-BC9E-525…** |

## Controls

Extra LED colours · Colour wheel · Strobe · Dimmer

## Safety-relevant functions

Built-in effect programmes

## DMX modes

| | |
|---|---|
| 1Ch Mode | 1 ch |
| 3Ch Mode | 3 ch |
| 4Ch Mode | 4 ch |
| 5Ch Mode | 5 ch |
| 6Ch Mode | 6 ch |
| 7Ch Mode | 7 ch |

## 1Ch Mode

1 channel

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Dimmer | 0 | 0–0 Min<br>1–254 Min > Max<br>255–255 Max |

## 3Ch Mode

3 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Dimmer | 0 | 0–0 Min<br>1–254 Min > Max<br>255–255 Max |
| 2 | Color Effects1 | 0 | 0–0 ON (Red Shift)<br>1–255 OFF (Red Shift) |
| 3 | Intensity MSpeed | 0 | 0–51 Current Dimmer Spd Mode<br>52–101 Dim Spd Mode Off<br>102–152 Dim Spd Mode 1 (Fastest)<br>153–203 Dim Spd Mode 2<br>204–255 Dim Spd Mode 3 (Slowest) |

## 4Ch Mode

4 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Dimmer | 0 | |
| 2 | Dimmer Fine | 0 | Fine byte of Dimmer |
| 3 | Color Effects1 | 0 | 0–0 ON (Red Shift)<br>1–255 OFF (Red Shit) |
| 4 | Intensity MSpeed | 0 | 0–51 Current Dimmer Spd Mode<br>52–101 Dim Spd Mode Off<br>102–152 Dim Spd Mode 1 (Fastest)<br>153–203 Dim Spd Mode 2<br>204–255 Dim Spd Mode 3 (Slowest) |

## 5Ch Mode

5 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Dimmer | 0 | 0–0 Min<br>1–254 Min > Max<br>255–255 Max |
| 2 | Color Effects1 | 0 | 0–0 ON (Red Shift)<br>1–255 OFF (Red Shift) |
| 3 | Shutter / Strobe | 0 | 0–10 Open<br>11–11 STROBE · Slow 0.1 Hz<br>12–254 Strobe S > F<br>255–255 STROBE · Fast 25 Hz |
| 4 | Effect | 0 | 0–10 No Funcion<br>11–80 Auto 1 - S > F<br>81–160 Auto 2 - S > F<br>161–240 Auto 3 - S > F<br>241–255 No Function |
| 5 | Intensity MSpeed | 0 | 0–51 Current Dimmer Spd Mode<br>52–101 Dim Spd Mode Off<br>102–152 Dim Spd Mode 1 (Fastest)<br>153–203 Dim Spd Mode 2<br>204–255 Dim Spd Mode 3 (Slowest) |

## 6Ch Mode

6 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Dimmer | 0 | |
| 2 | Dimmer Fine | 0 | Fine byte of Dimmer |
| 3 | Color Effects1 | 0 | 0–0 ON (Red Shift)<br>1–255 OFF (Red Shift) |
| 4 | Shutter / Strobe | 0 | 0–10 Open<br>11–11 STROBE · Slow 0.1 Hz<br>12–254 Strobe S > F<br>255–255 STROBE · Fast 25 Hz |
| 5 | Effect | 0 | 0–10 No Function<br>11–80 Auto 1 S > F<br>81–160 Auto 2 S > F<br>161–240 Auto 3 S > F<br>241–255 No Function |
| 6 | Intensity MSpeed | 0 | 0–51 Current Dimmer Spd Mode<br>52–101 Dim Spd Mode Off<br>102–152 Dim Spd Mode 1 (Fastest)<br>153–203 Dim Spd Mode 2<br>204–255 Dim Spd Mode 3 (Slowest) |

## 7Ch Mode

7 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | White | 255 | |
| 2 | White Fine | 255 | Fine byte of White |
| 3 | Color Add RY | 255 | |
| 4 | Color Add RY Fine | 255 | Fine byte of Color Add RY |
| 5 | Shutter / Strobe | 0 | 0–10 Open<br>11–11 STROBE · Slow 0.1 Hz<br>12–254 Strobe S > F<br>255–255 STROBE · Fast 25 Hz |
| 6 | Effect | 0 | 0–10 No Function<br>11–80 Auto 1 S > F<br>81–160 Auto 2 S > F<br>161–240 Auto 3 S > F<br>241–255 No Function |
| 7 | Intensity MSpeed | 0 | 0–51 Current Dimmer Spd Mode<br>52–101 Dim Spd Mode Off<br>102–152 Dim Spd Mode 1 (Fastest)<br>153–203 Dim Spd Mode 2<br>204–255 Dim Spd Mode 3 (Slowest) |