
Chroma-Q

Color Force II 12

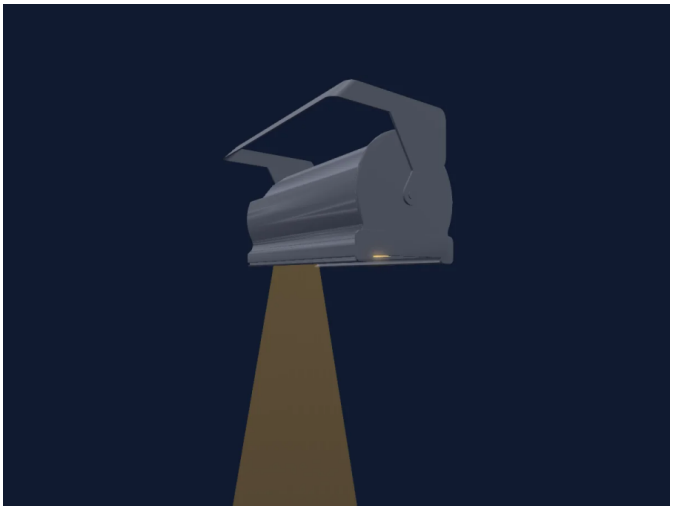

Manufacturer	**Chroma-Q**
Type	**Cyc light**
DMX modes	**52**
DMX footprint	**1, 3, 4, 5, 6, 7, 8, 9, 10, 11 channels**
Beam angle	**20°**
Heads / cells	**2**
Size (W × H × D)	**336 × 136 × 189 mm**
GDTF fixture type	**B5F4A343-7B0C-48B3-9889-E7…**

Controls

Extra LED colours · Hue and saturation · RGB colour mixing · Strobe · Dimmer · Pixel control

DMX modes

Look Sel	1 ch
HSI	3 ch
HSI Od/Ev	3 ch
HSI Od/Ev Strobe On	3 ch
HSIx1	3 ch
HSIx1 Strobe On	3 ch
HSIx2	3 ch
HSIx2 Strobe On	3 ch
HSIx4	3 ch
RGB	3 ch
RGB Od/Ev	3 ch
RGB Od/Ev Strobe On	3 ch
RGBx1	3 ch
RGBx1 Strobe On	3 ch
RGBx2	3 ch
RGBx2 Strobe On	3 ch
RGBx4	3 ch
RGBA	4 ch
RGBA Od/Ev	4 ch
RGBA Od/Ev Strobe On	4 ch
RGBAx1	4 ch
RGBAx1 Strobe On	4 ch
RGBAx2	4 ch
RGBAx2 Strobe On	4 ch
RGBAx4	4 ch
HSI Od/Ev Strobe On Top 1	5 ch
HSIx1 Strobe On Top	5 ch

HSIx2 Strobe On Top	5 ch
HSIx4 Strobe On	5 ch
RGB Od/Ev Strobe On Top	5 ch
RGBx1 Strobe On Top	5 ch
RGBx2 Strobe On Top	5 ch
RGBx4 Strobe On	5 ch
HSI Od/Ev Strobe On Top	6 ch
HSIx1 Strobe Random	6 ch
HSIx2 Strobe Random	6 ch
RGB Od/Ev Strobe Random	6 ch
RGBA Od/Ev Strobe On Top	6 ch
RGBAx1 Strobe On Top	6 ch
RGBAx2 Strobe On Top	6 ch
RGBAx4 Strobe On	6 ch
RGBx1 Strobe Random	6 ch
RGBx2 Strobe Random	6 ch
RGBA Od/Ev Strobe Random	7 ch
RGBAx1 Strobe Random	7 ch
RGBAx2 Strobe Random	7 ch
HSIx4 Strobe On Top	8 ch
RGBx4 Strobe On Top	8 ch
HSIx4 Strobe Random	9 ch
RGBx4 Strobe Random	9 ch
RGBAx4 Strobe On Top	10 ch
RGBAx4 Strobe Random	11 ch

Look Sel

1 channel

Ch	Function	Default	DMX values
1	Function	0	0–0 Off - Macro 1–8 Red Full - Macro (wheel slot 1) 9–16 Pink Full - Macro (wheel slot 2) 17–24 Orange Full - Macro (wheel slot 3) 25–32 Light Orange Full - Macro (wheel slot 4) 33–40 Yellow Full - Macro (wheel slot 5) 41–48 Light Yellow Full - Macro (wheel slot 6) 49–56 Green Full - Macro (wheel slot 7) 57–64 Light Green Full - Macro (wheel slot 8) 65–72 Cyan Full - Macro (wheel slot 9) 73–80 Light Cyan Full - Macro (wheel slot 10) 81–88 Blue Full - Macro (wheel slot 11) 89–96 Light Blue Full - Macro (wheel slot 12) 97–104 2800 White - Macro 105–112 3200 White - Macro 113–120 4000 White - Macro 121–128 5600 White - Macro 129–255 Empty - Custom

HSI

3 channels

Ch	Function	Default	DMX values
1	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSI Od/Ev

3 channels

Ch	Function	Default	DMX values
1	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSI Od/Ev Strobe On

3 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Od/Ev Strobe On (continued)

Ch	Function	Default	DMX values
3	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx1

3 channels

Ch	Function	Default	DMX values
1	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx1 Strobe On

3 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2

3 channels

Ch	Function	Default	DMX values
1	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2 Strobe On

3 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–254 STROBE · Min 255–255 STROBE · Max
2	Shutter / Strobe Fine	0	Fine byte of Shutter / Strobe
3	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx4

3 channels

Ch	Function	Default	DMX values
1	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB

3 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB Od/Ev

3 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB Od/Ev Strobe On

3 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx1

3 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx1 Strobe On

3 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2

3 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2 Strobe On

3 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx4

3 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA

4 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Od/Ev

4 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Od/Ev Strobe On

4 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Od/Ev Strobe On (continued)

Ch	Function	Default	DMX values
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1

4 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 Strobe On

4 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2

4 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe On

4 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4

4 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Od/Ev Strobe On Top 1

5 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx1 Strobe On Top

5 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max

HSIx1 Strobe On Top (continued)

Ch	Function	Default	DMX values
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2 Strobe On Top

5 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx4 Strobe On

5 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB Od/Ev Strobe On Top

5 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx1 Strobe On Top

5 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2 Strobe On Top

5 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx4 Strobe On

5 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

HSI Od/Ev Strobe On Top

6 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx1 Strobe Random

6 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx1 Strobe Random (continued)

Ch	Function	Default	DMX values
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2 Strobe Random

6 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB Od/Ev Strobe Random

6 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Od/Ev Strobe On Top

6 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 Strobe On Top

6 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe On Top

6 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe On Top (continued)

Ch	Function	Default	DMX values
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4 Strobe On

6 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBx1 Strobe Random

6 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2 Strobe Random

6 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Od/Ev Strobe Random

7 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 Strobe Random

7 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 Strobe Random (continued)

Ch	Function	Default	DMX values
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe Random

7 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx4 Strobe On Top

8 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx4 Strobe On Top (continued)

Ch	Function	Default	DMX values
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx4 Strobe On Top

8 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx4 Strobe Random

9 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx4 Strobe Random (continued)

Ch	Function	Default	DMX values
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx4 Strobe Random

9 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4 Strobe On Top

10 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4 Strobe Random

11 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 1–254 STROBE · Min > Max 255–255 STROBE · Max
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4 Strobe Random (continued)

Ch	Function	Default	DMX values
8	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max