
Chroma-Q

Color Force II 12 Plus

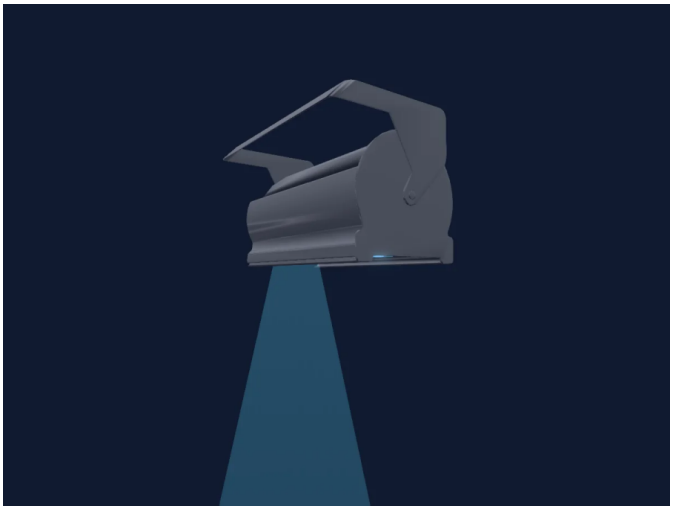

Manufacturer	**Chroma-Q**
Type	**PAR**
DMX modes	**49**
DMX footprint	**1, 3, 4, 5, 6, 8, 9, 10, 11, 12, 14, 15, 16, 17, 18, 22, 23 channels**
Beam angle	**26°**
Heads / cells	**5**
Size (W × H × D)	**336 × 136 × 189 mm**
GDTF fixture type	**2A86C2AF-4A08-11EF-9FDD-52…**

Controls

Extra LED colours · Hue and saturation · RGB colour mixing · Strobe · Dimmer · Pixel control

DMX modes

Look Sel	1 ch
HSIx4	3 ch
RGBx4	3 ch
RGBAx4	4 ch
HSIx4 Strobe On	5 ch
RGBx4 Strobe On	5 ch
HSI OdEv	6 ch
HSIx2	6 ch
RGB OdEv	6 ch
RGBAx4 Strobe On	6 ch
RGBx2	6 ch
HSI OdEv Strobe On	8 ch
HSIx2 Strobe On	8 ch
HSIx4 Strobe On Top	8 ch
RGB OdEv Strobe On	8 ch
RGBA OdEv	8 ch
RGBAx2	8 ch
RGBx2 Strobe On	8 ch
RGBx4 Strobe On Top	8 ch
HSIx4 Strobe Random	9 ch
RGBx4 Strobe Random	9 ch
RGBA OdEv Strobe On	10 ch
RGBAx2 Strobe On	10 ch
RGBAx4 Strobe On Top	10 ch
HSI Od/Ev Strobe On Top	11 ch
HSIx2 Strobe On Top	11 ch
RGB Od/Ev Strobe On Top	11 ch

RGBAx4 Strobe Random	11 ch
RGBx2 Strobe On Top	11 ch
HSI Od/Ev Strobe On Top	12 ch
HSIx1	12 ch
HSIx2 Strobe Random	12 ch
RGB Od/Ev Strobe Random	12 ch
RGBx1	12 ch
RGBx2 Strobe Random	12 ch
HSIx1 Strobe On	14 ch
RGBA Od/Ev Strobe On Top	14 ch
RGBAx2 Strobe On Top	14 ch
RGBx1 Strobe On	14 ch
RGBA Od/Ev Strobe Random	15 ch
RGBAx2 Strobe Random	15 ch
RGBAx1	16 ch
HSIx1 Strobe On Top	17 ch
RGBx1 Strobe On Top	17 ch
HSIx1 Strobe Random	18 ch
RGBAx1 Strobe On	18 ch
RGBx1 Strobe Random	18 ch
RGBAx1 Strobe On Top	22 ch
RGBAx1 Strobe Random	23 ch

Look Sel

1 channel

Ch	Function	Default	DMX values
1	Function	0	0–2 Off - Macro 3–7 Red Full - Macro (wheel slot 1) 8–14 Pink Full - Macro (wheel slot 2) 15–25 Orange Full - Macro (wheel slot 3) 26–30 Light Orange Full - Macro (wheel slot 4) 31–40 Yellow Full - Macro (wheel slot 5) 41–50 Light Yellow Full - Macro (wheel slot 6) 51–58 Green Full - Macro (wheel slot 7) 59–65 Light Green Full - Macro (wheel slot 8) 66–73 Cyan Full - Macro (wheel slot 9) 74–83 Light Cyan Full - Macro (wheel slot 10) 84–91 Blue Full - Macro (wheel slot 11) 92–98 Light Blue Full - Macro (wheel slot 12) 99–109 2800 White - Macro 110–116 3200 White - Macro 117–124 4000 White - Macro 125–132 5600 White - Macro 133–255 Empty - Custom

HSIx4

3 channels

Ch	Function	Default	DMX values
1	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx4

3 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4

4 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4 (continued)

Ch	Function	Default	DMX values
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx4 Strobe On

5 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx4 Strobe On

5 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

HSI OdEv

6 channels

Ch	Function	Default	DMX values
1	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI OdEv (continued)

Ch	Function	Default	DMX values
3	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2

6 channels

Ch	Function	Default	DMX values
1	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB OdEv

6 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB OdEv (continued)

Ch	Function	Default	DMX values
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4 Strobe On

6 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2

6 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

HSI OdEv Strobe On

8 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz

HSI OdEv Strobe On (continued)

Ch	Function	Default	DMX values
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2 Strobe On

8 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx4 Strobe On Top

8 channels

Ch	Function	Default	DMX values

HSIx4 Strobe On Top (continued)

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB OdEv Strobe On

8 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA OdEv

8 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
5	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2

8 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
5	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2 Strobe On

8 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx4 Strobe On Top

8 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx4 Strobe Random

9 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx4 Strobe Random

9 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx4 Strobe Random (continued)

Ch	Function	Default	DMX values
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA OdEv Strobe On

10 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe On

10 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe On (continued)

Ch	Function	Default	DMX values
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4 Strobe On Top

10 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Od/Ev Strobe On Top

11 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2 Strobe On Top

11 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2 Strobe On Top (continued)

Ch	Function	Default	DMX values
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB Od/Ev Strobe On Top

11 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4 Strobe Random

11 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
8	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2 Strobe On Top

11 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2 Strobe On Top (continued)

Ch	Function	Default	DMX values
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

HSI Od/Ev Strobe On Top

12 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx1

12 channels

Ch	Function	Default	DMX values
1	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2 Strobe Random

12 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2 Strobe Random (continued)

Ch	Function	Default	DMX values
6	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB Od/Ev Strobe Random

12 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB Od/Ev Strobe Random (continued)

Ch	Function	Default	DMX values
11	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx1

12 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2 Strobe Random

12 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz

RGBx2 Strobe Random (continued)

Ch	Function	Default	DMX values
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx1 Strobe On

14 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx1 Strobe On (continued)

Ch	Function	Default	DMX values
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
13	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
14	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Od/Ev Strobe On Top

14 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Od/Ev Strobe On Top (continued)

Ch	Function	Default	DMX values
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe On Top

14 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe On Top (continued)

Ch	Function	Default	DMX values
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBx1 Strobe On

14 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Od/Ev Strobe Random

15 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
8	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe Random

15 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe Random (continued)

Ch	Function	Default	DMX values
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
8	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1

16 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 (continued)

Ch	Function	Default	DMX values
5	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
13	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx1 Strobe On Top

17 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx1 Strobe On Top (continued)

Ch	Function	Default	DMX values
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
13	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
14	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
15	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
16	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
17	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx1 Strobe On Top

17 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx1 Strobe On Top (continued)

Ch	Function	Default	DMX values
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx1 Strobe Random

18 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx1 Strobe Random (continued)

Ch	Function	Default	DMX values
6	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
13	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
14	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
15	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max
16	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
17	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
18	H SBBrightness	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 Strobe On

18 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 Strobe On (continued)

Ch	Function	Default	DMX values
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBx1 Strobe Random

18 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBx1 Strobe Random (continued)

Ch	Function	Default	DMX values
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 Strobe On Top

22 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 Strobe On Top (continued)

Ch	Function	Default	DMX values
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
19	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 Strobe On Top (continued)

Ch	Function	Default	DMX values
21	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 Strobe Random

23 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Shutter1Strobe Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
8	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 Strobe Random (continued)

Ch	Function	Default	DMX values
16	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
20	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
21	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
23	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max