
Chroma-Q

Color Force II 48 Plus

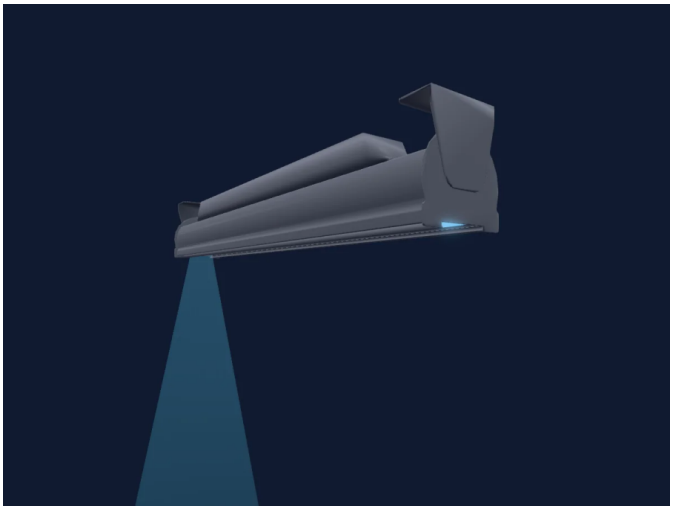

Manufacturer	**Chroma-Q**
Type	**PAR**
DMX modes	**97**
DMX footprint	**1, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 14, 15, 16, 17, 18, 22, 23, 24, 26, 29,**
Beam angle	**23.4°**
Heads / cells	**9**
Size (W × H × D)	**1187 × 136 × 139 mm**
GDTF fixture type	**EA20C447-4A7B-11EF-9FDD-52…**

Controls

Extra LED colours · Hue and saturation · RGB colour mixing · Colour wheel · Strobe · Dimmer · Pixel control

DMX modes

Look Sel	1 ch
HSIx1 Strobe Off	3 ch
HSIx1 Strobe On	3 ch
HSIx16 Strobe Off	3 ch
RGBx1 Strobe Off	3 ch
RGBx1 Strobe On	3 ch
RGBx16 Strobe Off	3 ch
RGBAx1 Strobe Off	4 ch
RGBAx1 Strobe On	4 ch
RGBAx16 Strobe Off	4 ch
HSIx1 Strobe On Top	5 ch
HSIx16 Strobe On	5 ch
RGBx1 Strobe On Top	5 ch
RGBx16 Strobe On	5 ch
HSI Od Ev Strobe Off	6 ch
HSIx1 Strobe Random	6 ch
HSIx8 Strobe Off	6 ch
RGB Od Ev Strobe Off	6 ch
RGBAx1 Strobe On Top	6 ch
RGBAx16 Strobe On	6 ch
RGBx1 Strobe Random	6 ch
RGBx8 Strobe Off	6 ch
RGBAx1 Strobe Random	7 ch
HSI Od Ev Strobe On	8 ch
HSIx16 Strobe On Top	8 ch
HSIx8 Strobe On	8 ch
RGB Od Ev Strobe On	8 ch

RGBA Od Ev Strobe Off	8 ch
RGBAx8 Strobe Off	8 ch
RGBx16 Strobe On Top	8 ch
RGBx8 Strobe On	8 ch
HSIx16 Strobe Random	9 ch
RGBx16 Strobe Random	9 ch
RGBA Od Ev Strobe On	10 ch
RGBAx16 Strobe On Top	10 ch
RGBAx8 Strobe On	10 ch
HSI Od Ev Strobe On Top	11 ch
HSIx8 Strobe On Top	11 ch
RGB Od Ev Strobe On Top	11 ch
RGBAx16 Strobe Random	11 ch
RGBx8 Strobe On Top	11 ch
HSI Od Ev Strobe Random	12 ch
HSI Skp3 Strobe Off	12 ch
HSIx4 Strobe Off	12 ch
HSIx8 Strobe Random	12 ch
RGB Od Ev Strobe Random	12 ch
RGB Skp3 Strobe Off	12 ch
RGBx4 Strobe Off	12 ch
RGBx8 Strobe Random	12 ch
HSI Skp3 Strobe On	14 ch
HSIx4 Strobe On	14 ch
RGB Skp3 Strobe On	14 ch
RGBA Od Ev Strobe On Top	14 ch
RGBAx8 Strobe On Top	14 ch
RGBx4 Strobe On	14 ch
RGBA Od Ev Strobe Random	15 ch
RGBAx8 Strobe Random	15 ch
RGBA Skp3 Strobe Off	16 ch
RGBAx4 Strobe Off	16 ch
HSI Skp3 Strobe On Top	17 ch
HSIx4 Strobe On Top	17 ch
RGB Skp3 Strobe On Top	17 ch
RGBx4 Strobe On Top	17 ch
HSI Skp3 Strobe Random	18 ch
HSIx4 Strobe Random	18 ch
RGB Skp3 Strobe Random	18 ch
RGBA Skp3 Strobe On	18 ch
RGBAx4 Strobe On	18 ch
RGBx4 Strobe Random	18 ch
RGBA Skp3 Strobe On Top	22 ch
RGBAx4 Strobe On Top	22 ch
RGBA Skp3 Strobe Random	23 ch
RGBAx4 Strobe Random	23 ch
HSI Skp7 Strobe Off	24 ch
HSIx2 Strobe Off	24 ch
RGB Skp7 Strobe Off	24 ch
RGBx2 Strobe Off	24 ch
HSI Skp7 Strobe On	26 ch

HSIx2 Strobe On	26 ch
RGB Skp7 Strobe On	26 ch
RGBx2Strobe On	26 ch
HSI Skp7 Strobe On Top	29 ch
HSIx2 Strobe On Top	29 ch
RGB Skp7 Strobe On Top	29 ch
RGBx2 Strobe On Top	29 ch
HSI Skp7 Strobe Random	30 ch
HSIx2 Strobe Random	30 ch
RGB Skp7 Strobe Random	30 ch
RGBx2 Strobe Random	30 ch
RGBA Skp7 Strobe Off	32 ch
RGBAx2 Strobe Off	32 ch
RGBA Skp7 Strobe On	34 ch
RGBAx2Strobe On	34 ch
RGBA Skp7 Strobe On Top	38 ch
RGBAx2 Strobe On Top	38 ch
RGBA Skp7 Strobe Random	39 ch
RGBAx2 Strobe Random	39 ch

Look Sel

1 channel

Ch	Function	Default	DMX values
1	Color Macro1	0	0–0 Off - Macro 1–8 Red Full - Macro 9–16 Pink Full - Macro 17–24 Orange Full - Macro 25–32 Light Orange Full - Macro 33–40 Yellow Full - Macro 41–48 Light Yellow Full - Macro 49–56 Green Full - Macro 57–64 Light Green Full - Macro 65–72 Cyan Full - Macro 73–80 Light Cyan Full - Macro 81–88 Blue Full - Macro 89–96 Light Blue Full - Macro 97–104 2800 White - Macro 105–112 3200 White - Macro 113–120 4000 White - Macro 121–128 5600 White - Macro 129–255 Empty - Custom

HSIx1 Strobe Off

3 channels

Ch	Function	Default	DMX values
1	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx1 Strobe On

3 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx16 Strobe Off

3 channels

Ch	Function	Default	DMX values
1	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx16 Strobe Off (continued)

Ch	Function	Default	DMX values
3	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBx1 Strobe Off

3 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx1 Strobe On

3 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx16 Strobe Off

3 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 Strobe Off

4 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 Strobe Off (continued)

Ch	Function	Default	DMX values
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 Strobe On

4 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx16 Strobe Off

4 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx1 Strobe On Top

5 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx1 Strobe On Top (continued)

Ch	Function	Default	DMX values
5	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx16 Strobe On

5 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBx1 Strobe On Top

5 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx16 Strobe On

5 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx16 Strobe On (continued)

Ch	Function	Default	DMX values
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

HSI Od Ev Strobe Off

6 channels

Ch	Function	Default	DMX values
1	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx1 Strobe Random

6 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx8 Strobe Off

6 channels

Ch	Function	Default	DMX values
1	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

RGB Od Ev Strobe Off

6 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 Strobe On Top

6 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 Strobe On Top (continued)

Ch	Function	Default	DMX values
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx16 Strobe On

6 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBx1 Strobe Random

6 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx8 Strobe Off

6 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx1 Strobe Random

7 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Od Ev Strobe On

8 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Od Ev Strobe On (continued)

Ch	Function	Default	DMX values
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx16 Strobe On Top

8 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx8 Strobe On

8 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz

HSIx8 Strobe On (continued)

Ch	Function	Default	DMX values
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

RGB Od Ev Strobe On

8 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Od Ev Strobe Off

8 channels

Ch	Function	Default	DMX values

RGBA Od Ev Strobe Off (continued)

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
5	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx8 Strobe Off

8 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
5	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBx16 Strobe On Top

8 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx8 Strobe On

8 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

HSIx16 Strobe Random

9 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBx16 Strobe Random

9 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx16 Strobe Random (continued)

Ch	Function	Default	DMX values
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Od Ev Strobe On

10 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx16 Strobe On Top

10 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx16 Strobe On Top (continued)

Ch	Function	Default	DMX values
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx8 Strobe On

10 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Od Ev Strobe On Top

11 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx8 Strobe On Top

11 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx8 Strobe On Top (continued)

Ch	Function	Default	DMX values
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

RGB Od Ev Strobe On Top

11 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx16 Strobe Random

11 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
8	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBx8 Strobe On Top

11 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx8 Strobe On Top (continued)

Ch	Function	Default	DMX values
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

HSI Od Ev Strobe Random

12 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Skp3 Strobe Off

12 channels

Ch	Function	Default	DMX values
1	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx4 Strobe Off

12 channels

Ch	Function	Default	DMX values
1	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx4 Strobe Off (continued)

Ch	Function	Default	DMX values
6	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx8 Strobe Random

12 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx8 Strobe Random (continued)

Ch	Function	Default	DMX values
11	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

RGB Od Ev Strobe Random

12 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp3 Strobe Off

12 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp3 Strobe Off (continued)

Ch	Function	Default	DMX values
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx4 Strobe Off

12 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx4 Strobe Off (continued)

Ch	Function	Default	DMX values
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx8 Strobe Random

12 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx8 Strobe Random (continued)

Ch	Function	Default	DMX values
12	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

HSI Skp3 Strobe On

14 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
13	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
14	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx4 Strobe On

14 channels

Ch	Function	Default	DMX values

HSIx4 Strobe On (continued)

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
13	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
14	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp3 Strobe On

14 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp3 Strobe On (continued)

Ch	Function	Default	DMX values
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Od Ev Strobe On Top

14 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Od Ev Strobe On Top (continued)

Ch	Function	Default	DMX values
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx8 Strobe On Top

14 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx8 Strobe On Top (continued)

Ch	Function	Default	DMX values
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBx4 Strobe On

14 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx4 Strobe On (continued)

Ch	Function	Default	DMX values
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Od Ev Strobe Random

15 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
8	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx8 Strobe Random

15 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
8	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp3 Strobe Off

16 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp3 Strobe Off (continued)

Ch	Function	Default	DMX values
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
5	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
13	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4 Strobe Off

16 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4 Strobe Off (continued)

Ch	Function	Default	DMX values
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
5	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
13	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Skp3 Strobe On Top

17 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Skp3 Strobe On Top (continued)

Ch	Function	Default	DMX values
5	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
13	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
14	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
15	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
16	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
17	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx4 Strobe On Top

17 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx4 Strobe On Top (continued)

Ch	Function	Default	DMX values
5	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
13	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
14	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
15	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
16	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
17	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp3 Strobe On Top

17 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp3 Strobe On Top (continued)

Ch	Function	Default	DMX values
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx4 Strobe On Top

17 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx4 Strobe On Top (continued)

Ch	Function	Default	DMX values
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

HSI Skp3 Strobe Random

18 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Skp3 Strobe Random (continued)

Ch	Function	Default	DMX values
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
13	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
14	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
15	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
16	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
17	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
18	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx4 Strobe Random

18 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx4 Strobe Random (continued)

Ch	Function	Default	DMX values
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
13	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
14	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
15	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
16	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
17	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
18	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp3 Strobe Random

18 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp3 Strobe Random (continued)

Ch	Function	Default	DMX values
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp3 Strobe On

18 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz

RGBA Skp3 Strobe On (continued)

Ch	Function	Default	DMX values
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4 Strobe On

18 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBx4 Strobe Random

18 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp3 Strobe On Top

22 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp3 Strobe On Top (continued)

Ch	Function	Default	DMX values
19	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
21	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4 Strobe On Top

22 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4 Strobe On Top (continued)

Ch	Function	Default	DMX values
14	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
19	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
21	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp3 Strobe Random

23 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
8	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp3 Strobe Random (continued)

Ch	Function	Default	DMX values
9	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
16	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
20	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
21	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
23	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4 Strobe Random

23 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4 Strobe Random (continued)

Ch	Function	Default	DMX values
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
8	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
16	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
20	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx4 Strobe Random (continued)

Ch	Function	Default	DMX values
21	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
23	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Skp7 Strobe Off

24 channels

Ch	Function	Default	DMX values
1	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
13	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
14	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Skp7 Strobe Off (continued)

Ch	Function	Default	DMX values
15	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
16	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
17	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
18	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
19	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
20	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
21	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
22	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
23	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
24	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2 Strobe Off

24 channels

Ch	Function	Default	DMX values
1	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
2	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2 Strobe Off (continued)

Ch	Function	Default	DMX values
8	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
13	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
14	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
15	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
16	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
17	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
18	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
19	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
20	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
21	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
22	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
23	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
24	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp7 Strobe Off

24 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp7 Strobe Off (continued)

Ch	Function	Default	DMX values
19	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
21	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
23	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2 Strobe Off

24 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2 Strobe Off (continued)

Ch	Function	Default	DMX values
12	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
21	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
23	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

HSI Skp7 Strobe On

26 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Skp7 Strobe On (continued)

Ch	Function	Default	DMX values
5	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
13	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
14	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
15	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
16	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
17	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
18	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
19	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
20	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
21	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
22	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Skp7 Strobe On (continued)

Ch	Function	Default	DMX values
23	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
24	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
25	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
26	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2 Strobe On

26 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
13	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2 Strobe On (continued)

Ch	Function	Default	DMX values
14	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
15	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
16	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
17	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
18	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
19	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
20	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
21	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
22	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
23	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
24	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
25	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
26	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp7 Strobe On

26 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp7 Strobe On (continued)

Ch	Function	Default	DMX values
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
21	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp7 Strobe On (continued)

Ch	Function	Default	DMX values
23	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
25	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
26	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2Strobe On

26 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2Strobe On (continued)

Ch	Function	Default	DMX values
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
21	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
23	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
25	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
26	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

HSI Skp7 Strobe On Top

29 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Skp7 Strobe On Top (continued)

Ch	Function	Default	DMX values
5	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
13	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
14	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
15	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
16	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
17	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
18	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
19	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
20	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
21	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
22	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Skp7 Strobe On Top (continued)

Ch	Function	Default	DMX values
23	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
24	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
25	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
26	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
27	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
28	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
29	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2 Strobe On Top

29 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2 Strobe On Top (continued)

Ch	Function	Default	DMX values
11	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
13	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
14	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
15	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
16	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
17	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
18	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
19	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
20	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
21	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
22	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
23	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
24	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
25	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
26	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
27	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
28	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2 Strobe On Top (continued)

Ch	Function	Default	DMX values
29	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp7 Strobe On Top

29 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp7 Strobe On Top (continued)

Ch	Function	Default	DMX values
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
21	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
23	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
25	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
26	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
27	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
28	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
29	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2 Strobe On Top

29 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2 Strobe On Top (continued)

Ch	Function	Default	DMX values
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
21	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2 Strobe On Top (continued)

Ch	Function	Default	DMX values
23	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
25	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
26	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
27	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
28	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
29	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

HSI Skp7 Strobe Random

30 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Skp7 Strobe Random (continued)

Ch	Function	Default	DMX values
11	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
13	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
14	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
15	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
16	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
17	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
18	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
19	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
20	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
21	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
22	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
23	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
24	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
25	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
26	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
27	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
28	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max

HSI Skp7 Strobe Random (continued)

Ch	Function	Default	DMX values
29	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
30	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2 Strobe Random

30 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
5	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
6	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
7	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
8	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
11	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
12	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
13	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
14	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
15	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

HSIx2 Strobe Random (continued)

Ch	Function	Default	DMX values
16	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
17	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
18	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
19	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
20	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
21	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
22	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
23	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
24	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
25	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
26	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
27	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max
28	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
29	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
30	H SBBrightness	0	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp7 Strobe Random

30 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp7 Strobe Random (continued)

Ch	Function	Default	DMX values
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGB Skp7 Strobe Random (continued)

Ch	Function	Default	DMX values
21	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
23	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
25	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
26	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
27	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
28	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
29	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
30	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2 Strobe Random

30 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2 Strobe Random (continued)

Ch	Function	Default	DMX values
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
21	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
23	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
25	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBx2 Strobe Random (continued)

Ch	Function	Default	DMX values
26	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
27	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
28	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
29	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
30	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp7 Strobe Off

32 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
5	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp7 Strobe Off (continued)

Ch	Function	Default	DMX values
13	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
17	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
21	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
23	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
25	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
26	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
27	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
28	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
29	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
30	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp7 Strobe Off (continued)

Ch	Function	Default	DMX values
31	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
32	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe Off

32 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
5	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
13	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe Off (continued)

Ch	Function	Default	DMX values
16	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
17	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
21	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
23	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
25	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
26	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
27	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
28	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
29	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
30	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
31	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
32	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp7 Strobe On

34 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp7 Strobe On (continued)

Ch	Function	Default	DMX values
19	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
21	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
23	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
25	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
26	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
27	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
28	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
29	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
30	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
31	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
32	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
33	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
34	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2Strobe On

34 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz

RGBAx2Strobe On (continued)

Ch	Function	Default	DMX values
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
19	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2Strobe On (continued)

Ch	Function	Default	DMX values
20	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
21	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
23	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
25	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
26	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
27	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
28	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
29	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
30	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
31	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
32	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
33	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
34	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp7 Strobe On Top

38 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp7 Strobe On Top (continued)

Ch	Function	Default	DMX values
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
19	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp7 Strobe On Top (continued)

Ch	Function	Default	DMX values
21	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
23	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
25	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
26	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
27	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
28	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
29	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
30	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
31	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
32	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
33	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
34	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
35	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
36	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
37	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
38	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe On Top

38 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
15	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe On Top (continued)

Ch	Function	Default	DMX values
19	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
21	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
23	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
25	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
26	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
27	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
28	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
29	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
30	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
31	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
32	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
33	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
34	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
35	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
36	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe On Top (continued)

Ch	Function	Default	DMX values
37	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
38	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp7 Strobe Random

39 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
8	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp7 Strobe Random (continued)

Ch	Function	Default	DMX values
16	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
20	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
21	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
23	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
24	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
25	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
26	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
27	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
28	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
29	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
30	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
31	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
32	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
33	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBA Skp7 Strobe Random (continued)

Ch	Function	Default	DMX values
34	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
35	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
36	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
37	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
38	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
39	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe Random

39 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–0 STROBE · Min 0.1 Hz 1–254 STROBE · Min > Max 0.178–19.9 Hz 255–255 STROBE · Max 20 Hz
2	Strobe Duration	0	0–0 Min 1–254 Min > Max 255–255 Max
3	Strobe Mode Random	0	0–0 Min 1–254 Min > Max 255–255 Max
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
8	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe Random (continued)

Ch	Function	Default	DMX values
12	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
16	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
20	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
21	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
23	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
24	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
25	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
26	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
27	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
28	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
29	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

RGBAx2 Strobe Random (continued)

Ch	Function	Default	DMX values
30	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
31	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
32	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
33	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
34	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
35	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max
36	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
37	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
38	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
39	Color Add RY	0	0–0 Min 1–254 Min > Max 255–255 Max