
CKC Lighting

FC Profile 200

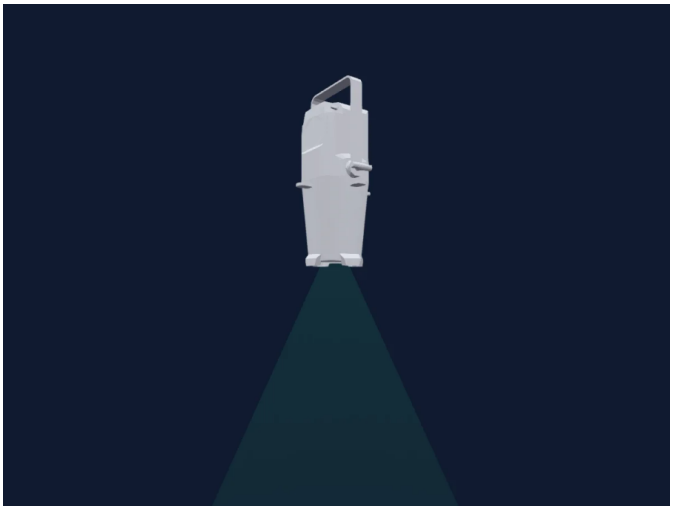

Manufacturer	**CKC Lighting**
Type	**Profile spot**
DMX modes	**10**
DMX footprint	**1, 3, 5, 6, 7, 9, 10, 11, 15, 19 channels**
Beam angle	**50°**
Size (W × H × D)	**260 × 281 × 64 mm**
GDTF fixture type	**F4A004F9-2BE4-4BB9-A4E3-1C…**

Controls

Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Strobe · Dimmer

Safety-relevant functions

Strobe

DMX modes

Dimmer 1CH	1 ch
Dimmer/ CCT 3CH	3 ch
RGB 5CH	5 ch
Dimmer Color 6CH	6 ch
IRGBMA 7CH	7 ch
CMY 9CH	9 ch
RGBMA 10CH	10 ch
Standard 11CH	11 ch
CMY Extended 15CH	15 ch
Extended 19CH	19 ch

Dimmer 1CH

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent

Dimmer/ CCT 3CH

3 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TO	0	

RGB 5CH

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
2	Shutter / Strobe	50	0–31 Shutter Closed 32–63 No Function (Shutter Open) 64–95 Strobe Effect Slow to Fast 96–127 No Function (Shutter Open) 128–159 Pulse-Effect in Sequences 160–191 No Function (Shutter Open) 192–223 Random Strobe Effect Slow to Fast 224–255 No Function (Shutter Open)
3	Red	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
4	Green	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
5	Blue	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent

Dimmer Color 6CH

6 channels

Ch	Function	Default	DMX values

Dimmer Color 6CH (continued)

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	50	0–31 Shutter Closed 32–63 No Function (Shutter Open) 64–95 Strobe Effect Slow to Fast 96–127 No Function (Shutter Open) 128–159 Pulse-Effect in Sequences 160–191 No Function (Shutter Open) 192–223 Random Strobe Effect Slow to Fast 224–255 No Function (Shutter Open)
4	C TO	0	

Dimmer Color 6CH (continued)

Ch	Function	Default	DMX values
5	Color Wheel	0	0–0 Open (wheel slot 61) 1–1 Pale Yellow (wheel slot 1) 2–2 Straw (wheel slot 2) 3–3 Gold Tint (wheel slot 3) 4–4 Spring Yellow (wheel slot 4) 5–5 Medium Yellow (wheel slot 5) 6–6 Yellow (wheel slot 6) 7–7 Deep Amber (wheel slot 7) 8–8 Deep Straw (wheel slot 8) 9–9 Loving Amber (wheel slot 9) 10–10 Gold Amber (wheel slot 10) 11–11 Orange (wheel slot 11) 12–12 Deep Orange (wheel slot 12) 13–13 Dark Amber (wheel slot 13) 14–14 Millennium Gold (wheel slot 14) 15–15 Deep Golden Amber (wheel slot 15) 16–16 Scarlet (wheel slot 16) 17–17 Primary Red (wheel slot 17) 18–18 Bright Red (wheel slot 18) 19–19 Medium Red (wheel slot 19) 20–20 Fire (wheel slot 20) 21–21 Pink (wheel slot 21) 22–22 Medium Pink (wheel slot 22) 23–23 Dark Pink (wheel slot 23) 24–24 Bright Pink (wheel slot 24) 25–25 Bright Rose (wheel slot 25) 26–26 Special Rose Pink (wheel slot 26) 27–27 Vanity Fair (wheel slot 27) 28–28 Magenta (wheel slot 28) 29–29 Dark Magenta (wheel slot 29) 30–30 Rose Purple (wheel slot 30) 31–31 Mauve (wheel slot 31) 32–32 Medium Purple (wheel slot 32) 33–33 Lavender (wheel slot 33) 34–34 Palace blue (wheel slot 34) 35–35 Dark Blue (wheel slot 35) 36–36 Medium Blue (wheel slot 36) 37–37 Deep Blue (wheel slot 37) 38–38 Daylight Blue (wheel slot 38) 39–39 Slate Blue (wheel slot 39) 40–40 Light Blue (wheel slot 40) 41–41 Sky Blue (wheel slot 41) 42–42 Pale Navy Blue (wheel slot 42) 43–43 Marine Blue (wheel slot 43) 44–44 Peacock Blue (wheel slot 44) 45–45 Lagoon Blue (wheel slot 45) 46–46 Medium Blue Green (wheel slot 46) 47–47 Dark Yellow Green (wheel slot 47) 48–48 Primary Green (wheel slot 48) 49–49 Fern Green (wheel slot 49) 50–50 Moss Green (wheel slot 50) 51–51 Dark Green (wheel slot 51) 52–52 Lime Green (wheel slot 52) 53–53 Pale Green (wheel slot 53) 54–54 Quarter CT Blue (wheel slot 54) 55–55 Half CT Blue (wheel slot 55) 56–56 Full CT Blue (wheel slot 56) 57–57 Double CT Blue (wheel slot 57) 58–58 Quarter CT Orange (wheel slot 58) 59–59 Half CT Orange (wheel slot 59) 60–60 Full CT Orange (wheel slot 60) 61–179 No Function (wheel slot 61) 180–201 CW fast to slow 202–207 Stop

Dimmer Color 6CH (continued)

Ch	Function	Default	DMX values
6	Control1	0	

IRGBMA 7CH

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
2	Shutter / Strobe	50	0–31 Shutter Closed 32–63 No Function (Shutter Open) 64–95 Strobe Effect Slow to Fast 96–127 No Function (Shutter Open) 128–159 Pulse-Effect in Sequences 160–191 No Function (Shutter Open) 192–223 Random Strobe Effect Slow to Fast 224–255 No Function (Shutter Open)
3	Red	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
4	Green	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
5	Blue	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
6	Color Add GY	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
7	Color Add RY	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent

CMY 9CH

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
2	Dimmer Fine	0	Fine byte of Dimmer

CMY 9CH (continued)

Ch	Function	Default	DMX values
3	Shutter / Strobe	50	0–31 Shutter Closed 32–63 No Function (Shutter Open) 64–95 Strobe Effect Slow to Fast 96–127 No Function (Shutter Open) 128–159 Pulse-Effect in Sequences 160–191 No Function (Shutter Open) 192–223 Random Strobe Effect Slow to Fast 224–255 No Function (Shutter Open)
4	Color Add C	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
5	Color Add M	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
6	Color Add Y	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
7	C TO	0	

CMY 9CH (continued)

Ch	Function	Default	DMX values
8	Color Wheel	0	0–0 Open (wheel slot 61) 1–1 Pale Yellow (wheel slot 1) 2–2 Straw (wheel slot 2) 3–3 Gold Tint (wheel slot 3) 4–4 Spring Yellow (wheel slot 4) 5–5 Medium Yellow (wheel slot 5) 6–6 Yellow (wheel slot 6) 7–7 Deep Amber (wheel slot 7) 8–8 Deep Straw (wheel slot 8) 9–9 Loving Amber (wheel slot 9) 10–10 Gold Amber (wheel slot 10) 11–11 Orange (wheel slot 11) 12–12 Deep Orange (wheel slot 12) 13–13 Dark Amber (wheel slot 13) 14–14 Millennium Gold (wheel slot 14) 15–15 Deep Golden Amber (wheel slot 15) 16–16 Scarlet (wheel slot 16) 17–17 Primary Red (wheel slot 17) 18–18 Bright Red (wheel slot 18) 19–19 Medium Red (wheel slot 19) 20–20 Fire (wheel slot 20) 21–21 Pink (wheel slot 21) 22–22 Medium Pink (wheel slot 22) 23–23 Dark Pink (wheel slot 23) 24–24 Bright Pink (wheel slot 24) 25–25 Bright Rose (wheel slot 25) 26–26 Special Rose Pink (wheel slot 26) 27–27 Vanity Fair (wheel slot 27) 28–28 Magenta (wheel slot 28) 29–29 Dark Magenta (wheel slot 29) 30–30 Rose Purple (wheel slot 30) 31–31 Mauve (wheel slot 31) 32–32 Medium Purple (wheel slot 32) 33–33 Lavender (wheel slot 33) 34–34 Palace blue (wheel slot 34) 35–35 Dark Blue (wheel slot 35) 36–36 Medium Blue (wheel slot 36) 37–37 Deep Blue (wheel slot 37) 38–38 Daylight Blue (wheel slot 38) 39–39 Slate Blue (wheel slot 39) 40–40 Light Blue (wheel slot 40) 41–41 Sky Blue (wheel slot 41) 42–42 Pale Navy Blue (wheel slot 42) 43–43 Marine Blue (wheel slot 43) 44–44 Peacock Blue (wheel slot 44) 45–45 Lagoon Blue (wheel slot 45) 46–46 Medium Blue Green (wheel slot 46) 47–47 Dark Yellow Green (wheel slot 47) 48–48 Primary Green (wheel slot 48) 49–49 Fern Green (wheel slot 49) 50–50 Moss Green (wheel slot 50) 51–51 Dark Green (wheel slot 51) 52–52 Lime Green (wheel slot 52) 53–53 Pale Green (wheel slot 53) 54–54 Quarter CT Blue (wheel slot 54) 55–55 Half CT Blue (wheel slot 55) 56–56 Full CT Blue (wheel slot 56) 57–57 Double CT Blue (wheel slot 57) 58–58 Quarter CT Orange (wheel slot 58) 59–59 Half CT Orange (wheel slot 59) 60–60 Full CT Orange (wheel slot 60) 61–179 No Function (wheel slot 61) 180–201 CW fast to slow 202–207 Stop

CMY 9CH (continued)

Ch	Function	Default	DMX values
9	Control1	0	

RGBMA 10CH

10 channels

Ch	Function	Default	DMX values
1	Red	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
2	Red Fine	0	Fine byte of Red
3	Green	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
4	Green Fine	0	Fine byte of Green
5	Blue	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
6	Blue Fine	0	Fine byte of Blue
7	Color Add GY	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
8	Color Add GY Fine	0	Fine byte of Color Add GY
9	Color Add RY	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
10	Color Add RY Fine	0	Fine byte of Color Add RY

Standard 11CH

11 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	50	0–31 Shutter Closed 32–63 No Function (Shutter Open) 64–95 Strobe Effect Slow to Fast 96–127 No Function (Shutter Open) 128–159 Pulse-Effect in Sequences 160–191 No Function (Shutter Open) 192–223 Random Strobe Effect Slow to Fast 224–255 No Function (Shutter Open)

Standard 11CH (continued)

Ch	Function	Default	DMX values
4	Red	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
5	Green	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
6	Blue	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
7	Color Add GY	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
8	Color Add RY	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
9	C TO	0	

Standard 11CH (continued)

Ch	Function	Default	DMX values
10	Color Wheel	0	0–0 Open (wheel slot 61) 1–1 Pale Yellow (wheel slot 1) 2–2 Straw (wheel slot 2) 3–3 Gold Tint (wheel slot 3) 4–4 Spring Yellow (wheel slot 4) 5–5 Medium Yellow (wheel slot 5) 6–6 Yellow (wheel slot 6) 7–7 Deep Amber (wheel slot 7) 8–8 Deep Straw (wheel slot 8) 9–9 Loving Amber (wheel slot 9) 10–10 Gold Amber (wheel slot 10) 11–11 Orange (wheel slot 11) 12–12 Deep Orange (wheel slot 12) 13–13 Dark Amber (wheel slot 13) 14–14 Millennium Gold (wheel slot 14) 15–15 Deep Golden Amber (wheel slot 15) 16–16 Scarlet (wheel slot 16) 17–17 Primary Red (wheel slot 17) 18–18 Bright Red (wheel slot 18) 19–19 Medium Red (wheel slot 19) 20–20 Fire (wheel slot 20) 21–21 Pink (wheel slot 21) 22–22 Medium Pink (wheel slot 22) 23–23 Dark Pink (wheel slot 23) 24–24 Bright Pink (wheel slot 24) 25–25 Bright Rose (wheel slot 25) 26–26 Special Rose Pink (wheel slot 26) 27–27 Vanity Fair (wheel slot 27) 28–28 Magenta (wheel slot 28) 29–29 Dark Magenta (wheel slot 29) 30–30 Rose Purple (wheel slot 30) 31–31 Mauve (wheel slot 31) 32–32 Medium Purple (wheel slot 32) 33–33 Lavender (wheel slot 33) 34–34 Palace blue (wheel slot 34) 35–35 Dark Blue (wheel slot 35) 36–36 Medium Blue (wheel slot 36) 37–37 Deep Blue (wheel slot 37) 38–38 Daylight Blue (wheel slot 38) 39–39 Slate Blue (wheel slot 39) 40–40 Light Blue (wheel slot 40) 41–41 Sky Blue (wheel slot 41) 42–42 Pale Navy Blue (wheel slot 42) 43–43 Marine Blue (wheel slot 43) 44–44 Peacock Blue (wheel slot 44) 45–45 Lagoon Blue (wheel slot 45) 46–46 Medium Blue Green (wheel slot 46) 47–47 Dark Yellow Green (wheel slot 47) 48–48 Primary Green (wheel slot 48) 49–49 Fern Green (wheel slot 49) 50–50 Moss Green (wheel slot 50) 51–51 Dark Green (wheel slot 51) 52–52 Lime Green (wheel slot 52) 53–53 Pale Green (wheel slot 53) 54–54 Quarter CT Blue (wheel slot 54) 55–55 Half CT Blue (wheel slot 55) 56–56 Full CT Blue (wheel slot 56) 57–57 Double CT Blue (wheel slot 57) 58–58 Quarter CT Orange (wheel slot 58) 59–59 Half CT Orange (wheel slot 59) 60–60 Full CT Orange (wheel slot 60) 61–179 No Function (wheel slot 61) 180–201 CW fast to slow 202–207 Stop

Standard 11CH (continued)

Ch	Function	Default	DMX values
11	Control1	0	

CMY Extended 15CH

15 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	50	0–31 Shutter Closed 32–63 No Function (Shutter Open) 64–95 Strobe Effect Slow to Fast 96–127 No Function (Shutter Open) 128–159 Pulse-Effect in Sequences 160–191 No Function (Shutter Open) 192–223 Random Strobe Effect Slow to Fast 224–255 No Function (Shutter Open)
4	Color Add C	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
5	Color Add C Fine	0	Fine byte of Color Add C
6	Color Add M	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
7	Color Add M Fine	0	Fine byte of Color Add M
8	Color Add Y	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
9	Color Add Y Fine	0	Fine byte of Color Add Y
10	C TO	0	0–23 No Function 24–255 2400K to 8500K
11	C TO Fine	0	Fine byte of C TO
12	Tint	128	0–0 Idle 1–127 Full Minus Green to Neutral 128–128 Neutral White 129–255 Neutral to Full Plus Green

CMY Extended 15CH (continued)

Ch	Function	Default	DMX values
13	Color Wheel	0	0–0 Open (wheel slot 61) 1–1 Pale Yellow (wheel slot 1) 2–2 Straw (wheel slot 2) 3–3 Gold Tint (wheel slot 3) 4–4 Spring Yellow (wheel slot 4) 5–5 Medium Yellow (wheel slot 5) 6–6 Yellow (wheel slot 6) 7–7 Deep Amber (wheel slot 7) 8–8 Deep Straw (wheel slot 8) 9–9 Loving Amber (wheel slot 9) 10–10 Gold Amber (wheel slot 10) 11–11 Orange (wheel slot 11) 12–12 Deep Orange (wheel slot 12) 13–13 Dark Amber (wheel slot 13) 14–14 Millennium Gold (wheel slot 14) 15–15 Deep Golden Amber (wheel slot 15) 16–16 Scarlet (wheel slot 16) 17–17 Primary Red (wheel slot 17) 18–18 Bright Red (wheel slot 18) 19–19 Medium Red (wheel slot 19) 20–20 Fire (wheel slot 20) 21–21 Pink (wheel slot 21) 22–22 Medium Pink (wheel slot 22) 23–23 Dark Pink (wheel slot 23) 24–24 Bright Pink (wheel slot 24) 25–25 Bright Rose (wheel slot 25) 26–26 Special Rose Pink (wheel slot 26) 27–27 Vanity Fair (wheel slot 27) 28–28 Magenta (wheel slot 28) 29–29 Dark Magenta (wheel slot 29) 30–30 Rose Purple (wheel slot 30) 31–31 Mauve (wheel slot 31) 32–32 Medium Purple (wheel slot 32) 33–33 Lavender (wheel slot 33) 34–34 Palace blue (wheel slot 34) 35–35 Dark Blue (wheel slot 35) 36–36 Medium Blue (wheel slot 36) 37–37 Deep Blue (wheel slot 37) 38–38 Daylight Blue (wheel slot 38) 39–39 Slate Blue (wheel slot 39) 40–40 Light Blue (wheel slot 40) 41–41 Sky Blue (wheel slot 41) 42–42 Pale Navy Blue (wheel slot 42) 43–43 Marine Blue (wheel slot 43) 44–44 Peacock Blue (wheel slot 44) 45–45 Lagoon Blue (wheel slot 45) 46–46 Medium Blue Green (wheel slot 46) 47–47 Dark Yellow Green (wheel slot 47) 48–48 Primary Green (wheel slot 48) 49–49 Fern Green (wheel slot 49) 50–50 Moss Green (wheel slot 50) 51–51 Dark Green (wheel slot 51) 52–52 Lime Green (wheel slot 52) 53–53 Pale Green (wheel slot 53) 54–54 Quarter CT Blue (wheel slot 54) 55–55 Half CT Blue (wheel slot 55) 56–56 Full CT Blue (wheel slot 56) 57–57 Double CT Blue (wheel slot 57) 58–58 Quarter CT Orange (wheel slot 58) 59–59 Half CT Orange (wheel slot 59) 60–60 Full CT Orange (wheel slot 60) 61–179 No Function (wheel slot 61) 180–201 CW fast to slow 202–207 Stop

CMY Extended 15CH (continued)

Ch	Function	Default	DMX values
14	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–120 Stage 2 121–121 0s Delay 122–122 0/1s Delay 123–123 0/2s Delay 124–124 0/3s Delay 125–125 0/4s Delay 126–126 0/5s Delay 127–127 0/6s Delay 128–128 0/7s Delay 129–129 0/8s Delay 130–130 0/9s Delay 131–131 1s Delay 132–132 1/5s Delay 133–133 2s Delay 134–134 3s Delay 135–135 4s Delay 136–136 5s Delay 137–137 6s Delay 138–138 7s Delay 139–139 8s Delay 140–140 9s Delay 141–141 10s Delay 142–149 Idle 150–154 DTW On 155–159 DTW Off 160–255 Idle
15	Control1	0	

Extended 19CH

19 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	50	0–31 Shutter Closed 32–63 No Function (Shutter Open) 64–95 Strobe Effect Slow to Fast 96–127 No Function (Shutter Open) 128–159 Pulse-Effect in Sequences 160–191 No Function (Shutter Open) 192–223 Random Strobe Effect Slow to Fast 224–255 No Function (Shutter Open)
4	Red	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
5	Red Fine	255	Fine byte of Red

Extended 19CH (continued)

Ch	Function	Default	DMX values
6	Green	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
7	Green Fine	255	Fine byte of Green
8	Blue	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
9	Blue Fine	255	Fine byte of Blue
10	Color Add GY	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
11	Color Add GY Fine	255	Fine byte of Color Add GY
12	Color Add RY	255	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
13	Color Add RY Fine	255	Fine byte of Color Add RY
14	C TO	0	0–23 No Function 24–255 2400K to 8500K
15	C TO Fine	0	Fine byte of C TO
16	Tint	128	0–0 Idle 1–127 Full Minus Green to Neutral 128–128 Neutral White 129–255 Neutral to Full Plus Green

Extended 19CH (continued)

Ch	Function	Default	DMX values
17	Color Wheel	0	0–0 Open (wheel slot 61) 1–1 Pale Yellow (wheel slot 1) 2–2 Straw (wheel slot 2) 3–3 Gold Tint (wheel slot 3) 4–4 Spring Yellow (wheel slot 4) 5–5 Medium Yellow (wheel slot 5) 6–6 Yellow (wheel slot 6) 7–7 Deep Amber (wheel slot 7) 8–8 Deep Straw (wheel slot 8) 9–9 Loving Amber (wheel slot 9) 10–10 Gold Amber (wheel slot 10) 11–11 Orange (wheel slot 11) 12–12 Deep Orange (wheel slot 12) 13–13 Dark Amber (wheel slot 13) 14–14 Millennium Gold (wheel slot 14) 15–15 Deep Golden Amber (wheel slot 15) 16–16 Scarlet (wheel slot 16) 17–17 Primary Red (wheel slot 17) 18–18 Bright Red (wheel slot 18) 19–19 Medium Red (wheel slot 19) 20–20 Fire (wheel slot 20) 21–21 Pink (wheel slot 21) 22–22 Medium Pink (wheel slot 22) 23–23 Dark Pink (wheel slot 23) 24–24 Bright Pink (wheel slot 24) 25–25 Bright Rose (wheel slot 25) 26–26 Special Rose Pink (wheel slot 26) 27–27 Vanity Fair (wheel slot 27) 28–28 Magenta (wheel slot 28) 29–29 Dark Magenta (wheel slot 29) 30–30 Rose Purple (wheel slot 30) 31–31 Mauve (wheel slot 31) 32–32 Medium Purple (wheel slot 32) 33–33 Lavender (wheel slot 33) 34–34 Palace blue (wheel slot 34) 35–35 Dark Blue (wheel slot 35) 36–36 Medium Blue (wheel slot 36) 37–37 Deep Blue (wheel slot 37) 38–38 Daylight Blue (wheel slot 38) 39–39 Slate Blue (wheel slot 39) 40–40 Light Blue (wheel slot 40) 41–41 Sky Blue (wheel slot 41) 42–42 Pale Navy Blue (wheel slot 42) 43–43 Marine Blue (wheel slot 43) 44–44 Peacock Blue (wheel slot 44) 45–45 Lagoon Blue (wheel slot 45) 46–46 Medium Blue Green (wheel slot 46) 47–47 Dark Yellow Green (wheel slot 47) 48–48 Primary Green (wheel slot 48) 49–49 Fern Green (wheel slot 49) 50–50 Moss Green (wheel slot 50) 51–51 Dark Green (wheel slot 51) 52–52 Lime Green (wheel slot 52) 53–53 Pale Green (wheel slot 53) 54–54 Quarter CT Blue (wheel slot 54) 55–55 Half CT Blue (wheel slot 55) 56–56 Full CT Blue (wheel slot 56) 57–57 Double CT Blue (wheel slot 57) 58–58 Quarter CT Orange (wheel slot 58) 59–59 Half CT Orange (wheel slot 59) 60–60 Full CT Orange (wheel slot 60) 61–179 No Function (wheel slot 61) 180–201 CW fast to slow 202–207 Stop

Extended 19CH (continued)

Ch	Function	Default	DMX values
18	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–120 Stage 2 121–121 0s Delay 122–122 0/1s Delay 123–123 0/2s Delay 124–124 0/3s Delay 125–125 0/4s Delay 126–126 0/5s Delay 127–127 0/6s Delay 128–128 0/7s Delay 129–129 0/8s Delay 130–130 0/9s Delay 131–131 1s Delay 132–132 1/5s Delay 133–133 2s Delay 134–134 3s Delay 135–135 4s Delay 136–136 5s Delay 137–137 6s Delay 138–138 7s Delay 139–139 8s Delay 140–140 9s Delay 141–141 10s Delay 142–149 Idle 150–154 DTW On 155–159 DTW Off 160–255 Idle
19	Control1	0	