
CKC Lighting

Gobo Projector 200

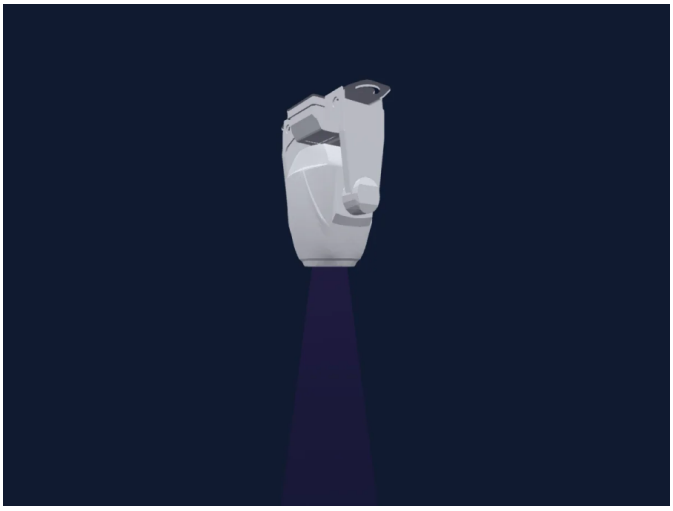

Manufacturer	**CKC Lighting**
Type	**Spot**
DMX modes	**1**
DMX footprint	**12 channels**
Beam angle	**11-22°**
Size (W × H × D)	**387 × 281 × 180 mm**
GDTF fixture type	**B838572C-63BD-42ED-9DD5-C…**

Controls

Focus · Prism · Prism rotation · Zoom · Strobe · Dimmer · Gobos · Gobo rotation

Safety-relevant functions

Fixture reset · Strobe

DMX modes

12CH — 12 ch

12CH

12 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 0% 255–255 100%
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	50	0–31 Shutter closed 32–63 Shutter open1 64–94 min strobe 95–95 max strobe 96–127 Shutter open2 128–158 min pulse 159–159 max pulse 160–191 Shutter open3 192–222 min random 223–223 max random 224–255 Shutter open4
4	Gobo	0	0–4 Open (wheel slot 1) 5–19 Gobo 1 (wheel slot 2) 20–34 Gobo 2 (wheel slot 3) 35–49 Gobo 3 (wheel slot 4) 50–64 Gobo 4 (wheel slot 5) 65–79 Gobo 5 (wheel slot 6) 80–94 Gobo 6 (wheel slot 7) 95–109 Gobo 1 shake (wheel slot 2) 110–124 Gobo 2 shake (wheel slot 3) 125–139 Gobo 3 shake (wheel slot 4) 140–154 Gobo 4 shake (wheel slot 5) 155–169 Gobo 5 shake (wheel slot 6) 170–189 Gobo 6 shake (wheel slot 7) 190–221 Fast to Slow CW 222–223 No Rotation 224–255 Slow to Fast CCW
5	Gobo Rotation	0	0–127 Indexing 128–190 Fast to Slow CW 191–192 No Rotation 193–255 Slow to Fast CCW
6	Gobo Rotation Fine	0	Fine byte of Gobo Rotation
7	Prism	0	0–5 open 6–255 6 Facet Prism
8	Prism Rotation	0	0–5 Rot Off 6–128 0-540 129–191 Fast to Slow CW 192–192 No Rotation 193–255 Slow to Fast CCW
9	Zoom	128	0–254 Narrow 255–255 wide
10	Focus	0	0–254 0% 255–255 100%
11	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–255 Default to Unit Setting
12	Control1	0	0–30 No function 31–40 Fan Mode Auto(Hold 3s) 41–50 Fan Mode High (Hold 3s) 51–60 Fan Mode Low(Hold 3s) 61–70 All motor Reset (Hold 3s) 71–255 No function