
CKC Lighting

Soft Panel 600TW

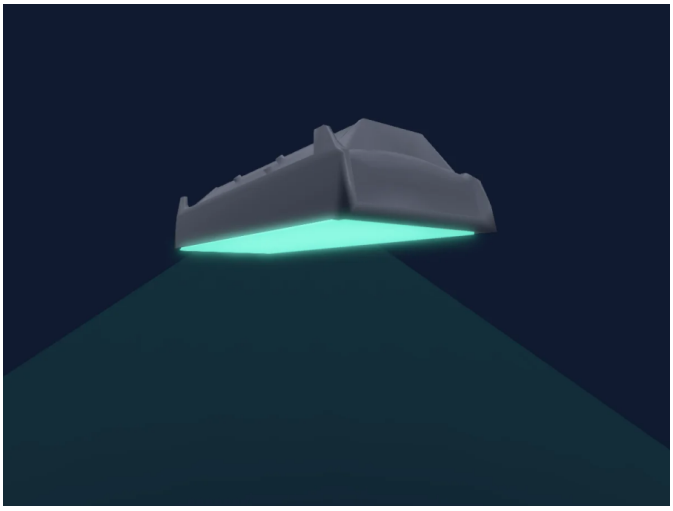

Manufacturer	**CKC Lighting**
Type	**Effect light**
DMX modes	**12**
DMX footprint	**4, 6, 7, 12, 14, 23, 24, 48, 58, 96 channels**
Beam angle	**111°**
Heads / cells	**8**
Size (W × H × D)	**760 × 160 × 305 mm**
GDTF fixture type	**320AE432-FB42-4C10-995D-DB...**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Strobe · Dimmer · Pixel control

Safety-relevant functions

Strobe · Built-in effect programmes

DMX modes

4CH Dim Color	4 ch
4Ch HSI	4 ch
6CH RGBWLC	6 ch
7CH Dim Color FX	7 ch
12Ch HSI Ext	12 ch
12CH RGBWLC 16bit	12 ch
14CH Standard	14 ch
23CH Extended	23 ch
24CH RGB CELLS	24 ch
48CH RGBWLC CELLS 8Bit	48 ch
58CH EXTENDED CELLS	58 ch
96CH RGBWLC CELLS 16-BIT	96 ch

4CH Dim Color

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
2	Dimmer Fine	0	Fine byte of Dimmer

4CH Dim Color (continued)

Ch	Function	Default	DMX values
3	Color Wheel	0	0–19 Open 20–20 2000 (wheel slot 2) 21–21 2100 (wheel slot 3) 22–22 2200 (wheel slot 4) 23–23 2300 (wheel slot 5) 24–24 2400 (wheel slot 6) 25–25 2500 (wheel slot 7) 26–26 2600 (wheel slot 8) 27–27 2700 (wheel slot 9) 28–28 2800 (wheel slot 10) 29–29 2900 (wheel slot 11) 30–30 3000 (wheel slot 12) 31–31 3100 (wheel slot 13) 32–32 3200 (wheel slot 14) 33–33 3300 (wheel slot 15) 34–34 3400 (wheel slot 16) 35–35 3500 (wheel slot 17) 36–36 3600 (wheel slot 18) 37–37 3700 (wheel slot 19) 38–38 3800 (wheel slot 20) 39–39 3900 (wheel slot 21) 40–40 4000 (wheel slot 22) 41–41 4100 (wheel slot 23) 42–42 4200 (wheel slot 24) 43–43 4300 (wheel slot 25) 44–44 4400 (wheel slot 26) 45–45 4500 (wheel slot 27) 46–46 4600 (wheel slot 28) 47–47 4700 (wheel slot 29) 48–48 4800 (wheel slot 30) 49–49 4900 (wheel slot 31) 50–50 5000 (wheel slot 32) 51–51 5100 (wheel slot 33) 52–52 5200 (wheel slot 34) 53–53 5300 (wheel slot 35) 54–54 5400 (wheel slot 36) 55–55 5500 (wheel slot 37) 56–56 56000 (wheel slot 38) 57–57 5700 (wheel slot 39) 58–58 5800 (wheel slot 40) 59–59 5900 (wheel slot 41) 60–60 6000 (wheel slot 42) 61–61 6100 (wheel slot 43) 62–62 6200 (wheel slot 44) 63–63 6300 (wheel slot 45) 64–64 6400 (wheel slot 46) 65–65 6500 (wheel slot 47) 66–66 6600 (wheel slot 48) 67–67 6700 (wheel slot 49) 68–68 6800 (wheel slot 50) 69–69 6900 (wheel slot 51) 70–70 7000 (wheel slot 52) 71–71 7100 (wheel slot 53) 72–72 7200 (wheel slot 54) 73–73 7300 (wheel slot 55) 74–74 7400 (wheel slot 56) 75–75 7500 (wheel slot 57) 76–76 7600 (wheel slot 58) 77–77 7700 (wheel slot 59) 78–78 7800 (wheel slot 60) 79–79 7900 (wheel slot 61) 80–80 8000 (wheel slot 62) 81–81 8100 (wheel slot 63) 82–100 8200 (wheel slot 64)

4CH Dim Color (continued)

Ch	Function	Default	DMX values
4	Color Wheel 2	0	0–0 Open (wheel slot 61) 1–1 Pale Yellow (wheel slot 1) 2–2 Straw (wheel slot 2) 3–3 Gold Tint (wheel slot 3) 4–4 Spring Yellow (wheel slot 4) 5–5 Medium Yellow (wheel slot 5) 6–6 Yellow (wheel slot 6) 7–7 Deep Amber (wheel slot 7) 8–8 Deep Straw (wheel slot 8) 9–9 Loving Amber (wheel slot 9) 10–10 Gold Amber (wheel slot 10) 11–11 Orange (wheel slot 11) 12–12 Deep Orange (wheel slot 12) 13–13 Dark Amber (wheel slot 13) 14–14 Millennium Gold (wheel slot 14) 15–15 Deep Golden Amber (wheel slot 15) 16–16 Scarlet (wheel slot 16) 17–17 Primary Red (wheel slot 17) 18–18 Bright Red (wheel slot 18) 19–19 Medium Red (wheel slot 19) 20–20 Fire (wheel slot 20) 21–21 Pink (wheel slot 21) 22–22 Medium Pink (wheel slot 22) 23–23 Dark Pink (wheel slot 23) 24–24 Bright Pink (wheel slot 24) 25–25 Bright Rose (wheel slot 25) 26–26 Special Rose Pink (wheel slot 26) 27–27 Vanity Fair (wheel slot 27) 28–28 Magenta (wheel slot 28) 29–29 Dark Magenta (wheel slot 29) 30–30 Rose Purple (wheel slot 30) 31–31 Mauve (wheel slot 31) 32–32 Medium Purple (wheel slot 32) 33–33 Lavender (wheel slot 33) 34–34 Palace blue (wheel slot 34) 35–35 Dark Blue (wheel slot 35) 36–36 Medium Blue (wheel slot 36) 37–37 Deep Blue (wheel slot 37) 38–38 Daylight Blue (wheel slot 38) 39–39 Slate Blue (wheel slot 39) 40–40 Light Blue (wheel slot 40) 41–41 Sky Blue (wheel slot 41) 42–42 Pale Navy Blue (wheel slot 42) 43–43 Marine Blue (wheel slot 43) 44–44 Peacock Blue (wheel slot 44) 45–45 Lagoon Blue (wheel slot 45) 46–46 Medium Blue Green (wheel slot 46) 47–47 Dark Yellow Green (wheel slot 47) 48–48 Primary Green (wheel slot 48) 49–49 Fern Green (wheel slot 49) 50–50 Moss Green (wheel slot 50) 51–51 Dark Green (wheel slot 51) 52–52 Lime Green (wheel slot 52) 53–53 Pale Green (wheel slot 53) 54–179 No Function 180–201 Clockwise fast to slow 202–207 Stop 208–229 Counter-clockwise slow to fast 230–234 Open 235–239 Fast 240–244 Medium 245–249 Slow 250–255 Open

4Ch HSI

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
2	Dimmer Fine	0	Fine byte of Dimmer
3	H SBHue	0	
4	H SBSaturation	0	

6CH RGBWLC

6 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	White	0	
5	Color Add GY	0	
6	Color Add GC	0	

7CH Dim Color FX

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
2	Dimmer Fine	0	Fine byte of Dimmer

7CH Dim Color FX (continued)

Ch	Function	Default	DMX values
3	Color Wheel	0	0–19 Open 20–20 2000 (wheel slot 2) 21–21 2100 (wheel slot 3) 22–22 2200 (wheel slot 4) 23–23 2300 (wheel slot 5) 24–24 2400 (wheel slot 6) 25–25 2500 (wheel slot 7) 26–26 2600 (wheel slot 8) 27–27 2700 (wheel slot 9) 28–28 2800 (wheel slot 10) 29–29 2900 (wheel slot 11) 30–30 3000 (wheel slot 12) 31–31 3100 (wheel slot 13) 32–32 3200 (wheel slot 14) 33–33 3300 (wheel slot 15) 34–34 3400 (wheel slot 16) 35–35 3500 (wheel slot 17) 36–36 3600 (wheel slot 18) 37–37 3700 (wheel slot 19) 38–38 3800 (wheel slot 20) 39–39 3900 (wheel slot 21) 40–40 4000 (wheel slot 22) 41–41 4100 (wheel slot 23) 42–42 4200 (wheel slot 24) 43–43 4300 (wheel slot 25) 44–44 4400 (wheel slot 26) 45–45 4500 (wheel slot 27) 46–46 4600 (wheel slot 28) 47–47 4700 (wheel slot 29) 48–48 4800 (wheel slot 30) 49–49 4900 (wheel slot 31) 50–50 5000 (wheel slot 32) 51–51 5100 (wheel slot 33) 52–52 5200 (wheel slot 34) 53–53 5300 (wheel slot 35) 54–54 5400 (wheel slot 36) 55–55 5500 (wheel slot 37) 56–56 56000 (wheel slot 38) 57–57 5700 (wheel slot 39) 58–58 5800 (wheel slot 40) 59–59 5900 (wheel slot 41) 60–60 6000 (wheel slot 42) 61–61 6100 (wheel slot 43) 62–62 6200 (wheel slot 44) 63–63 6300 (wheel slot 45) 64–64 6400 (wheel slot 46) 65–65 6500 (wheel slot 47) 66–66 6600 (wheel slot 48) 67–67 6700 (wheel slot 49) 68–68 6800 (wheel slot 50) 69–69 6900 (wheel slot 51) 70–70 7000 (wheel slot 52) 71–71 7100 (wheel slot 53) 72–72 7200 (wheel slot 54) 73–73 7300 (wheel slot 55) 74–74 7400 (wheel slot 56) 75–75 7500 (wheel slot 57) 76–76 7600 (wheel slot 58) 77–77 7700 (wheel slot 59) 78–78 7800 (wheel slot 60) 79–79 7900 (wheel slot 61) 80–80 8000 (wheel slot 62) 81–81 8100 (wheel slot 63) 82–100 8200 (wheel slot 64)

7CH Dim Color FX (continued)

Ch	Function	Default	DMX values
4	Color Wheel 2	0	0–0 Open (wheel slot 61) 1–1 Pale Yellow (wheel slot 1) 2–2 Straw (wheel slot 2) 3–3 Gold Tint (wheel slot 3) 4–4 Spring Yellow (wheel slot 4) 5–5 Medium Yellow (wheel slot 5) 6–6 Yellow (wheel slot 6) 7–7 Deep Amber (wheel slot 7) 8–8 Deep Straw (wheel slot 8) 9–9 Loving Amber (wheel slot 9) 10–10 Gold Amber (wheel slot 10) 11–11 Orange (wheel slot 11) 12–12 Deep Orange (wheel slot 12) 13–13 Dark Amber (wheel slot 13) 14–14 Millennium Gold (wheel slot 14) 15–15 Deep Golden Amber (wheel slot 15) 16–16 Scarlet (wheel slot 16) 17–17 Primary Red (wheel slot 17) 18–18 Bright Red (wheel slot 18) 19–19 Medium Red (wheel slot 19) 20–20 Fire (wheel slot 20) 21–21 Pink (wheel slot 21) 22–22 Medium Pink (wheel slot 22) 23–23 Dark Pink (wheel slot 23) 24–24 Bright Pink (wheel slot 24) 25–25 Bright Rose (wheel slot 25) 26–26 Special Rose Pink (wheel slot 26) 27–27 Vanity Fair (wheel slot 27) 28–28 Magenta (wheel slot 28) 29–29 Dark Magenta (wheel slot 29) 30–30 Rose Purple (wheel slot 30) 31–31 Mauve (wheel slot 31) 32–32 Medium Purple (wheel slot 32) 33–33 Lavender (wheel slot 33) 34–34 Palace blue (wheel slot 34) 35–35 Dark Blue (wheel slot 35) 36–36 Medium Blue (wheel slot 36) 37–37 Deep Blue (wheel slot 37) 38–38 Daylight Blue (wheel slot 38) 39–39 Slate Blue (wheel slot 39) 40–40 Light Blue (wheel slot 40) 41–41 Sky Blue (wheel slot 41) 42–42 Pale Navy Blue (wheel slot 42) 43–43 Marine Blue (wheel slot 43) 44–44 Peacock Blue (wheel slot 44) 45–45 Lagoon Blue (wheel slot 45) 46–46 Medium Blue Green (wheel slot 46) 47–47 Dark Yellow Green (wheel slot 47) 48–48 Primary Green (wheel slot 48) 49–49 Fern Green (wheel slot 49) 50–50 Moss Green (wheel slot 50) 51–51 Dark Green (wheel slot 51) 52–52 Lime Green (wheel slot 52) 53–53 Pale Green (wheel slot 53) 54–179 No Function 180–201 Clockwise fast to slow 202–207 Stop 208–229 Counter-clockwise slow to fast 230–234 Open 235–239 Fast 240–244 Medium 245–249 Slow 250–255 Open

7CH Dim Color FX (continued)

Ch	Function	Default	DMX values
5	Color Effects1	0	
6	Effects1Adjust1	0	
7	Effects1Pos	0	0–0 Idle 1–1 Fixture Offset 10 2–2 Fixture Offset 20 3–3 Fixture Offset 30 4–4 Fixture Offset 40 5–5 Fixture Offset 50 6–6 Fixture Offset 60 7–7 Fixture Offset 70 8–8 Fixture Offset 80 9–9 Fixture Offset 90 10–10 Fixture Offset 100 11–11 Fixture Offset 110 12–12 Fixture Offset 120 13–13 Fixture Offset 130 14–14 Fixture Offset 140 15–15 Fixture Offset 150 16–16 Fixture Offset 160 17–17 Fixture Offset 170 18–18 Fixture Offset 180 19–19 Fixture Offset 190 20–20 Fixture Offset 200 21–21 Fixture Offset 210 22–22 Fixture Offset 220 23–23 Fixture Offset 230 24–24 Fixture Offset 240 25–25 Fixture Offset 250 26–26 Fixture Offset 260 27–27 Fixture Offset 270 28–28 Fixture Offset 280 29–29 Fixture Offset 290 30–30 Fixture Offset 300 31–31 Fixture Offset 310 32–32 Fixture Offset 320 33–33 Fixture Offset 330 34–34 Fixture Offset 340 35–35 Fixture Offset 350 36–36 Syncronized 37–100 No function 101–120 Random Fixture Offset 121–140 Random Pixel Order 141–255 Random Steps

12Ch HSI Ext

12 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	50	0–31 Shutter Closed 32–63 No Function (Shutter Open) 64–95 Strobe Effect Slow to Fast 96–127 No Function (Shutter Open) 128–159 Pulse-Effect in Sequences 160–191 No Function (Shutter Open) 192–223 Random Strobe Effect Slow to Fast 224–255 No Function (Shutter Open)
2	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent

12Ch HSI Ext (continued)

Ch	Function	Default	DMX values
3	Dimmer Fine	0	Fine byte of Dimmer
4	H SBHue	0	
5	H SBSaturation	0	

12Ch HSI Ext (continued)

Ch	Function	Default	DMX values
6	Color Wheel	0	0–19 Open 20–20 2000 (wheel slot 2) 21–21 2100 (wheel slot 3) 22–22 2200 (wheel slot 4) 23–23 2300 (wheel slot 5) 24–24 2400 (wheel slot 6) 25–25 2500 (wheel slot 7) 26–26 2600 (wheel slot 8) 27–27 2700 (wheel slot 9) 28–28 2800 (wheel slot 10) 29–29 2900 (wheel slot 11) 30–30 3000 (wheel slot 12) 31–31 3100 (wheel slot 13) 32–32 3200 (wheel slot 14) 33–33 3300 (wheel slot 15) 34–34 3400 (wheel slot 16) 35–35 3500 (wheel slot 17) 36–36 3600 (wheel slot 18) 37–37 3700 (wheel slot 19) 38–38 3800 (wheel slot 20) 39–39 3900 (wheel slot 21) 40–40 4000 (wheel slot 22) 41–41 4100 (wheel slot 23) 42–42 4200 (wheel slot 24) 43–43 4300 (wheel slot 25) 44–44 4400 (wheel slot 26) 45–45 4500 (wheel slot 27) 46–46 4600 (wheel slot 28) 47–47 4700 (wheel slot 29) 48–48 4800 (wheel slot 30) 49–49 4900 (wheel slot 31) 50–50 5000 (wheel slot 32) 51–51 5100 (wheel slot 33) 52–52 5200 (wheel slot 34) 53–53 5300 (wheel slot 35) 54–54 5400 (wheel slot 36) 55–55 5500 (wheel slot 37) 56–56 56000 (wheel slot 38) 57–57 5700 (wheel slot 39) 58–58 5800 (wheel slot 40) 59–59 5900 (wheel slot 41) 60–60 6000 (wheel slot 42) 61–61 6100 (wheel slot 43) 62–62 6200 (wheel slot 44) 63–63 6300 (wheel slot 45) 64–64 6400 (wheel slot 46) 65–65 6500 (wheel slot 47) 66–66 6600 (wheel slot 48) 67–67 6700 (wheel slot 49) 68–68 6800 (wheel slot 50) 69–69 6900 (wheel slot 51) 70–70 7000 (wheel slot 52) 71–71 7100 (wheel slot 53) 72–72 7200 (wheel slot 54) 73–73 7300 (wheel slot 55) 74–74 7400 (wheel slot 56) 75–75 7500 (wheel slot 57) 76–76 7600 (wheel slot 58) 77–77 7700 (wheel slot 59) 78–78 7800 (wheel slot 60) 79–79 7900 (wheel slot 61) 80–80 8000 (wheel slot 62) 81–81 8100 (wheel slot 63) 82–100 8200 (wheel slot 64)

12Ch HSI Ext (continued)

Ch	Function	Default	DMX values
7	Color Wheel 2	0	0–0 Open (wheel slot 61) 1–1 Pale Yellow (wheel slot 1) 2–2 Straw (wheel slot 2) 3–3 Gold Tint (wheel slot 3) 4–4 Spring Yellow (wheel slot 4) 5–5 Medium Yellow (wheel slot 5) 6–6 Yellow (wheel slot 6) 7–7 Deep Amber (wheel slot 7) 8–8 Deep Straw (wheel slot 8) 9–9 Loving Amber (wheel slot 9) 10–10 Gold Amber (wheel slot 10) 11–11 Orange (wheel slot 11) 12–12 Deep Orange (wheel slot 12) 13–13 Dark Amber (wheel slot 13) 14–14 Millennium Gold (wheel slot 14) 15–15 Deep Golden Amber (wheel slot 15) 16–16 Scarlet (wheel slot 16) 17–17 Primary Red (wheel slot 17) 18–18 Bright Red (wheel slot 18) 19–19 Medium Red (wheel slot 19) 20–20 Fire (wheel slot 20) 21–21 Pink (wheel slot 21) 22–22 Medium Pink (wheel slot 22) 23–23 Dark Pink (wheel slot 23) 24–24 Bright Pink (wheel slot 24) 25–25 Bright Rose (wheel slot 25) 26–26 Special Rose Pink (wheel slot 26) 27–27 Vanity Fair (wheel slot 27) 28–28 Magenta (wheel slot 28) 29–29 Dark Magenta (wheel slot 29) 30–30 Rose Purple (wheel slot 30) 31–31 Mauve (wheel slot 31) 32–32 Medium Purple (wheel slot 32) 33–33 Lavender (wheel slot 33) 34–34 Palace blue (wheel slot 34) 35–35 Dark Blue (wheel slot 35) 36–36 Medium Blue (wheel slot 36) 37–37 Deep Blue (wheel slot 37) 38–38 Daylight Blue (wheel slot 38) 39–39 Slate Blue (wheel slot 39) 40–40 Light Blue (wheel slot 40) 41–41 Sky Blue (wheel slot 41) 42–42 Pale Navy Blue (wheel slot 42) 43–43 Marine Blue (wheel slot 43) 44–44 Peacock Blue (wheel slot 44) 45–45 Lagoon Blue (wheel slot 45) 46–46 Medium Blue Green (wheel slot 46) 47–47 Dark Yellow Green (wheel slot 47) 48–48 Primary Green (wheel slot 48) 49–49 Fern Green (wheel slot 49) 50–50 Moss Green (wheel slot 50) 51–51 Dark Green (wheel slot 51) 52–52 Lime Green (wheel slot 52) 53–53 Pale Green (wheel slot 53) 54–179 No Function 180–201 Clockwise fast to slow 202–207 Stop 208–229 Counter-clockwise slow to fast 230–234 Open 235–239 Fast 240–244 Medium 245–249 Slow 250–255 Open

12Ch HSI Ext (continued)

Ch	Function	Default	DMX values
8	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–120 Stage 2 121–121 0s 122–122 0*1s 123–123 0*2 124–124 0*3s 125–125 0*4s 126–126 0*5s 127–127 0*6s 128–128 0*7 129–129 0*8s 130–130 0*9s 131–131 1s 132–132 1*5s 133–133 2s 134–134 3s 135–135 4s 136–136 5s 137–137 6s 138–138 7s 139–139 8s 140–140 9s 141–141 10s 142–255 Idle
9	Function	0	
10	Effect	0	
11	Effects1Adjust1	0	

12Ch HSI Ext (continued)

Ch	Function	Default	DMX values
12	Effects1Pos	0	0–0 Idle4 1–1 Fixture Offset 10 2–2 Fixture Offset 20 3–3 Fixture Offset 30 4–4 Fixture Offset 40 5–5 Fixture Offset 50 6–6 Fixture Offset 60 7–7 Fixture Offset 70 8–8 Fixture Offset 80 9–9 Fixture Offset 90 10–10 Fixture Offset 100 11–11 Fixture Offset 110 12–12 Fixture Offset 120 13–13 Fixture Offset 130 14–14 Fixture Offset 140 15–15 Fixture Offset 150 16–16 Fixture Offset 160 17–17 Fixture Offset 170 18–18 Fixture Offset 180 19–19 Fixture Offset 190 20–20 Fixture Offset 200 21–21 Fixture Offset 210 22–22 Fixture Offset 220 23–23 Fixture Offset 230 24–24 Fixture Offset 240 25–25 Fixture Offset 250 26–26 Fixture Offset 260 27–27 Fixture Offset 270 28–28 Fixture Offset 280 29–29 Fixture Offset 290 30–30 Fixture Offset 300 31–31 Fixture Offset 310 32–32 Fixture Offset 320 33–33 Fixture Offset 330 34–34 Fixture Offset 340 35–35 Fixture Offset 350 36–36 Syncronized 37–100 No function 101–120 Random Fixture Offset 121–140 Random Pixel Order 141–255 Random Steps

12CH RGBWLC 16bit

12 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Red Fine	0	Fine byte of Red
3	Green	0	
4	Green Fine	0	Fine byte of Green
5	Blue	0	
6	Blue Fine	0	Fine byte of Blue
7	White	0	
8	White Fine	0	Fine byte of White
9	Color Add GY	0	
10	Color Add GY Fine	0	Fine byte of Color Add GY
11	Color Add GC	0	
12	Color Add GC Fine	0	Fine byte of Color Add GC

14CH Standard

14 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	50	0–31 Shutter Closed 32–63 No Function (Shutter Open) 64–95 Strobe Effect Slow to Fast 96–127 No Function (Shutter Open) 128–159 Pulse-Effect in Sequences 160–191 No Function (Shutter Open) 192–223 Random Strobe Effect Slow to Fast 224–255 No Function (Shutter Open)
2	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
3	Dimmer Fine	0	Fine byte of Dimmer
4	Red	0	
5	Green	0	
6	Blue	0	

14CH Standard (continued)

Ch	Function	Default	DMX values
7	Color Wheel	0	0–19 Open 20–20 2000 (wheel slot 2) 21–21 2100 (wheel slot 3) 22–22 2200 (wheel slot 4) 23–23 2300 (wheel slot 5) 24–24 2400 (wheel slot 6) 25–25 2500 (wheel slot 7) 26–26 2600 (wheel slot 8) 27–27 2700 (wheel slot 9) 28–28 2800 (wheel slot 10) 29–29 2900 (wheel slot 11) 30–30 3000 (wheel slot 12) 31–31 3100 (wheel slot 13) 32–32 3200 (wheel slot 14) 33–33 3300 (wheel slot 15) 34–34 3400 (wheel slot 16) 35–35 3500 (wheel slot 17) 36–36 3600 (wheel slot 18) 37–37 3700 (wheel slot 19) 38–38 3800 (wheel slot 20) 39–39 3900 (wheel slot 21) 40–40 4000 (wheel slot 22) 41–41 4100 (wheel slot 23) 42–42 4200 (wheel slot 24) 43–43 4300 (wheel slot 25) 44–44 4400 (wheel slot 26) 45–45 4500 (wheel slot 27) 46–46 4600 (wheel slot 28) 47–47 4700 (wheel slot 29) 48–48 4800 (wheel slot 30) 49–49 4900 (wheel slot 31) 50–50 5000 (wheel slot 32) 51–51 5100 (wheel slot 33) 52–52 5200 (wheel slot 34) 53–53 5300 (wheel slot 35) 54–54 5400 (wheel slot 36) 55–55 5500 (wheel slot 37) 56–56 56000 (wheel slot 38) 57–57 5700 (wheel slot 39) 58–58 5800 (wheel slot 40) 59–59 5900 (wheel slot 41) 60–60 6000 (wheel slot 42) 61–61 6100 (wheel slot 43) 62–62 6200 (wheel slot 44) 63–63 6300 (wheel slot 45) 64–64 6400 (wheel slot 46) 65–65 6500 (wheel slot 47) 66–66 6600 (wheel slot 48) 67–67 6700 (wheel slot 49) 68–68 6800 (wheel slot 50) 69–69 6900 (wheel slot 51) 70–70 7000 (wheel slot 52) 71–71 7100 (wheel slot 53) 72–72 7200 (wheel slot 54) 73–73 7300 (wheel slot 55) 74–74 7400 (wheel slot 56) 75–75 7500 (wheel slot 57) 76–76 7600 (wheel slot 58) 77–77 7700 (wheel slot 59) 78–78 7800 (wheel slot 60) 79–79 7900 (wheel slot 61) 80–80 8000 (wheel slot 62) 81–81 8100 (wheel slot 63) 82–100 8200 (wheel slot 64)

14CH Standard (continued)

Ch	Function	Default	DMX values
8	Color RGBGreen	0	0–0 Idle 1–127 Full Minus Green to Neutral 128–128 Neutral White 129–255 Neutral to Full Plus Green

14CH Standard (continued)

Ch	Function	Default	DMX values
9	Color Wheel 2	0	0–0 Open (wheel slot 61) 1–1 Pale Yellow (wheel slot 1) 2–2 Straw (wheel slot 2) 3–3 Gold Tint (wheel slot 3) 4–4 Spring Yellow (wheel slot 4) 5–5 Medium Yellow (wheel slot 5) 6–6 Yellow (wheel slot 6) 7–7 Deep Amber (wheel slot 7) 8–8 Deep Straw (wheel slot 8) 9–9 Loving Amber (wheel slot 9) 10–10 Gold Amber (wheel slot 10) 11–11 Orange (wheel slot 11) 12–12 Deep Orange (wheel slot 12) 13–13 Dark Amber (wheel slot 13) 14–14 Millennium Gold (wheel slot 14) 15–15 Deep Golden Amber (wheel slot 15) 16–16 Scarlet (wheel slot 16) 17–17 Primary Red (wheel slot 17) 18–18 Bright Red (wheel slot 18) 19–19 Medium Red (wheel slot 19) 20–20 Fire (wheel slot 20) 21–21 Pink (wheel slot 21) 22–22 Medium Pink (wheel slot 22) 23–23 Dark Pink (wheel slot 23) 24–24 Bright Pink (wheel slot 24) 25–25 Bright Rose (wheel slot 25) 26–26 Special Rose Pink (wheel slot 26) 27–27 Vanity Fair (wheel slot 27) 28–28 Magenta (wheel slot 28) 29–29 Dark Magenta (wheel slot 29) 30–30 Rose Purple (wheel slot 30) 31–31 Mauve (wheel slot 31) 32–32 Medium Purple (wheel slot 32) 33–33 Lavender (wheel slot 33) 34–34 Palace blue (wheel slot 34) 35–35 Dark Blue (wheel slot 35) 36–36 Medium Blue (wheel slot 36) 37–37 Deep Blue (wheel slot 37) 38–38 Daylight Blue (wheel slot 38) 39–39 Slate Blue (wheel slot 39) 40–40 Light Blue (wheel slot 40) 41–41 Sky Blue (wheel slot 41) 42–42 Pale Navy Blue (wheel slot 42) 43–43 Marine Blue (wheel slot 43) 44–44 Peacock Blue (wheel slot 44) 45–45 Lagoon Blue (wheel slot 45) 46–46 Medium Blue Green (wheel slot 46) 47–47 Dark Yellow Green (wheel slot 47) 48–48 Primary Green (wheel slot 48) 49–49 Fern Green (wheel slot 49) 50–50 Moss Green (wheel slot 50) 51–51 Dark Green (wheel slot 51) 52–52 Lime Green (wheel slot 52) 53–53 Pale Green (wheel slot 53) 54–179 No Function 180–201 Clockwise fast to slow 202–207 Stop 208–229 Counter-clockwise slow to fast 230–234 Open 235–239 Fast 240–244 Medium 245–249 Slow 250–255 Open

14CH Standard (continued)

Ch	Function	Default	DMX values
10	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–120 Stage 2 121–121 0s 122–122 0*1s 123–123 0*2 124–124 0*3s 125–125 0*4s 126–126 0*5s 127–127 0*6s 128–128 0*7 129–129 0*8s 130–130 0*9s 131–131 1s 132–132 1*5s 133–133 2s 134–134 3s 135–135 4s 136–136 5s 137–137 6s 138–138 7s 139–139 8s 140–140 9s 141–141 10s 142–255 Idle
11	Function	0	
12	Effect	0	
13	Effects1Adjust1	0	

14CH Standard (continued)

Ch	Function	Default	DMX values
14	Effects1Pos	0	0–0 Idle4 1–1 Fixture Offset 10 2–2 Fixture Offset 20 3–3 Fixture Offset 30 4–4 Fixture Offset 40 5–5 Fixture Offset 50 6–6 Fixture Offset 60 7–7 Fixture Offset 70 8–8 Fixture Offset 80 9–9 Fixture Offset 90 10–10 Fixture Offset 100 11–11 Fixture Offset 110 12–12 Fixture Offset 120 13–13 Fixture Offset 130 14–14 Fixture Offset 140 15–15 Fixture Offset 150 16–16 Fixture Offset 160 17–17 Fixture Offset 170 18–18 Fixture Offset 180 19–19 Fixture Offset 190 20–20 Fixture Offset 200 21–21 Fixture Offset 210 22–22 Fixture Offset 220 23–23 Fixture Offset 230 24–24 Fixture Offset 240 25–25 Fixture Offset 250 26–26 Fixture Offset 260 27–27 Fixture Offset 270 28–28 Fixture Offset 280 29–29 Fixture Offset 290 30–30 Fixture Offset 300 31–31 Fixture Offset 310 32–32 Fixture Offset 320 33–33 Fixture Offset 330 34–34 Fixture Offset 340 35–35 Fixture Offset 350 36–36 Syncronized 37–100 No function 101–120 Random Fixture Offset 121–140 Random Pixel Order 141–255 Random Steps

23CH Extended

23 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	50	0–31 Shutter Closed 32–63 No Function (Shutter Open) 64–95 Strobe Effect Slow to Fast 96–127 No Function (Shutter Open) 128–159 Pulse-Effect in Sequences 160–191 No Function (Shutter Open) 192–223 Random Strobe Effect Slow to Fast 224–255 No Function (Shutter Open)
2	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
3	Dimmer Fine	0	Fine byte of Dimmer
4	Red	0	

23CH Extended (continued)

Ch	Function	Default	DMX values
5	Red Fine	0	Fine byte of Red
6	Green	0	
7	Green Fine	0	Fine byte of Green
8	Blue	0	
9	Blue Fine	0	Fine byte of Blue
10	White	0	
11	White Fine	0	Fine byte of White
12	Color Add GY	0	
13	Color Add GY Fine	0	Fine byte of Color Add GY
14	Color Add C	0	
15	Color Add C Fine	0	Fine byte of Color Add C

23CH Extended (continued)

Ch	Function	Default	DMX values
16	Color Wheel	0	0–19 Open 20–20 2000 (wheel slot 2) 21–21 2100 (wheel slot 3) 22–22 2200 (wheel slot 4) 23–23 2300 (wheel slot 5) 24–24 2400 (wheel slot 6) 25–25 2500 (wheel slot 7) 26–26 2600 (wheel slot 8) 27–27 2700 (wheel slot 9) 28–28 2800 (wheel slot 10) 29–29 2900 (wheel slot 11) 30–30 3000 (wheel slot 12) 31–31 3100 (wheel slot 13) 32–32 3200 (wheel slot 14) 33–33 3300 (wheel slot 15) 34–34 3400 (wheel slot 16) 35–35 3500 (wheel slot 17) 36–36 3600 (wheel slot 18) 37–37 3700 (wheel slot 19) 38–38 3800 (wheel slot 20) 39–39 3900 (wheel slot 21) 40–40 4000 (wheel slot 22) 41–41 4100 (wheel slot 23) 42–42 4200 (wheel slot 24) 43–43 4300 (wheel slot 25) 44–44 4400 (wheel slot 26) 45–45 4500 (wheel slot 27) 46–46 4600 (wheel slot 28) 47–47 4700 (wheel slot 29) 48–48 4800 (wheel slot 30) 49–49 4900 (wheel slot 31) 50–50 5000 (wheel slot 32) 51–51 5100 (wheel slot 33) 52–52 5200 (wheel slot 34) 53–53 5300 (wheel slot 35) 54–54 5400 (wheel slot 36) 55–55 5500 (wheel slot 37) 56–56 56000 (wheel slot 38) 57–57 5700 (wheel slot 39) 58–58 5800 (wheel slot 40) 59–59 5900 (wheel slot 41) 60–60 6000 (wheel slot 42) 61–61 6100 (wheel slot 43) 62–62 6200 (wheel slot 44) 63–63 6300 (wheel slot 45) 64–64 6400 (wheel slot 46) 65–65 6500 (wheel slot 47) 66–66 6600 (wheel slot 48) 67–67 6700 (wheel slot 49) 68–68 6800 (wheel slot 50) 69–69 6900 (wheel slot 51) 70–70 7000 (wheel slot 52) 71–71 7100 (wheel slot 53) 72–72 7200 (wheel slot 54) 73–73 7300 (wheel slot 55) 74–74 7400 (wheel slot 56) 75–75 7500 (wheel slot 57) 76–76 7600 (wheel slot 58) 77–77 7700 (wheel slot 59) 78–78 7800 (wheel slot 60) 79–79 7900 (wheel slot 61) 80–80 8000 (wheel slot 62) 81–81 8100 (wheel slot 63) 82–100 8200 (wheel slot 64)

23CH Extended (continued)

Ch	Function	Default	DMX values
17	Color RGBGreen	0	0–0 Idle 1–127 Full Minus Green to Neutral 128–128 Neutral White 129–255 Neutral to Full Plus Green

23CH Extended (continued)

Ch	Function	Default	DMX values
18	Color Wheel 2	0	0–0 Open (wheel slot 61) 1–1 Pale Yellow (wheel slot 1) 2–2 Straw (wheel slot 2) 3–3 Gold Tint (wheel slot 3) 4–4 Spring Yellow (wheel slot 4) 5–5 Medium Yellow (wheel slot 5) 6–6 Yellow (wheel slot 6) 7–7 Deep Amber (wheel slot 7) 8–8 Deep Straw (wheel slot 8) 9–9 Loving Amber (wheel slot 9) 10–10 Gold Amber (wheel slot 10) 11–11 Orange (wheel slot 11) 12–12 Deep Orange (wheel slot 12) 13–13 Dark Amber (wheel slot 13) 14–14 Millennium Gold (wheel slot 14) 15–15 Deep Golden Amber (wheel slot 15) 16–16 Scarlet (wheel slot 16) 17–17 Primary Red (wheel slot 17) 18–18 Bright Red (wheel slot 18) 19–19 Medium Red (wheel slot 19) 20–20 Fire (wheel slot 20) 21–21 Pink (wheel slot 21) 22–22 Medium Pink (wheel slot 22) 23–23 Dark Pink (wheel slot 23) 24–24 Bright Pink (wheel slot 24) 25–25 Bright Rose (wheel slot 25) 26–26 Special Rose Pink (wheel slot 26) 27–27 Vanity Fair (wheel slot 27) 28–28 Magenta (wheel slot 28) 29–29 Dark Magenta (wheel slot 29) 30–30 Rose Purple (wheel slot 30) 31–31 Mauve (wheel slot 31) 32–32 Medium Purple (wheel slot 32) 33–33 Lavender (wheel slot 33) 34–34 Palace blue (wheel slot 34) 35–35 Dark Blue (wheel slot 35) 36–36 Medium Blue (wheel slot 36) 37–37 Deep Blue (wheel slot 37) 38–38 Daylight Blue (wheel slot 38) 39–39 Slate Blue (wheel slot 39) 40–40 Light Blue (wheel slot 40) 41–41 Sky Blue (wheel slot 41) 42–42 Pale Navy Blue (wheel slot 42) 43–43 Marine Blue (wheel slot 43) 44–44 Peacock Blue (wheel slot 44) 45–45 Lagoon Blue (wheel slot 45) 46–46 Medium Blue Green (wheel slot 46) 47–47 Dark Yellow Green (wheel slot 47) 48–48 Primary Green (wheel slot 48) 49–49 Fern Green (wheel slot 49) 50–50 Moss Green (wheel slot 50) 51–51 Dark Green (wheel slot 51) 52–52 Lime Green (wheel slot 52) 53–53 Pale Green (wheel slot 53) 54–179 No Function 180–201 Clockwise fast to slow 202–207 Stop 208–229 Counter-clockwise slow to fast 230–234 Open 235–239 Fast 240–244 Medium 245–249 Slow 250–255 Open

23CH Extended (continued)

Ch	Function	Default	DMX values
19	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–120 Stage 2 121–121 0s 122–122 0*1s 123–123 0*2 124–124 0*3s 125–125 0*4s 126–126 0*5s 127–127 0*6s 128–128 0*7 129–129 0*8s 130–130 0*9s 131–131 1s 132–132 1*5s 133–133 2s 134–134 3s 135–135 4s 136–136 5s 137–137 6s 138–138 7s 139–139 8s 140–140 9s 141–141 10s 142–255 Idle
20	Function	0	
21	Effect	0	
22	Effects1Adjust1	0	

23CH Extended (continued)

Ch	Function	Default	DMX values
23	Effects1Pos	0	0–0 Idle4 1–1 Fixture Offset 10 2–2 Fixture Offset 20 3–3 Fixture Offset 30 4–4 Fixture Offset 40 5–5 Fixture Offset 50 6–6 Fixture Offset 60 7–7 Fixture Offset 70 8–8 Fixture Offset 80 9–9 Fixture Offset 90 10–10 Fixture Offset 100 11–11 Fixture Offset 110 12–12 Fixture Offset 120 13–13 Fixture Offset 130 14–14 Fixture Offset 140 15–15 Fixture Offset 150 16–16 Fixture Offset 160 17–17 Fixture Offset 170 18–18 Fixture Offset 180 19–19 Fixture Offset 190 20–20 Fixture Offset 200 21–21 Fixture Offset 210 22–22 Fixture Offset 220 23–23 Fixture Offset 230 24–24 Fixture Offset 240 25–25 Fixture Offset 250 26–26 Fixture Offset 260 27–27 Fixture Offset 270 28–28 Fixture Offset 280 29–29 Fixture Offset 290 30–30 Fixture Offset 300 31–31 Fixture Offset 310 32–32 Fixture Offset 320 33–33 Fixture Offset 330 34–34 Fixture Offset 340 35–35 Fixture Offset 350 36–36 Syncronized 37–100 No function 101–120 Random Fixture Offset 121–140 Random Pixel Order 141–255 Random Steps

24CH RGB CELLS

24 channels

Ch	Function	Default	DMX values
1	Red	0	0–254 Red 1 Min 255–255 Red 1 Max
2	Green	0	0–254 Green 1 Min 255–255 Green 1 Max
3	Blue	0	0–254 Blue 1 Min 255–255 Blue 1 Max
4	Red	0	0–254 Red 2 Min 255–255 Red 2 Max
5	Green	0	0–254 Green 2 Min 255–255 Green 2 Max
6	Blue	0	0–254 Blue 2 Min 255–255 Blue 2 Max
7	Red	0	0–254 Red 3 Min 255–255 Red 3 Max

24CH RGB CELLS (continued)

Ch	Function	Default	DMX values
8	Green	0	0–254 Green 3 Min 255–255 Green 3 Max
9	Blue	0	0–254 Blue 3 Min 255–255 Blue 3 Max
10	Red	0	0–254 Red 4 Min 255–255 Red 4 Max
11	Green	0	0–254 Green 4 Min 255–255 Green 4 Max
12	Blue	0	0–254 Blue 4 Min 255–255 Blue 4 Max
13	Red	0	0–254 Red 5 Min 255–255 Red 5 Max
14	Green	0	0–254 Green 5 Min 255–255 Green 5 Max
15	Blue	0	0–254 Blue 5 Min 255–255 Blue 5 Max
16	Red	0	0–254 Red 6 Min 255–255 Red 6 Max
17	Green	0	0–254 Green 6 Min 255–255 Green 6 Max
18	Blue	0	0–254 Blue 6 Min 255–255 Blue 6 Max
19	Red	0	0–254 Red 7 Min 255–255 Red 7 Max
20	Green	0	0–254 Green 7 Min 255–255 Green 7 Max
21	Blue	0	0–254 Blue 7 Min 255–255 Blue 7 Max
22	Red	0	0–254 Red 8 Min 255–255 Red 8 Max
23	Green	0	0–254 Green 8 Min 255–255 Green 8 Max
24	Blue	0	0–254 Blue 8 Min 255–255 Blue 8 Max

48CH RGBWLC CELLS 8Bit

48 channels

Ch	Function	Default	DMX values
1	Red	0	0–254 Red 1 Min 255–255 Red 1 Max
2	Green	0	0–254 Green 1 Min 255–255 Green 1 Max
3	Blue	0	0–254 Blue 1 Min 255–255 Blue 1 Max
4	White	0	0–254 White 1 Min 255–255 White 1 Max
5	Color Add GY	0	0–254 Lime 1 Min 255–255 Lime 1 Max
6	Color Add C	0	0–254 Cyan 1 Min 255–255 Cyan 1 Max
7	Red	0	0–254 Red 2 Min 255–255 Red 2 Max

48CH RGBWLC CELLS 8Bit (continued)

Ch	Function	Default	DMX values
8	Green	0	0–254 Green 2 Min 255–255 Green 2 Max
9	Blue	0	0–254 Blue 2 Min 255–255 Blue 2 Max
10	White	0	0–254 White 2 Min 255–255 White 2 Max
11	Color Add GY	0	0–254 Lime 2 Min 255–255 Lime 2 Max
12	Color Add C	0	0–254 Cyan 2 Min 255–255 Cyan 2 Max
13	Red	0	0–254 Red 3 Min 255–255 Red 3 Max
14	Green	0	0–254 Green 3 Min 255–255 Green 3 Max
15	Blue	0	0–254 Blue 3 Min 255–255 Blue 3 Max
16	White	0	0–254 White 3 Min 255–255 White 3 Max
17	Color Add GY	0	0–254 Lime 3 Min 255–255 Lime 3 Max
18	Color Add C	0	0–254 Cyan 3 Min 255–255 Cyan 3 Max
19	Red	0	0–254 Red 4 Min 255–255 Red 4 Max
20	Green	0	0–254 Green 4 Min 255–255 Green 4 Max
21	Blue	0	0–254 Blue 4 Min 255–255 Blue 4 Max
22	White	0	0–254 White 4 Min 255–255 White 4 Max
23	Color Add GY	0	0–254 Lime 4 Min 255–255 Lime 4 Max
24	Color Add C	0	0–254 Cyan 4 Min 255–255 Cyan 4 Max
25	Red	0	0–254 Red 5 Min 255–255 Red 5 Max
26	Green	0	0–254 Green 5 Min 255–255 Green 5 Max
27	Blue	0	0–254 Blue 5 Min 255–255 Blue 5 Max
28	White	0	0–254 White 5 Min 255–255 White 5 Max
29	Color Add GY	0	0–254 Lime 5 Min 255–255 Lime 5 Max
30	Color Add C	0	0–254 Cyan 5 Min 255–255 Cyan 5 Max
31	Red	0	0–254 Red 6 Min 255–255 Red 6 Max
32	Green	0	0–254 Green 6 Min 255–255 Green 6 Max
33	Blue	0	0–254 Blue 6 Min 255–255 Blue 6 Max

48CH RGBWLC CELLS 8Bit (continued)

Ch	Function	Default	DMX values
34	White	0	0–254 White 6Min 255–255 White 6 Max
35	Color Add GY	0	0–254 Lime 6 Min 255–255 Lime 6 Max
36	Color Add C	0	0–254 Cyan 6 Min 255–255 Cyan 6 Max
37	Red	0	0–254 Red 7 Min 255–255 Red 7 Max
38	Green	0	0–254 Green 7 Min 255–255 Green 7 Max
39	Blue	0	0–254 Blue 7 Min 255–255 Blue 7 Max
40	White	0	0–254 White 7 Min 255–255 White 7 Max
41	Color Add GY	0	0–254 Lime 7 Min 255–255 Lime 7 Max
42	Color Add C	0	0–254 Cyan 7 Min 255–255 Cyan 7 Max
43	Red	0	0–254 Red 8 Min 255–255 Red 8 Max
44	Green	0	0–254 Green 8 Min 255–255 Green 8 Max
45	Blue	0	0–254 Blue 8 Min 255–255 Blue 8 Max
46	White	0	0–254 White 8 Min 255–255 White 8 Max
47	Color Add GY	0	0–254 Lime 8 Min 255–255 Lime 8 Max
48	Color Add C	0	0–254 Cyan 8 Min 255–255 Cyan 8 Max

58CH EXTENDED CELLS

58 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	50	0–31 Closed 32–63 Open 64–94 Strobe Min 95–95 Strobe Max 96–127 Open 128–158 Strobe Pulse Min 159–159 Strobe Pulse Max 160–191 Open 192–222 Random Strobe Min 223–223 Random Strobe Max 224–255 Open
2	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent

58CH EXTENDED CELLS (continued)

Ch	Function	Default	DMX values
3	Color Wheel	0	0–19 Open (wheel slot 1) 20–20 2000 (wheel slot 2) 21–21 2100 (wheel slot 3) 22–22 2200 (wheel slot 4) 23–23 2300 (wheel slot 5) 24–24 2400 (wheel slot 6) 25–25 2500 (wheel slot 7) 26–26 2600 (wheel slot 8) 27–27 2700 (wheel slot 9) 28–28 2800 (wheel slot 10) 29–29 2900 (wheel slot 11) 30–30 3000 (wheel slot 12) 31–31 3100 (wheel slot 13) 32–32 3200 (wheel slot 14) 33–33 3300 (wheel slot 15) 34–34 3400 (wheel slot 16) 35–35 3500 (wheel slot 17) 36–36 3600 (wheel slot 18) 37–37 3700 (wheel slot 19) 38–38 3800 (wheel slot 20) 39–39 3900 (wheel slot 21) 40–40 4000 (wheel slot 22) 41–41 4100 (wheel slot 23) 42–42 4200 (wheel slot 24) 43–43 4300 (wheel slot 25) 44–44 4400 (wheel slot 26) 45–45 4500 (wheel slot 27) 46–46 4600 (wheel slot 28) 47–47 4700 (wheel slot 29) 48–48 4800 (wheel slot 30) 49–49 4900 (wheel slot 31) 50–50 5000 (wheel slot 32) 51–51 5100 (wheel slot 33) 52–52 5200 (wheel slot 34) 53–53 5300 (wheel slot 35) 54–54 5400 (wheel slot 36) 55–55 5500 (wheel slot 37) 56–56 56000 (wheel slot 38) 57–57 5700 (wheel slot 39) 58–58 5800 (wheel slot 40) 59–59 5900 (wheel slot 41) 60–60 6000 (wheel slot 42) 61–61 6100 (wheel slot 43) 62–62 6200 (wheel slot 44) 63–63 6300 (wheel slot 45) 64–64 6400 (wheel slot 46) 65–65 6500 (wheel slot 47) 66–66 6600 (wheel slot 48) 67–67 6700 (wheel slot 49) 68–68 6800 (wheel slot 50) 69–69 6900 (wheel slot 51) 70–70 7000 (wheel slot 52) 71–71 7100 (wheel slot 53) 72–72 7200 (wheel slot 54) 73–73 7300 (wheel slot 55) 74–74 7400 (wheel slot 56) 75–75 7500 (wheel slot 57) 76–76 7600 (wheel slot 58) 77–77 7700 (wheel slot 59) 78–78 7800 (wheel slot 60) 79–79 7900 (wheel slot 61) 80–80 8000 (wheel slot 62) 81–81 8100 (wheel slot 63) 82–100 8200 (wheel slot 64)

58CH EXTENDED CELLS (continued)

Ch	Function	Default	DMX values
4	Color RGBGreen	0	0–0 Idle 1–127 Full Minus Green to Neutral 128–128 Neutral White 129–255 Neutral to Full Plus Green

58CH EXTENDED CELLS (continued)

Ch	Function	Default	DMX values
5	Color Wheel 2	0	0–0 Open (wheel slot 61) 1–1 Pale Yellow (wheel slot 1) 2–2 Straw (wheel slot 2) 3–3 Gold Tint (wheel slot 3) 4–4 Spring Yellow (wheel slot 4) 5–5 Medium Yellow (wheel slot 5) 6–6 Yellow (wheel slot 6) 7–7 Deep Amber (wheel slot 7) 8–8 Deep Straw (wheel slot 8) 9–9 Loving Amber (wheel slot 9) 10–10 Gold Amber (wheel slot 10) 11–11 Orange (wheel slot 11) 12–12 Deep Orange (wheel slot 12) 13–13 Dark Amber (wheel slot 13) 14–14 Millennium Gold (wheel slot 14) 15–15 Deep Golden Amber (wheel slot 15) 16–16 Scarlet (wheel slot 16) 17–17 Primary Red (wheel slot 17) 18–18 Bright Red (wheel slot 18) 19–19 Medium Red (wheel slot 19) 20–20 Fire (wheel slot 20) 21–21 Pink (wheel slot 21) 22–22 Medium Pink (wheel slot 22) 23–23 Dark Pink (wheel slot 23) 24–24 Bright Pink (wheel slot 24) 25–25 Bright Rose (wheel slot 25) 26–26 Special Rose Pink (wheel slot 26) 27–27 Vanity Fair (wheel slot 27) 28–28 Magenta (wheel slot 28) 29–29 Dark Magenta (wheel slot 29) 30–30 Rose Purple (wheel slot 30) 31–31 Mauve (wheel slot 31) 32–32 Medium Purple (wheel slot 32) 33–33 Lavender (wheel slot 33) 34–34 Palace blue (wheel slot 34) 35–35 Dark Blue (wheel slot 35) 36–36 Medium Blue (wheel slot 36) 37–37 Deep Blue (wheel slot 37) 38–38 Daylight Blue (wheel slot 38) 39–39 Slate Blue (wheel slot 39) 40–40 Light Blue (wheel slot 40) 41–41 Sky Blue (wheel slot 41) 42–42 Pale Navy Blue (wheel slot 42) 43–43 Marine Blue (wheel slot 43) 44–44 Peacock Blue (wheel slot 44) 45–45 Lagoon Blue (wheel slot 45) 46–46 Medium Blue Green (wheel slot 46) 47–47 Dark Yellow Green (wheel slot 47) 48–48 Primary Green (wheel slot 48) 49–49 Fern Green (wheel slot 49) 50–50 Moss Green (wheel slot 50) 51–51 Dark Green (wheel slot 51) 52–52 Lime Green (wheel slot 52) 53–53 Pale Green (wheel slot 53) 54–179 No Function 180–201 Clockwise fast to slow 202–207 Stop 208–229 Counter-clockwise slow to fast 230–234 Open 235–239 Fast 240–244 Medium 245–249 Slow 250–255 Open

58CH EXTENDED CELLS (continued)

Ch	Function	Default	DMX values
6	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–120 Stage 2 121–121 0s 122–122 0*1s 123–123 0*2 124–124 0*3s 125–125 0*4s 126–126 0*5s 127–127 0*6s 128–128 0*7 129–129 0*8s 130–130 0*9s 131–131 1s 132–132 1*5s 133–133 2s 134–134 3s 135–135 4s 136–136 5s 137–137 6s 138–138 7s 139–139 8s 140–140 9s 141–141 10s 142–255 Idle
7	Function	0	
8	Effect	0	
9	Effects1Adjust1	0	

58CH EXTENDED CELLS (continued)

Ch	Function	Default	DMX values
10	Effects1Pos	0	0–0 Idle 1–1 Fixture Offset 10 2–2 Fixture Offset 20 3–3 Fixture Offset 30 4–4 Fixture Offset 40 5–5 Fixture Offset 50 6–6 Fixture Offset 60 7–7 Fixture Offset 70 8–8 Fixture Offset 80 9–9 Fixture Offset 90 10–10 Fixture Offset 100 11–11 Fixture Offset 110 12–12 Fixture Offset 120 13–13 Fixture Offset 130 14–14 Fixture Offset 140 15–15 Fixture Offset 150 16–16 Fixture Offset 160 17–17 Fixture Offset 170 18–18 Fixture Offset 180 19–19 Fixture Offset 190 20–20 Fixture Offset 200 21–21 Fixture Offset 210 22–22 Fixture Offset 220 23–23 Fixture Offset 230 24–24 Fixture Offset 240 25–25 Fixture Offset 250 26–26 Fixture Offset 260 27–27 Fixture Offset 270 28–28 Fixture Offset 280 29–29 Fixture Offset 290 30–30 Fixture Offset 300 31–31 Fixture Offset 310 32–32 Fixture Offset 320 33–33 Fixture Offset 330 34–34 Fixture Offset 340 35–35 Fixture Offset 350 36–36 Syncronized 37–100 No function 101–120 Random Fixture Offset 121–140 Random Pixel Order 141–255 Random Steps
11	Red	0	0–254 Red 1 Min 255–255 Red 1 Max
12	Green	0	0–254 Green 1 Min 255–255 Green 1 Max
13	Blue	0	0–254 Blue 1 Min 255–255 Blue 1 Max
14	White	0	0–254 White 1 Min 255–255 White 1 Max
15	Color Add GY	0	0–254 Lime 1 Min 255–255 Lime 1 Max
16	Color Add C	0	0–254 Cyan 1 Min 255–255 Cyan 1 Max
17	Red	0	0–254 Red 2 Min 255–255 Red 2 Max
18	Green	0	0–254 Green 2 Min 255–255 Green 2 Max
19	Blue	0	0–254 Blue 2 Min 255–255 Blue 2 Max

58CH EXTENDED CELLS (continued)

Ch	Function	Default	DMX values
20	White	0	0–254 White 2 Min 255–255 White 2 Max
21	Color Add GY	0	0–254 Lime 2 Min 255–255 Lime 2 Max
22	Color Add C	0	0–254 Cyan 2 Min 255–255 Cyan 2 Max
23	Red	0	0–254 Red 3 Min 255–255 Red 3 Max
24	Green	0	0–254 Green 3 Min 255–255 Green 3 Max
25	Blue	0	0–254 Blue 3 Min 255–255 Blue 3 Max
26	White	0	0–254 White 3 Min 255–255 White 3 Max
27	Color Add GY	0	0–254 Lime 3 Min 255–255 Lime 3 Max
28	Color Add C	0	0–254 Cyan 3 Min 255–255 Cyan 3 Max
29	Red	0	0–254 Red 4 Min 255–255 Red 4 Max
30	Green	0	0–254 Green 4 Min 255–255 Green 4 Max
31	Blue	0	0–254 Blue 4 Min 255–255 Blue 4 Max
32	White	0	0–254 White 4 Min 255–255 White 4 Max
33	Color Add GY	0	0–254 Lime 4 Min 255–255 Lime 4 Max
34	Color Add C	0	0–254 Cyan 4 Min 255–255 Cyan 4 Max
35	Red	0	0–254 Red 5 Min 255–255 Red 5 Max
36	Green	0	0–254 Green 5 Min 255–255 Green 5 Max
37	Blue	0	0–254 Blue 5 Min 255–255 Blue 5 Max
38	White	0	0–254 White 5 Min 255–255 White 5 Max
39	Color Add GY	0	0–254 Lime 5 Min 255–255 Lime 5 Max
40	Color Add C	0	0–254 Cyan 5 Min 255–255 Cyan 5 Max
41	Red	0	0–254 Red 6 Min 255–255 Red 6 Max
42	Green	0	0–254 Green 6 Min 255–255 Green 6 Max
43	Blue	0	0–254 Blue 6 Min 255–255 Blue 6 Max
44	White	0	0–254 White 6 Min 255–255 White 6 Max
45	Color Add GY	0	0–254 Lime 6 Min 255–255 Lime 6 Max

58CH EXTENDED CELLS (continued)

Ch	Function	Default	DMX values
46	Color Add C	0	0–254 Cyan 6 Min 255–255 Cyan 6 Max
47	Red	0	0–254 Red 7 Min 255–255 Red 7 Max
48	Green	0	0–254 Green 7 Min 255–255 Green 7 Max
49	Blue	0	0–254 Blue 7 Min 255–255 Blue 7 Max
50	White	0	0–254 White 7 Min 255–255 White 7 Max
51	Color Add GY	0	0–254 Lime 7 Min 255–255 Lime 7 Max
52	Color Add C	0	0–254 Cyan 7 Min 255–255 Cyan 7 Max
53	Red	0	0–254 Red 8 Min 255–255 Red 8 Max
54	Green	0	0–254 Green 8 Min 255–255 Green 8 Max
55	Blue	0	0–254 Blue 8 Min 255–255 Blue 8 Max
56	White	0	0–254 White 8 Min 255–255 White 8 Max
57	Color Add GY	0	0–254 Lime 8 Min 255–255 Lime 8 Max
58	Color Add C	0	0–254 Cyan 8 Min 255–255 Cyan 8 Max

96CH RGBWLC CELLS 16-BIT

96 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Red Fine	0	Fine byte of Red
3	Green	0	
4	Green Fine	0	Fine byte of Green
5	Blue	0	
6	Blue Fine	0	Fine byte of Blue
7	White	0	
8	White Fine	0	Fine byte of White
9	Color Add GY	0	
10	Color Add GY Fine	0	Fine byte of Color Add GY
11	Color Add C	0	
12	Color Add C Fine	0	Fine byte of Color Add C
13	Red	0	
14	Red Fine	0	Fine byte of Red
15	Green	0	
16	Green Fine	0	Fine byte of Green
17	Blue	0	
18	Blue Fine	0	Fine byte of Blue
19	White	0	

96CH RGBWLC CELLS 16-BIT (continued)

Ch	Function	Default	DMX values
20	White Fine	0	Fine byte of White
21	Color Add GY	0	
22	Color Add GY Fine	0	Fine byte of Color Add GY
23	Color Add C	0	
24	Color Add C Fine	0	Fine byte of Color Add C
25	Red	0	
26	Red Fine	0	Fine byte of Red
27	Green	0	
28	Green Fine	0	Fine byte of Green
29	Blue	0	
30	Blue Fine	0	Fine byte of Blue
31	White	0	
32	White Fine	0	Fine byte of White
33	Color Add GY	0	
34	Color Add GY Fine	0	Fine byte of Color Add GY
35	Color Add C	0	
36	Color Add C Fine	0	Fine byte of Color Add C
37	Red	0	
38	Red Fine	0	Fine byte of Red
39	Green	0	
40	Green Fine	0	Fine byte of Green
41	Blue	0	
42	Blue Fine	0	Fine byte of Blue
43	White	0	
44	White Fine	0	Fine byte of White
45	Color Add GY	0	
46	Color Add GY Fine	0	Fine byte of Color Add GY
47	Color Add C	0	
48	Color Add C Fine	0	Fine byte of Color Add C
49	Red	0	
50	Red Fine	0	Fine byte of Red
51	Green	0	
52	Green Fine	0	Fine byte of Green
53	Blue	0	
54	Blue Fine	0	Fine byte of Blue
55	White	0	
56	White Fine	0	Fine byte of White
57	Color Add GY	0	
58	Color Add GY Fine	0	Fine byte of Color Add GY
59	Color Add C	0	
60	Color Add C Fine	0	Fine byte of Color Add C
61	Red	0	
62	Red Fine	0	Fine byte of Red
63	Green	0	
64	Green Fine	0	Fine byte of Green

96CH RGBWLC CELLS 16-BIT (continued)

Ch	Function	Default	DMX values
65	Blue	0	
66	Blue Fine	0	Fine byte of Blue
67	White	0	
68	White Fine	0	Fine byte of White
69	Color Add GY	0	
70	Color Add GY Fine	0	Fine byte of Color Add GY
71	Color Add C	0	
72	Color Add C Fine	0	Fine byte of Color Add C
73	Red	0	
74	Red Fine	0	Fine byte of Red
75	Green	0	
76	Green Fine	0	Fine byte of Green
77	Blue	0	
78	Blue Fine	0	Fine byte of Blue
79	White	0	
80	White Fine	0	Fine byte of White
81	Color Add GY	0	
82	Color Add GY Fine	0	Fine byte of Color Add GY
83	Color Add C	0	
84	Color Add C Fine	0	Fine byte of Color Add C
85	Red	0	
86	Red Fine	0	Fine byte of Red
87	Green	0	
88	Green Fine	0	Fine byte of Green
89	Blue	0	
90	Blue Fine	0	Fine byte of Blue
91	White	0	
92	White Fine	0	Fine byte of White
93	Color Add GY	0	
94	Color Add GY Fine	0	Fine byte of Color Add GY
95	Color Add C	0	
96	Color Add C Fine	0	Fine byte of Color Add C