
Clay Paky

Sharpy Wash 330

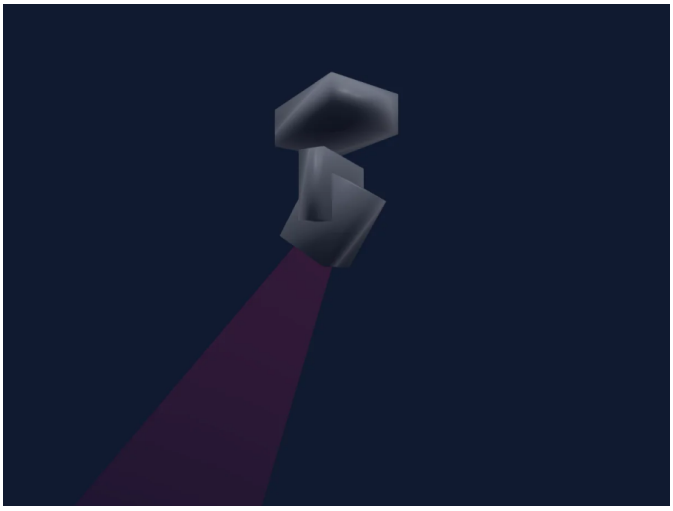

Manufacturer	**Clay Paky**
Type	**Moving head**
DMX modes	**1**
DMX footprint	**19 channels**
Beam angle	**6.5-48°**
Pan range	**540°**
Tilt range	**240°**
Size (W × H × D)	**220 × 300 × 220 mm**
GDTF fixture type	**C1723928-C393-49E8-B2B3-47…**

Controls

Frost · Zoom · CMY colour mixing · Colour wheel · Strobe · Dimmer · Pan and tilt · Movement speed

Safety-relevant functions

Lamp on and off · Fixture reset · Strobe

DMX modes

Standard (19 ch) 19 ch

Standard (19 ch)

19 channels

Ch	Function	Default	DMX values
1	Cyan	0	
2	Magenta	0	
3	Yellow	0	
4	Color Wheel	0	0–5 OPEN (wheel slot 1) 6–10 OPEN/RED 11–15 RED (wheel slot 2) 16–21 RED/AMBER 22–26 AMBER (wheel slot 3) 27–31 AMBER/TEAL 32–37 TEAL (wheel slot 4) 38–42 TEAL/GREEN 43–47 GREEN (wheel slot 5) 48–53 GREEN/LIME 54–58 LIME (wheel slot 6) 59–63 LIME/PINK 64–69 PINK (wheel slot 7) 70–74 PINK/UV 75–79 UV (wheel slot 8) 80–85 UV/AMBER2 86–90 AMBER2 (wheel slot 9) 91–95 AMBER2/CTO 96–101 CTO (wheel slot 10) 102–106 CTO/CTB 107–111 CTB (wheel slot 11) 112–117 CTB/BLUE 118–122 BLUE (wheel slot 12) 123–127 BLUE/OPEN 128–192 CW 193–255 CCW
5	Shutter / Strobe	255	0–3 CLOSED 4–102 MIN STROBE 103–107 MAX STROBE 108–206 MIN PULSE 207–212 MAX PULSE 213–251 RANDOM STROBE 252–255 OPEN
6	Dimmer	0	
7	Dimmer Fine	0	Fine byte of Dimmer
8	Beam Shaper	0	0–127 OFF 128–255 ON
9	Beam Shaper Pos	0	0–127 DEGREES 128–190 CCW 191–192 NO ROTATION 193–255 CW
10	Frost1	0	
11	Frost2	0	
12	Zoom	255	
13	Pan	127	
14	Pan Fine	127	Fine byte of Pan
15	Tilt	127	
16	Tilt Fine	127	Fine byte of Tilt

Standard (19 ch) (continued)

Ch	Function	Default	DMX values
17	Position MSpeed	0	12–24 PAN/TILT FAST 25–37 PAN/TILT NORMAL 38–50 CONVENTIONAL 51–62 LINEAR 63–75 CMY CURVE: FULL RANGE 76–87 CMY CURVE: LIMITED RANGE 88–101 CMY SHORTCUT ON 102–255 CMY SHORTCUT OFF
18	Control1	0	0–25 Control1 1 26–76 RESET EFFECTS 77–127 RESET PAN/TILT 128–255 RESET ALL
19	Lamp Control	101	0–25 LampControl 1 26–100 LAMP OFF 101–255 LAMP ON