
DTS Lighting

PIXEL PUNTO1

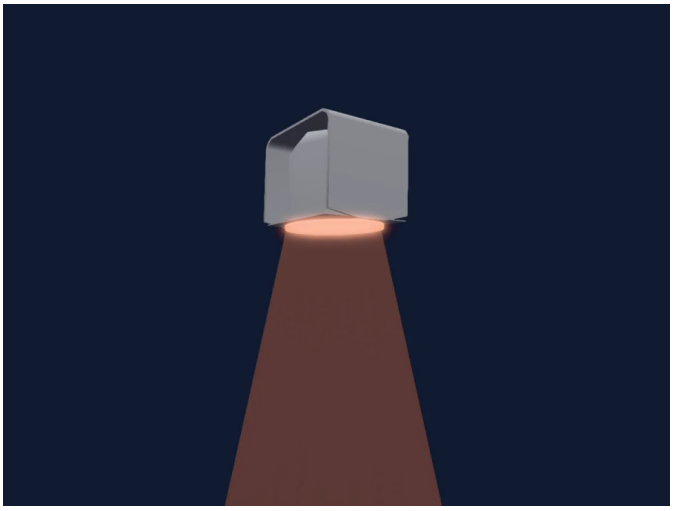

Manufacturer	**DTS Lighting**
Type	**PAR**
DMX modes	**2**
DMX footprint	**4, 11 channels**
Beam angle	**25°**
Size (W × H × D)	**55 × 43 × 43 mm**
GDTF fixture type	**4669F328-77A8-49B0-9F44-713…**

Controls

Extra LED colours · RGB colour mixing · Dimmer

DMX modes

RGBW	4 ch
11 CH	11 ch

RGBW

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	

11 CH

11 channels

Ch	Function	Default	DMX values
1	Color RGBRed	0	
2	Color RGBRed Fine	0	Fine byte of Color RGBRed
3	Color Add GC	0	
4	Color Add GC Fine	0	Fine byte of Color Add GC
5	Color RGBBlue	0	
6	Color RGBBlue Fine	0	Fine byte of Color RGBBlue
7	White	0	
8	White Fine	0	Fine byte of White
9	Dimmer	0	
10	Dimmer Fine	0	Fine byte of Dimmer
11	Control1	40	0–9 No Function 10–19 NO DMX ACTION KEEP LAST DMX 20–29 NO DMX ACTION BLACK OUT 30–39 NO DMX ACTION RGB@100 40–49 NO DMX ACTION RGB 60 50–69 RESERVED (20 FREE STEPS) 70–79 NO DMX ACTION CUSTOM 80–89 NO DMX ACTION CUSTOM 2 90–99 NO DMX ACTION CUSTOM 3 100–109 NO DMX ACTION CUSTOM 4 110–129 RESERVED (20 FREE STEPS) 130–149 VIEW CUSTOM 150–169 VIEW CUSTOM 2 170–189 VIEW CUSTOM 3 190–209 VIEW CUSTOM 4- 210–229 RESERVED (20 FREE STEPS) 230–230 CREATE AND STORE CUSTOM 231–231 CREATE AND STORE CUSTOM 2 232–232 CREATE AND STORE CUSTOM 3 233–233 CREATE AND STORE CUSTOM 4 234–253 RESERVED 254–254 SET DEFAULT FOR ALL PROM CHANNEL PARAMETE… 255–255 No Function