
EK Lights

POWER PIXEL Q50

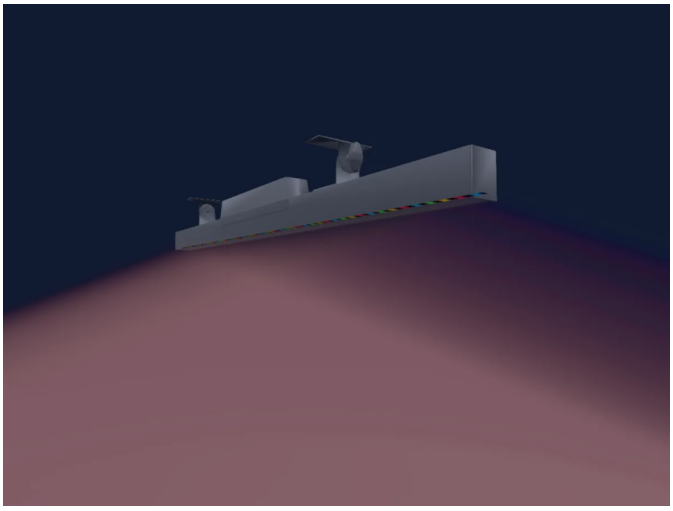

Manufacturer	**EK Lights**
Type	**Effect light**
DMX modes	**17**
DMX footprint	**4, 6, 8, 10, 11, 13, 14, 20, 26, 40, 46, 100, 106, 200, 202, 206**
Beam angle	**134°**
Heads / cells	**50**
Size (W × H × D)	**619 × 44 × 90 mm**
GDTF fixture type	**D1B17ABF-7381-4561-97A5-40…**

Controls

Extra LED colours · RGB colour mixing · Colour temperature · Strobe · Dimmer · Pixel control

Safety-relevant functions

Strobe · Built-in effect programmes

DMX modes

4 CH	4 ch
6 CH	6 ch
8 CH	8 ch
8-2 CH	8 ch
10 CH	10 ch
11 CH	11 ch
13 CH	13 ch
14 CH	14 ch
20 CH	20 ch
26 CH	26 ch
40 CH	40 ch
46 CH	46 ch
100 CH	100 ch
106 CH	106 ch
200 CH	200 ch
202 CH	202 ch
206 CH	206 ch

4 CH

4 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	White	0	

6 CH

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	255	
6	Shutter / Strobe	0	0–1 No Function 2–255 Strobe slow to fas

8 CH

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Red	255	
4	Green	255	
5	Blue	255	
6	White	255	
7	Shutter / Strobe	0	0–1 No Function 2–255 Strobe slow to fas

8 CH (continued)

Ch	Function	Default	DMX values
8	C TC	0	0–9 No Function 10–18 1800K 19–28 1900K 29–37 2000K 38–47 2100K 48–56 2200K 57–66 2300K 67–75 2400K 76–85 2500K 86–94 2600K 95–103 2700K 104–113 2800K 114–122 2900K 123–132 3000K 133–141 3200K 142–151 3500K 152–160 3700K 161–170 4000K 171–179 4300K 180–188 4700K 189–198 5000K 199–207 5600K 208–217 6000K 218–226 6500K 227–236 7000K 237–245 7500K 246–255 8000K

8-2 CH

8 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	White	0	
5	Red	0	
6	Green	0	
7	Blue	0	
8	White	0	

10 CH

10 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	255	
6	Shutter / Strobe	0	0–1 No Function 2–255 Strobe slow to fas

10 CH (continued)

Ch	Function	Default	DMX values
7	C TC	0	0–9 No Function 10–18 1800K 19–28 1900K 29–37 2000K 38–47 2100K 48–56 2200K 57–66 2300K 67–75 2400K 76–85 2500K 86–94 2600K 95–103 2700K 104–113 2800K 114–122 2900K 123–132 3000K 133–141 3200K 142–151 3500K 152–160 3700K 161–170 4000K 171–179 4300K 180–188 4700K 189–198 5000K 199–207 5600K 208–217 6000K 218–226 6500K 227–236 7000K 237–245 7500K 246–255 8000K
8	Effect	0	0–10 No Function 11–40 Effect 1 41–80 Effect 2 81–120 Effect 3 121–160 Effect 4 161–200 Effect 5 201–240 Effect 6 241–255 No Function
9	Effects1Pos	0	
10	Dimmer Mode	0	0–51 Preset dimmer speed from display menu 52–101 Dimmer Off 102–152 Dimmer 1 153–203 Dimmer 2 204–255 Dimmer 3

11 CH

11 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Red	255	
4	Red Fine	255	Fine byte of Red
5	Green	255	
6	Green Fine	255	Fine byte of Green
7	Blue	255	
8	Blue Fine	255	Fine byte of Blue
9	White	255	
10	White Fine	255	Fine byte of White

11 CH (continued)

Ch	Function	Default	DMX values
11	Shutter / Strobe	0	0–1 No Function 2–255 Strobe slow to fas

13 CH

13 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Red	255	
4	Red Fine	255	Fine byte of Red
5	Green	255	
6	Green Fine	255	Fine byte of Green
7	Blue	255	
8	Blue Fine	255	Fine byte of Blue
9	White	255	
10	White Fine	255	Fine byte of White
11	Shutter / Strobe	0	0–1 No Function 2–255 Strobe slow to fas
12	C TC	0	0–9 No Function 10–18 1800K 19–28 1900K 29–37 2000K 38–47 2100K 48–56 2200K 57–66 2300K 67–75 2400K 76–85 2500K 86–94 2600K 95–103 2700K 104–113 2800K 114–122 2900K 123–132 3000K 133–141 3200K 142–151 3500K 152–160 3700K 161–170 4000K 171–179 4300K 180–188 4700K 189–198 5000K 199–207 5600K 208–217 6000K 218–226 6500K 227–236 7000K 237–245 7500K 246–255 8000K
13	Dimmer Mode	0	0–51 Preset dimmer speed from display menu 52–101 Dimmer Off 102–152 Dimmer 1 153–203 Dimmer 2 204–255 Dimmer 3

14 CH

14 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	
5	Red	255	
6	Green	255	
7	Blue	255	
8	White	255	
9	Dimmer	0	0–254 Closed 255–255 Open
10	Shutter / Strobe	0	0–1 No Function 2–255 Strobe slow to fas
11	C TC	0	0–9 No Function 10–18 1800K 19–28 1900K 29–37 2000K 38–47 2100K 48–56 2200K 57–66 2300K 67–75 2400K 76–85 2500K 86–94 2600K 95–103 2700K 104–113 2800K 114–122 2900K 123–132 3000K 133–141 3200K 142–151 3500K 152–160 3700K 161–170 4000K 171–179 4300K 180–188 4700K 189–198 5000K 199–207 5600K 208–217 6000K 218–226 6500K 227–236 7000K 237–245 7500K 246–255 8000K
12	Effect	0	0–10 No Function 11–40 Effect 1 41–80 Effect 2 81–120 Effect 3 121–160 Effect 4 161–200 Effect 5 201–240 Effect 6 241–255 No Function
13	Effects1Pos	0	
14	Dimmer Mode	0	0–51 Preset dimmer speed from display menu 52–101 Dimmer Off 102–152 Dimmer 1 153–203 Dimmer 2 204–255 Dimmer 3

20 CH

20 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	White	0	
5	Red	0	
6	Green	0	
7	Blue	0	
8	White	0	
9	Red	0	
10	Green	0	
11	Blue	0	
12	White	0	
13	Red	0	
14	Green	0	
15	Blue	0	
16	White	0	
17	Red	0	
18	Green	0	
19	Blue	0	
20	White	0	

26 CH

26 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	
5	Red	255	
6	Green	255	
7	Blue	255	
8	White	255	
9	Red	255	
10	Green	255	
11	Blue	255	
12	White	255	
13	Red	255	
14	Green	255	
15	Blue	255	
16	White	255	
17	Red	255	
18	Green	255	
19	Blue	255	
20	White	255	
21	Dimmer	0	0–254 Closed 255–255 Open

26 CH (continued)

Ch	Function	Default	DMX values
22	Shutter / Strobe	0	0–1 No Function 2–255 Strobe slow to fas
23	C TC	0	0–9 No Function 10–18 1800K 19–28 1900K 29–37 2000K 38–47 2100K 48–56 2200K 57–66 2300K 67–75 2400K 76–85 2500K 86–94 2600K 95–103 2700K 104–113 2800K 114–122 2900K 123–132 3000K 133–141 3200K 142–151 3500K 152–160 3700K 161–170 4000K 171–179 4300K 180–188 4700K 189–198 5000K 199–207 5600K 208–217 6000K 218–226 6500K 227–236 7000K 237–245 7500K 246–255 8000K
24	Effect	0	0–10 No Function 11–40 Effect 1 41–80 Effect 2 81–120 Effect 3 121–160 Effect 4 161–200 Effect 5 201–240 Effect 6 241–255 No Function
25	Effects1Pos	0	
26	Dimmer Mode	0	0–51 Preset dimmer speed from display menu 52–101 Dimmer Off 102–152 Dimmer 1 153–203 Dimmer 2 204–255 Dimmer 3

40 CH

40 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	White	0	
5	Red	0	
6	Green	0	
7	Blue	0	
8	White	0	
9	Red	0	

40 CH (continued)

Ch	Function	Default	DMX values
10	Green	0	
11	Blue	0	
12	White	0	
13	Red	0	
14	Green	0	
15	Blue	0	
16	White	0	
17	Red	0	
18	Green	0	
19	Blue	0	
20	White	0	
21	Red	0	
22	Green	0	
23	Blue	0	
24	White	0	
25	Red	0	
26	Green	0	
27	Blue	0	
28	White	0	
29	Red	0	
30	Green	0	
31	Blue	0	
32	White	0	
33	Red	0	
34	Green	0	
35	Blue	0	
36	White	0	
37	Red	0	
38	Green	0	
39	Blue	0	
40	White	0	

46 CH

46 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	
5	Red	255	
6	Green	255	
7	Blue	255	
8	White	255	
9	Red	255	
10	Green	255	

46 CH (continued)

Ch	Function	Default	DMX values
11	Blue	255	
12	White	255	
13	Red	255	
14	Green	255	
15	Blue	255	
16	White	255	
17	Red	255	
18	Green	255	
19	Blue	255	
20	White	255	
21	Red	255	
22	Green	255	
23	Blue	255	
24	White	255	
25	Red	255	
26	Green	255	
27	Blue	255	
28	White	255	
29	Red	255	
30	Green	255	
31	Blue	255	
32	White	255	
33	Red	255	
34	Green	255	
35	Blue	255	
36	White	255	
37	Red	255	
38	Green	255	
39	Blue	255	
40	White	255	
41	Dimmer	0	0–254 Closed 255–255 Open
42	Shutter / Strobe	0	0–1 No Function 2–255 Strobe slow to fas

46 CH (continued)

Ch	Function	Default	DMX values
43	C TC	0	0–9 No Function 10–18 1800K 19–28 1900K 29–37 2000K 38–47 2100K 48–56 2200K 57–66 2300K 67–75 2400K 76–85 2500K 86–94 2600K 95–103 2700K 104–113 2800K 114–122 2900K 123–132 3000K 133–141 3200K 142–151 3500K 152–160 3700K 161–170 4000K 171–179 4300K 180–188 4700K 189–198 5000K 199–207 5600K 208–217 6000K 218–226 6500K 227–236 7000K 237–245 7500K 246–255 8000K
44	Effect	0	0–10 No Function 11–40 Effect 1 41–80 Effect 2 81–120 Effect 3 121–160 Effect 4 161–200 Effect 5 201–240 Effect 6 241–255 No Function
45	Effects1Pos	0	
46	Dimmer Mode	0	0–51 Preset dimmer speed from display menu 52–101 Dimmer Off 102–152 Dimmer 1 153–203 Dimmer 2 204–255 Dimmer 3

100 CH

100 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	White	0	
5	Red	0	
6	Green	0	
7	Blue	0	
8	White	0	
9	Red	0	
10	Green	0	
11	Blue	0	

100 CH (continued)

Ch	Function	Default	DMX values
12	White	0	
13	Red	0	
14	Green	0	
15	Blue	0	
16	White	0	
17	Red	0	
18	Green	0	
19	Blue	0	
20	White	0	
21	Red	0	
22	Green	0	
23	Blue	0	
24	White	0	
25	Red	0	
26	Green	0	
27	Blue	0	
28	White	0	
29	Red	0	
30	Green	0	
31	Blue	0	
32	White	0	
33	Red	0	
34	Green	0	
35	Blue	0	
36	White	0	
37	Red	0	
38	Green	0	
39	Blue	0	
40	White	0	
41	Red	0	
42	Green	0	
43	Blue	0	
44	White	0	
45	Red	0	
46	Green	0	
47	Blue	0	
48	White	0	
49	Red	0	
50	Green	0	
51	Blue	0	
52	White	0	
53	Red	0	
54	Green	0	
55	Blue	0	
56	White	0	

100 CH (continued)

Ch	Function	Default	DMX values
57	Red	0	
58	Green	0	
59	Blue	0	
60	White	0	
61	Red	0	
62	Green	0	
63	Blue	0	
64	White	0	
65	Red	0	
66	Green	0	
67	Blue	0	
68	White	0	
69	Red	0	
70	Green	0	
71	Blue	0	
72	White	0	
73	Red	0	
74	Green	0	
75	Blue	0	
76	White	0	
77	Red	0	
78	Green	0	
79	Blue	0	
80	White	0	
81	Red	0	
82	Green	0	
83	Blue	0	
84	White	0	
85	Red	0	
86	Green	0	
87	Blue	0	
88	White	0	
89	Red	0	
90	Green	0	
91	Blue	0	
92	White	0	
93	Red	0	
94	Green	0	
95	Blue	0	
96	White	0	
97	Red	0	
98	Green	0	
99	Blue	0	
100	White	0	

106 CH

106 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	
5	Red	255	
6	Green	255	
7	Blue	255	
8	White	255	
9	Red	255	
10	Green	255	
11	Blue	255	
12	White	255	
13	Red	255	
14	Green	255	
15	Blue	255	
16	White	255	
17	Red	255	
18	Green	255	
19	Blue	255	
20	White	255	
21	Red	255	
22	Green	255	
23	Blue	255	
24	White	255	
25	Red	255	
26	Green	255	
27	Blue	255	
28	White	255	
29	Red	255	
30	Green	255	
31	Blue	255	
32	White	255	
33	Red	255	
34	Green	255	
35	Blue	255	
36	White	255	
37	Red	255	
38	Green	255	
39	Blue	255	
40	White	255	
41	Red	255	
42	Green	255	
43	Blue	255	
44	White	255	
45	Red	255	

106 CH (continued)

Ch	Function	Default	DMX values
46	Green	255	
47	Blue	255	
48	White	255	
49	Red	255	
50	Green	255	
51	Blue	255	
52	White	255	
53	Red	255	
54	Green	255	
55	Blue	255	
56	White	255	
57	Red	255	
58	Green	255	
59	Blue	255	
60	White	255	
61	Red	255	
62	Green	255	
63	Blue	255	
64	White	255	
65	Red	255	
66	Green	255	
67	Blue	255	
68	White	255	
69	Red	255	
70	Green	255	
71	Blue	255	
72	White	255	
73	Red	255	
74	Green	255	
75	Blue	255	
76	White	255	
77	Red	255	
78	Green	255	
79	Blue	255	
80	White	255	
81	Red	255	
82	Green	255	
83	Blue	255	
84	White	255	
85	Red	255	
86	Green	255	
87	Blue	255	
88	White	255	
89	Red	255	
90	Green	255	

106 CH (continued)

Ch	Function	Default	DMX values
91	Blue	255	
92	White	255	
93	Red	255	
94	Green	255	
95	Blue	255	
96	White	255	
97	Red	255	
98	Green	255	
99	Blue	255	
100	White	255	
101	Dimmer	0	
102	Shutter / Strobe	0	0–1 No Function 2–255 Strobe slow to fas
103	C TC	0	
104	Effect	0	0–10 No Function 11–40 Effect 1 41–80 Effect 2 81–120 Effect 3 121–160 Effect 4 161–200 Effect 5 201–240 Effect 6 241–255 No Function
105	Effects1Pos	0	
106	Dimmer Mode	0	

200 CH

200 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	White	0	
5	Red	0	
6	Green	0	
7	Blue	0	
8	White	0	
9	Red	0	
10	Green	0	
11	Blue	0	
12	White	0	
13	Red	0	
14	Green	0	
15	Blue	0	
16	White	0	
17	Red	0	
18	Green	0	
19	Blue	0	
20	White	0	

200 CH (continued)

Ch	Function	Default	DMX values
21	Red	0	
22	Green	0	
23	Blue	0	
24	White	0	
25	Red	0	
26	Green	0	
27	Blue	0	
28	White	0	
29	Red	0	
30	Green	0	
31	Blue	0	
32	White	0	
33	Red	0	
34	Green	0	
35	Blue	0	
36	White	0	
37	Red	0	
38	Green	0	
39	Blue	0	
40	White	0	
41	Red	0	
42	Green	0	
43	Blue	0	
44	White	0	
45	Red	0	
46	Green	0	
47	Blue	0	
48	White	0	
49	Red	0	
50	Green	0	
51	Blue	0	
52	White	0	
53	Red	0	
54	Green	0	
55	Blue	0	
56	White	0	
57	Red	0	
58	Green	0	
59	Blue	0	
60	White	0	
61	Red	0	
62	Green	0	
63	Blue	0	
64	White	0	
65	Red	0	

200 CH (continued)

Ch	Function	Default	DMX values
66	Green	0	
67	Blue	0	
68	White	0	
69	Red	0	
70	Green	0	
71	Blue	0	
72	White	0	
73	Red	0	
74	Green	0	
75	Blue	0	
76	White	0	
77	Red	0	
78	Green	0	
79	Blue	0	
80	White	0	
81	Red	0	
82	Green	0	
83	Blue	0	
84	White	0	
85	Red	0	
86	Green	0	
87	Blue	0	
88	White	0	
89	Red	0	
90	Green	0	
91	Blue	0	
92	White	0	
93	Red	0	
94	Green	0	
95	Blue	0	
96	White	0	
97	Red	0	
98	Green	0	
99	Blue	0	
100	White	0	
101	Red	0	
102	Green	0	
103	Blue	0	
104	White	0	
105	Red	0	
106	Green	0	
107	Blue	0	
108	White	0	
109	Red	0	
110	Green	0	

200 CH (continued)

Ch	Function	Default	DMX values
111	Blue	0	
112	White	0	
113	Red	0	
114	Green	0	
115	Blue	0	
116	White	0	
117	Red	0	
118	Green	0	
119	Blue	0	
120	White	0	
121	Red	0	
122	Green	0	
123	Blue	0	
124	White	0	
125	Red	0	
126	Green	0	
127	Blue	0	
128	White	0	
129	Red	0	
130	Green	0	
131	Blue	0	
132	White	0	
133	Red	0	
134	Green	0	
135	Blue	0	
136	White	0	
137	Red	0	
138	Green	0	
139	Blue	0	
140	White	0	
141	Red	0	
142	Green	0	
143	Blue	0	
144	White	0	
145	Red	0	
146	Green	0	
147	Blue	0	
148	White	0	
149	Red	0	
150	Green	0	
151	Blue	0	
152	White	0	
153	Red	0	
154	Green	0	
155	Blue	0	

200 CH (continued)

Ch	Function	Default	DMX values
156	White	0	
157	Red	0	
158	Green	0	
159	Blue	0	
160	White	0	
161	Red	0	
162	Green	0	
163	Blue	0	
164	White	0	
165	Red	0	
166	Green	0	
167	Blue	0	
168	White	0	
169	Red	0	
170	Green	0	
171	Blue	0	
172	White	0	
173	Red	0	
174	Green	0	
175	Blue	0	
176	White	0	
177	Red	0	
178	Green	0	
179	Blue	0	
180	White	0	
181	Red	0	
182	Green	0	
183	Blue	0	
184	White	0	
185	Red	0	
186	Green	0	
187	Blue	0	
188	White	0	
189	Red	0	
190	Green	0	
191	Blue	0	
192	White	0	
193	Red	0	
194	Green	0	
195	Blue	0	
196	White	0	
197	Red	0	
198	Green	0	
199	Blue	0	
200	White	0	

202 CH

202 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	
5	Red	255	
6	Green	255	
7	Blue	255	
8	White	255	
9	Red	255	
10	Green	255	
11	Blue	255	
12	White	255	
13	Red	255	
14	Green	255	
15	Blue	255	
16	White	255	
17	Red	255	
18	Green	255	
19	Blue	255	
20	White	255	
21	Red	255	
22	Green	255	
23	Blue	255	
24	White	255	
25	Red	255	
26	Green	255	
27	Blue	255	
28	White	255	
29	Red	255	
30	Green	255	
31	Blue	255	
32	White	255	
33	Red	255	
34	Green	255	
35	Blue	255	
36	White	255	
37	Red	255	
38	Green	255	
39	Blue	255	
40	White	255	
41	Red	255	
42	Green	255	
43	Blue	255	
44	White	255	
45	Red	255	

202 CH (continued)

Ch	Function	Default	DMX values
46	Green	255	
47	Blue	255	
48	White	255	
49	Red	255	
50	Green	255	
51	Blue	255	
52	White	255	
53	Red	255	
54	Green	255	
55	Blue	255	
56	White	255	
57	Red	255	
58	Green	255	
59	Blue	255	
60	White	255	
61	Red	255	
62	Green	255	
63	Blue	255	
64	White	255	
65	Red	255	
66	Green	255	
67	Blue	255	
68	White	255	
69	Red	255	
70	Green	255	
71	Blue	255	
72	White	255	
73	Red	255	
74	Green	255	
75	Blue	255	
76	White	255	
77	Red	255	
78	Green	255	
79	Blue	255	
80	White	255	
81	Red	255	
82	Green	255	
83	Blue	255	
84	White	255	
85	Red	255	
86	Green	255	
87	Blue	255	
88	White	255	
89	Red	255	
90	Green	255	

202 CH (continued)

Ch	Function	Default	DMX values
91	Blue	255	
92	White	255	
93	Red	255	
94	Green	255	
95	Blue	255	
96	White	255	
97	Red	255	
98	Green	255	
99	Blue	255	
100	White	255	
101	Red	255	
102	Green	255	
103	Blue	255	
104	White	255	
105	Red	255	
106	Green	255	
107	Blue	255	
108	White	255	
109	Red	255	
110	Green	255	
111	Blue	255	
112	White	255	
113	Red	255	
114	Green	255	
115	Blue	255	
116	White	255	
117	Red	255	
118	Green	255	
119	Blue	255	
120	White	255	
121	Red	255	
122	Green	255	
123	Blue	255	
124	White	255	
125	Red	255	
126	Green	255	
127	Blue	255	
128	White	255	
129	Red	255	
130	Green	255	
131	Blue	255	
132	White	255	
133	Red	255	
134	Green	255	
135	Blue	255	

202 CH (continued)

Ch	Function	Default	DMX values
136	White	255	
137	Red	255	
138	Green	255	
139	Blue	255	
140	White	255	
141	Red	255	
142	Green	255	
143	Blue	255	
144	White	255	
145	Red	255	
146	Green	255	
147	Blue	255	
148	White	255	
149	Red	255	
150	Green	255	
151	Blue	255	
152	White	255	
153	Red	255	
154	Green	255	
155	Blue	255	
156	White	255	
157	Red	255	
158	Green	255	
159	Blue	255	
160	White	255	
161	Red	255	
162	Green	255	
163	Blue	255	
164	White	255	
165	Red	255	
166	Green	255	
167	Blue	255	
168	White	255	
169	Red	255	
170	Green	255	
171	Blue	255	
172	White	255	
173	Red	255	
174	Green	255	
175	Blue	255	
176	White	255	
177	Red	255	
178	Green	255	
179	Blue	255	
180	White	255	

202 CH (continued)

Ch	Function	Default	DMX values
181	Red	255	
182	Green	255	
183	Blue	255	
184	White	255	
185	Red	255	
186	Green	255	
187	Blue	255	
188	White	255	
189	Red	255	
190	Green	255	
191	Blue	255	
192	White	255	
193	Red	255	
194	Green	255	
195	Blue	255	
196	White	255	
197	Red	255	
198	Green	255	
199	Blue	255	
200	White	255	
201	Shutter / Strobe	0	0–1 No Function 2–255 Strobe slow to fas
202	Dimmer Mode	0	

206 CH

206 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	
5	Red	255	
6	Green	255	
7	Blue	255	
8	White	255	
9	Red	255	
10	Green	255	
11	Blue	255	
12	White	255	
13	Red	255	
14	Green	255	
15	Blue	255	
16	White	255	
17	Red	255	
18	Green	255	
19	Blue	255	

206 CH (continued)

Ch	Function	Default	DMX values
20	White	255	
21	Red	255	
22	Green	255	
23	Blue	255	
24	White	255	
25	Red	255	
26	Green	255	
27	Blue	255	
28	White	255	
29	Red	255	
30	Green	255	
31	Blue	255	
32	White	255	
33	Red	255	
34	Green	255	
35	Blue	255	
36	White	255	
37	Red	255	
38	Green	255	
39	Blue	255	
40	White	255	
41	Red	255	
42	Green	255	
43	Blue	255	
44	White	255	
45	Red	255	
46	Green	255	
47	Blue	255	
48	White	255	
49	Red	255	
50	Green	255	
51	Blue	255	
52	White	255	
53	Red	255	
54	Green	255	
55	Blue	255	
56	White	255	
57	Red	255	
58	Green	255	
59	Blue	255	
60	White	255	
61	Red	255	
62	Green	255	
63	Blue	255	
64	White	255	

206 CH (continued)

Ch	Function	Default	DMX values
65	Red	255	
66	Green	255	
67	Blue	255	
68	White	255	
69	Red	255	
70	Green	255	
71	Blue	255	
72	White	255	
73	Red	255	
74	Green	255	
75	Blue	255	
76	White	255	
77	Red	255	
78	Green	255	
79	Blue	255	
80	White	255	
81	Red	255	
82	Green	255	
83	Blue	255	
84	White	255	
85	Red	255	
86	Green	255	
87	Blue	255	
88	White	255	
89	Red	255	
90	Green	255	
91	Blue	255	
92	White	255	
93	Red	255	
94	Green	255	
95	Blue	255	
96	White	255	
97	Red	255	
98	Green	255	
99	Blue	255	
100	White	255	
101	Red	255	
102	Green	255	
103	Blue	255	
104	White	255	
105	Red	255	
106	Green	255	
107	Blue	255	
108	White	255	
109	Red	255	

206 CH (continued)

Ch	Function	Default	DMX values
110	Green	255	
111	Blue	255	
112	White	255	
113	Red	255	
114	Green	255	
115	Blue	255	
116	White	255	
117	Red	255	
118	Green	255	
119	Blue	255	
120	White	255	
121	Red	255	
122	Green	255	
123	Blue	255	
124	White	255	
125	Red	255	
126	Green	255	
127	Blue	255	
128	White	255	
129	Red	255	
130	Green	255	
131	Blue	255	
132	White	255	
133	Red	255	
134	Green	255	
135	Blue	255	
136	White	255	
137	Red	255	
138	Green	255	
139	Blue	255	
140	White	255	
141	Red	255	
142	Green	255	
143	Blue	255	
144	White	255	
145	Red	255	
146	Green	255	
147	Blue	255	
148	White	255	
149	Red	255	
150	Green	255	
151	Blue	255	
152	White	255	
153	Red	255	
154	Green	255	

206 CH (continued)

Ch	Function	Default	DMX values
155	Blue	255	
156	White	255	
157	Red	255	
158	Green	255	
159	Blue	255	
160	White	255	
161	Red	255	
162	Green	255	
163	Blue	255	
164	White	255	
165	Red	255	
166	Green	255	
167	Blue	255	
168	White	255	
169	Red	255	
170	Green	255	
171	Blue	255	
172	White	255	
173	Red	255	
174	Green	255	
175	Blue	255	
176	White	255	
177	Red	255	
178	Green	255	
179	Blue	255	
180	White	255	
181	Red	255	
182	Green	255	
183	Blue	255	
184	White	255	
185	Red	255	
186	Green	255	
187	Blue	255	
188	White	255	
189	Red	255	
190	Green	255	
191	Blue	255	
192	White	255	
193	Red	255	
194	Green	255	
195	Blue	255	
196	White	255	
197	Red	255	
198	Green	255	
199	Blue	255	

206 CH (continued)

Ch	Function	Default	DMX values
200	White	255	
201	Dimmer	0	
202	Shutter / Strobe	0	0–1 No Function 2–255 Strobe slow to fas
203	C TC	0	
204	Effect	0	0–10 No Function 11–40 Effect 1 41–80 Effect 2 81–120 Effect 3 121–160 Effect 4 161–200 Effect 5 201–240 Effect 6 241–255 No Function
205	Effects1Pos	0	
206	Dimmer Mode	0	