
Equinox

Kaleido XP

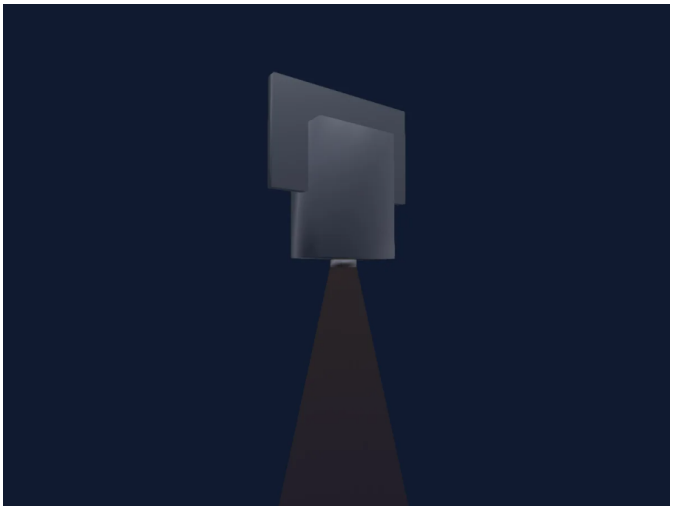

Manufacturer	**Equinox**
Type	**Profile spot**
DMX modes	**1**
DMX footprint	**4 channels**
Size (W × H × D)	**434 × 275 × 30 mm**
GDTF fixture type	**7EA184DC-7837-4E4E-ADA1-65…**

Controls

Prism rotation · Dimmer

Safety-relevant functions

Built-in effect programmes

DMX modes

4ch mode — 4 ch

4ch mode

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
2	Strobe Frequency	0	0–7 Open 8–8 Strobe Slowest 9–246 Strobe S > F 247–247 Strobe Fastest 248–248 Sound Slowest 249–254 Sound S > F 255–255 Sound Fastest
3	Prism Rotation	0	0–9 Rotation off 10–55 NoFeature 1 56–56 CW Fastest 57–119 CW F > S 120–120 CW Slowest 121–134 NoFeature 2 135–135 ACW Slowest 136–200 ACW S > F 201–201 ACW Fastest 202–255 NoFeature 3
4	Effect	190	0–63 Manual Change 64–127 Manual with Shake 128–128 Out > In Fastest 129–188 Out > In F > S 189–189 Out > In Slowest 190–194 Stop 195–195 In > Out Slowest 196–254 In > Out S > F 255–255 In > Out Fastest