
Eurolite

LED 4C-12 Silent Slim Spot

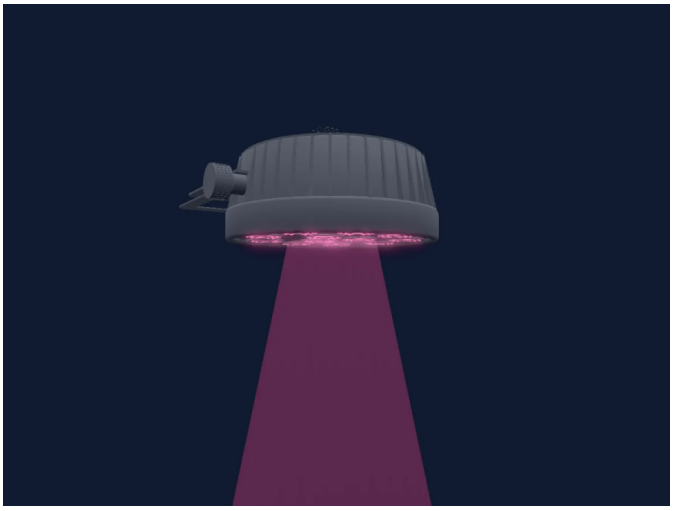

Manufacturer	**Eurolite**
Type	**PAR**
DMX modes	**5**
DMX footprint	**3, 4, 5, 6, 9 channels**
Size (W × H × D)	**285 × 105 × 295 mm**
GDTF fixture type	**31C4F13A-048C-4B4E-8DB3-67…**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Effect speed · Strobe · Dimmer

Safety-relevant functions

Built-in effect programmes

DMX modes

3 Channel	3 ch
4 Channel	4 ch
5 Channel	5 ch
6 Channel	6 ch
9 Channel	9 ch

3 Channel

3 channels

Ch	Function	Default	DMX values
1	Color RGBRed	0	
2	Color RGBGreen	0	
3	Color RGBBlue	0	

4 Channel

4 channels

Ch	Function	Default	DMX values
1	Color RGBRed	0	
2	Color RGBGreen	0	
3	Color RGBBlue	0	
4	White	0	

5 Channel

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	0–9 No function 10–255 Strobe slow to fast
3	Color Macro	0	0–9 No function 10–19 Red 20–29 Green 30–39 Blue 40–49 White 50–59 Yellow 60–69 Magenta 70–79 Cyan 80–89 Dark orange 90–99 Green yellow 100–109 Salmon 110–119 Turquoise 120–129 Light green 130–139 Orange 140–149 Straw 150–159 Lavender 160–169 Light blue 170–179 Dark blue 180–189 Pink 190–255 White

5 Channel (continued)

Ch	Function	Default	DMX values
4	Effect	0	0–9 No function 10–19 Auto program 1 20–29 Auto program 2 30–39 Auto program 3 40–49 Auto program 4 50–59 Auto program 5 60–69 Auto program 6 70–79 Auto program 7 80–89 Auto program 8 90–99 Auto program 9 100–109 Sound program 1 110–119 Sound program 2 120–129 Sound program 3 130–139 Sound program 4 140–149 Sound program 5 150–159 Sound program 6 160–169 Sound program 7 170–179 Sound program 8 180–255 Sound program 9
5	Effect Speed	0	

6 Channel

6 channels

Ch	Function	Default	DMX values
1	Color RGBRed	0	
2	Color RGBGreen	0	
3	Color RGBBlue	0	
4	White	0	
5	Dimmer	0	
6	Strobe Mode Strobe	11	0–0 No Feature 1 1–5 Function 6–10 No Feature 11–255 Strobe

9 Channel

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	0–9 No function 10–255 Strobe slow to fast
3	Color RGBRed	0	
4	Color RGBGreen	0	
5	Color RGBBlue	0	
6	White	0	

9 Channel (continued)

Ch	Function	Default	DMX values
7	Color Macro	0	0–9 No function 10–19 Red 20–29 Green 30–39 Blue 40–49 White 50–59 Yellow 60–69 Magenta 70–79 Cyan 80–89 Dark orange 90–99 Green yellow 100–109 Salmon 110–119 Turquoise 120–129 Light green 130–139 Orange 140–149 Straw 150–159 Lavender 160–169 Light blue 170–179 Dark blue 180–189 Pink 190–255 White
8	Effect	0	0–9 No function 10–19 Auto program 1 20–29 Auto program 2 30–39 Auto program 3 40–49 Auto program 4 50–59 Auto program 5 60–69 Auto program 6 70–79 Auto program 7 80–89 Auto program 8 90–99 Auto program 9 100–109 Sound program 1 110–119 Sound program 2 120–129 Sound program 3 130–139 Sound program 4 140–149 Sound program 5 150–159 Sound program 6 160–169 Sound program 7 170–179 Sound program 8 180–255 Sound program 9
9	Effect Speed	0	

Fixture model: gdtf-eurolite-led-4c-12-silent-slim-spot-51927
Creator: HitLight model authored for the owner
Modifications: Original meshes from published dimensions and photographs. No source photographs or third-party meshes are embedded.