
Eurolite

LED_AKKU PT-100_32

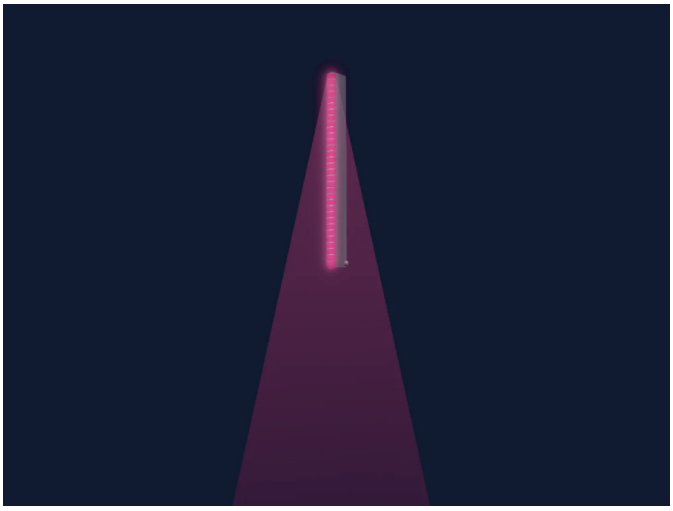

Manufacturer	**Eurolite**
Type	**PAR**
DMX modes	**5**
DMX footprint	**3, 5, 8 channels**
Beam angle	**25°**
Size (W × H × D)	**50 × 1000 × 77 mm**
GDTF fixture type	**920A7742-43F0-4425-B4AE-08…**

Controls

RGB colour mixing · Colour wheel · Dimmer

DMX modes

3-CH-Mode	3 ch
48-CH-Mode - 16 Pixel	3 ch
96-CH-Mode - 32 Pixel	3 ch
5-CH-Mode	5 ch
8-CH-Mode	8 ch

3-CH-Mode

3 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	

48-CH-Mode - 16 Pixel

3 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	

96-CH-Mode - 32 Pixel

3 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	

5-CH-Mode

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Dimmer	0	0–254 Closed 255–255 Open
5	Control1	1	0–0 No Function 1 1–5 Music-Controlled (15 colors) 6–10 No Function 11–255 StrobeFrequency

8-CH-Mode

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Strobe Frequency	6	0–9 No Function 10–255 StrobeFrequency
3	Red	255	
4	Green	255	
5	Blue	255	

8-CH-Mode (continued)

Ch	Function	Default	DMX values
6	Color Macro1	0	10–19 Red 20–29 Green 30–39 Blue 40–49 Yellow 50–59 Magenta 60–69 Cyan 70–79 Dark Orange 80–89 Green Yellow 90–99 Salmon 100–109 Turquoise 110–119 Light Green 120–129 Orange 130–139 Lavender 140–149 Light Blue 150–159 Dark Blue 160–169 Pink 170–255 Full On
7	Control1	0	10–19 Auto Program 1 20–29 Auto Program 2 30–39 Auto Program 3 40–49 Auto Program 4 50–59 Auto Program 5 60–69 Auto Program 6 70–79 Auto Program 7 80–89 Auto Program 8 90–99 Auto Program 9 100–109 Auto Program 10 110–119 Auto Program 11 120–129 Auto Program 12 130–139 Sound Program 1 140–149 Sound Program 2 150–159 Sound Program 3 160–169 Sound Program 4 170–179 Sound Program 5 180–189 Sound Program 6 190–199 Sound Program 7 200–209 Sound Program 8 210–219 Sound Program 9 220–229 Sound Program 10 230–239 Sound Program 11 240–255 Sound Program 12
8	Color Mix MSpeed	0	