
Eurolite

# TMH-H60 Hybrid

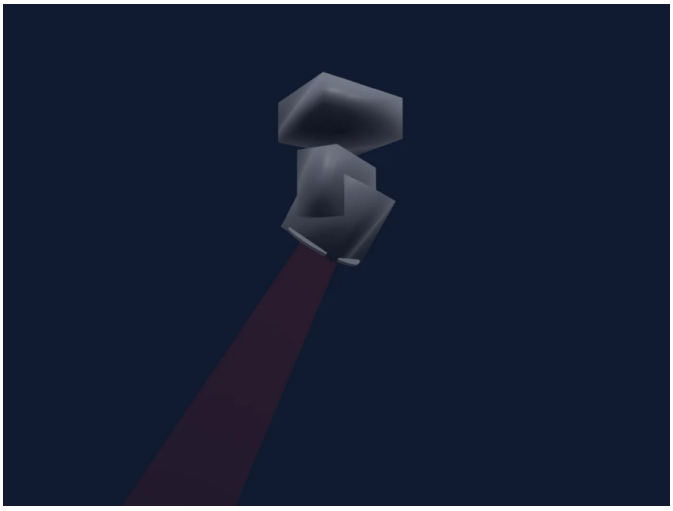

| | |
|---|---|
| Manufacturer | **Eurolite** |
| Type | **Moving head** |
| DMX modes | **1** |
| DMX footprint | **26 channels** |
| Beam angle | **14°** |
| Pan range | **540°** |
| Tilt range | **180°** |
| Heads / cells | **3** |
| Size (W × H × D) | **160 × 180 × 160 mm** |
| GDTF fixture type | **641AEDA2-5308-44F3-AF74-B1…** |

## Controls

Colour wheel · Dimmer · Pixel control · Movement speed · Gobos

## Safety-relevant functions

Fixture reset

## DMX modes

| | |
|---|---|
| Mode 1 | 26 ch |

## Mode 1

26 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Pan | 128 | |
| 2 | Pan Fine | 0 | Fine byte of Pan |
| 3 | Tilt | 128 | |
| 4 | Tilt Fine | 0 | Fine byte of Tilt |
| 5 | Position MSpeed | 0 | |
| 6 | Dimmer | 255 | |
| 7 | Shutter1Strobe | 0 | 0–15 no function<br>16–255 Strobe |
| 8 | Color Wheel | 0 | 0–9 open (wheel slot 1)<br>10–19 open/red (wheel slot 2)<br>20–29 red (wheel slot 3)<br>30–39 red/green (wheel slot 4)<br>40–49 green (wheel slot 5)<br>50–59 green/blue (wheel slot 6)<br>60–69 blue (wheel slot 7)<br>70–79 blue/yellow (wheel slot 8)<br>80–89 yellow (wheel slot 9)<br>90–99 yellow/orange (wheel slot 10)<br>100–109 orange (wheel slot 11)<br>110–119 orange/lightblue (wheel slot 12)<br>120–129 lightblue (wheel slot 13)<br>130–139 lightblue/pink (wheel slot 14)<br>140–149 pink (wheel slot 15)<br>150–255 rainbow (wheel slot 16) |
| 9 | Gobo | 0 | 0–9 open (wheel slot 1)<br>10–19 gobo 1 (wheel slot 2)<br>20–29 gobo 2 (wheel slot 3)<br>30–39 gobo 3 (wheel slot 4)<br>40–49 gobo 4 (wheel slot 5)<br>50–59 gobo 5 (wheel slot 6)<br>60–69 gobo 6 (wheel slot 7)<br>70–79 gobo 7 (wheel slot 8)<br>80–89 gobo 7 shake (wheel slot 8)<br>90–99 gobo 6 shake (wheel slot 7)<br>100–109 gobo 5 shake (wheel slot 6)<br>110–119 gobo 4 shake (wheel slot 5)<br>120–129 gobo 3 shake (wheel slot 4)<br>130–139 gobo 2 shake (wheel slot 3)<br>140–149 gobo 1 shake (wheel slot 2)<br>150–255 gobowheel rotation (wheel slot 9) |
| 10 | Rotation | 0 | 0–127 index<br>128–191 rotation backward<br>192–255 rotation forward |
| 11 | Dimmer | 255 | |
| 12 | Shutter1Strobe | 0 | 0–15 no function<br>16–255 Strobe |
| 13 | Red | 0 | |
| 14 | Green | 0 | |
| 15 | Blue | 0 | |
| 16 | White | 0 | |
| 17 | Dimmer | 0 | |
| 18 | Strobe Mode Shutter | 0 | |
| 19 | Red | 0 | |
| 20 | Green | 0 | |
| 21 | Blue | 0 | |

## Mode 1 (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| **22** | Color Macro1 | 0 | |
| **23** | Color Macro1Rate | 0 | |
| **24** | Dummy | 0 | |
| **25** | Dummy | 0 | |
| **26** | Fixture Global Reset | 0 | 0–229 no function<br>230–240 reset<br>241–255 no funxtion |