
Event Lighting

PS200LEFC Profile

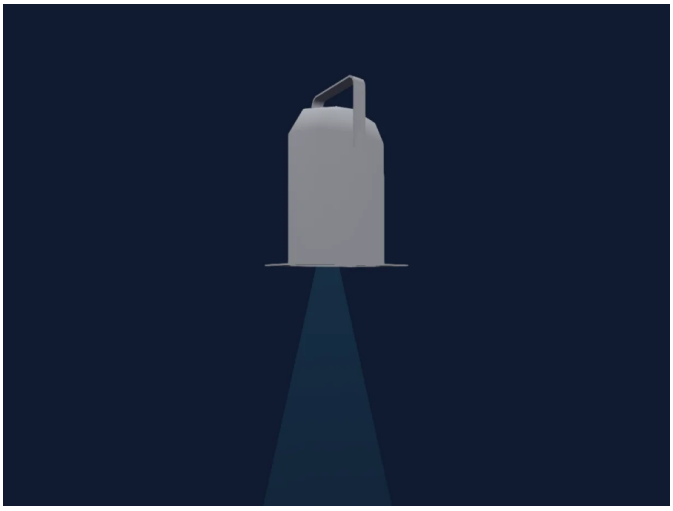

Manufacturer	**Event Lighting**
Type	**Profile spot**
DMX modes	**5**
DMX footprint	**7, 8, 9, 13 channels**
Beam angle	**26°**
Size (W × H × D)	**250 × 250 × 45 mm**
GDTF fixture type	**2B3495AB-3BF8-48FA-B902-AA…**

Controls

Extra LED colours · Hue and saturation · RGB colour mixing · Colour temperature · Dimmer

DMX modes

7 Channel	7 ch
8 Channel	8 ch
8 Channel HSIC	8 ch
9 Channel HSIC	9 ch
13 Channel	13 ch

7 Channel

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	0	
3	Green	0	
4	Blue	0	
5	Color Add GY	0	
6	C TC	32	0–31 No Function 32–60 2700K 61–90 3200K 91–120 4000K 121–150 5600K 151–255 6000K
7	Strobe Frequency	6	0–5 No Function 6–254 Slow 255–255 Fast

8 Channel

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	0	
3	Green	0	
4	Blue	0	
5	Color Add GY	0	
6	C TC	32	0–31 No Function 32–60 2700K 61–90 3200K 91–120 4000K 121–150 5600K 151–255 6000K
7	Strobe Frequency	6	0–5 No Function 6–254 Slow 255–255 Fast
8	Dimmer Mode	0	0–30 Fade Off 31–60 Fade Mode 1 61–90 Fade Mode 2 91–120 Fade Mode 3 121–255 Fade Mode 4

8 Channel HSIC

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	H SBHue	0	
3	H SBHue Fine	0	Fine byte of H SBHue
4	H SBSaturation	0	
5	H SBBrightness	0	

8 Channel HSIC (continued)

Ch	Function	Default	DMX values
6	C TC	32	0–31 No Function 32–60 2700K 61–90 3200K 91–120 4000K 121–150 5600K 151–255 6000K
7	Strobe Frequency	6	0–5 No Function 6–254 Slow 255–255 Fast
8	Dimmer Mode	0	0–30 Fade Off 31–60 Fade Mode 1 61–90 Fade Mode 2 91–120 Fade Mode 3 121–255 Fade Mode 4

9 Channel HSIC

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	H SBHue	0	
4	H SBHue Fine	0	Fine byte of H SBHue
5	H SBSaturation	0	
6	H SBBrightness	0	
7	C TC	32	0–31 No Function 32–60 2700K 61–90 3200K 91–120 4000K 121–150 5600K 151–255 6000K
8	Strobe Frequency	6	0–5 No Function 6–254 Slow 255–255 Fast
9	Dimmer Mode	0	0–30 Fade Off 31–60 Fade Mode 1 61–90 Fade Mode 2 91–120 Fade Mode 3 121–255 Fade Mode 4

13 Channel

13 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Red	0	
4	Red Fine	0	Fine byte of Red
5	Green	0	
6	Green Fine	0	Fine byte of Green
7	Blue	0	
8	Blue Fine	0	Fine byte of Blue
9	Color Add GY	0	

13 Channel (continued)

Ch	Function	Default	DMX values
10	Color Add GY Fine	0	Fine byte of Color Add GY
11	C TC	32	0–31 No Function 32–60 2700K 61–90 3200K 91–120 4000K 121–150 5600K 151–255 6000K
12	Strobe Frequency	6	0–5 No Function 6–254 Slow 255–255 Fast
13	Dimmer Mode	0	0–30 Fade Off 31–60 Fade Mode 1 61–90 Fade Mode 2 91–120 Fade Mode 3 121–255 Fade Mode 4