
Flash

DJ Moving Heads ZOOM 19x15W 3 Section

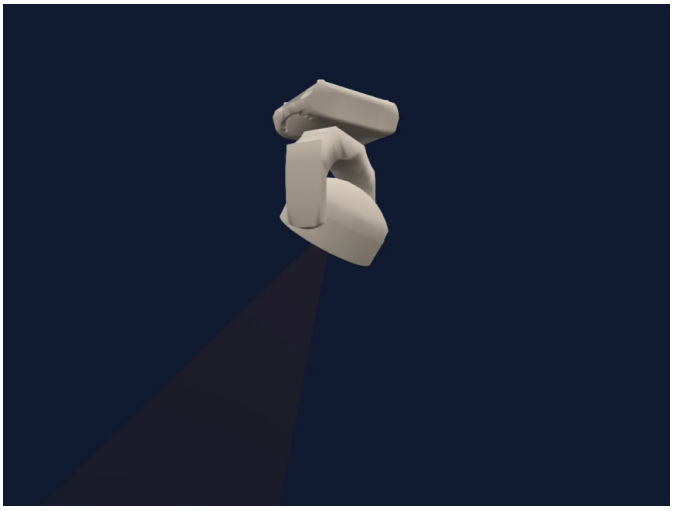

Manufacturer	**Flash**
Type	**Moving head**
DMX modes	**2**
DMX footprint	**16, 24 channels**
Beam angle	**8-63°**
Pan range	**450°**
Tilt range	**300°**
Heads / cells	**3**
Size (W × H × D)	**274 × 161 × 273 mm**
GDTF fixture type	**CA81906D-CAC2-4CE7-B8A4-76…**

Controls

Zoom · Extra LED colours · RGB colour mixing · Colour wheel · Dimmer · Pixel control · Pan and tilt · Movement speed

Safety-relevant functions

Fixture reset

DMX modes

16ch	16 ch
24 ch	24 ch

16ch

16 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Tilt	128	
3	Position MSpeed	0	0–0 Standard mode 1–1 Max speed time 2–255 Speed/Time max to min
4	Dimmer	0	0–254 Closed (wheel slot -2147483648) 255–255 Open (wheel slot -2147483648)
5	Red	255	
6	Green	255	
7	Blue	255	
8	White	255	
9	Shutter / Strobe	255	
10	Zoom	128	0–254 narrow 255–255 wide
11	Color Macro1	0	
12	Color Macro1Rate	0	
13	Pan Fine	128	Fine byte of Pan
14	Tilt Fine	128	Fine byte of Tilt
15	Control1	0	0–250 No function 251–255 Total reset
16	Dummy	0	

24 ch

24 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Tilt	128	
3	Position MSpeed	0	0–0 Standard mode 1–1 Max speed time 2–255 Speed/Time max to min
4	Dimmer	0	0–254 Closed (wheel slot -2147483648) 255–255 Open (wheel slot -2147483648)
5	Red	255	
6	Green	255	
7	Blue	255	
8	White	255	
9	Red	255	
10	Green	255	
11	Blue	255	
12	White	255	
13	Red	255	
14	Green	255	
15	Blue	255	
16	White	255	
17	Shutter / Strobe	255	
18	Zoom	128	0–254 narrow 255–255 wide
19	Color Macro1	0	

24 ch (continued)

Ch	Function	Default	DMX values
20	Color Macro1Rate	0	
21	Pan Fine	0	Fine byte of Pan
22	Tilt Fine	0	Fine byte of Tilt
23	Control1	0	0–250 No function 251–255 Total reset
24	Dummy	0	