
Flash

EVENT MH-HYBRID LED 120

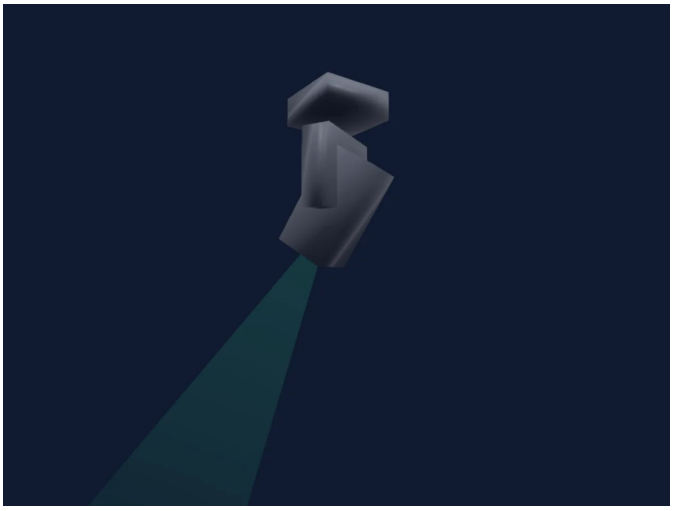

Manufacturer	**Flash**
Type	**Moving head**
DMX modes	**1**
DMX footprint	**18 channels**
Beam angle	**25°**
Pan range	**540°**
Tilt range	**220°**
Size (W × H × D)	**240 × 450 × 220 mm**
GDTF fixture type	**D5B430DC-AB22-4060-B6D4-F…**

Controls

Focus · Frost · Prism · Prism rotation · Zoom · Colour wheel · Dimmer · Movement speed · Gobos · Gobo rotation

Safety-relevant functions

Fixture reset · Built-in effect programmes

DMX modes

18 ch

18 ch

18 ch

18 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–3 Open 4–251 Shutter1Strobe 2 252–255 Open
3	Pan	128	
4	Tilt	128	
5	Position MSpeed	0	
6	Color Wheel	0	0–4 Open (wheel slot 1) 5–9 Color 1 (wheel slot 2) 10–14 Color 2 (wheel slot 3) 15–19 Color 3 (wheel slot 4) 20–24 Color 4 (wheel slot 5) 25–29 Color 5 (wheel slot 6) 30–34 Color 6 (wheel slot 7) 35–39 Color 7 (wheel slot 8) 40–44 Color 8 (wheel slot 9) 45–49 Color 9 (wheel slot 10) 50–54 Color o/1 (wheel slot 11) 55–59 Color 1/2 (wheel slot 12) 60–64 Color 2/3 (wheel slot 13) 65–69 Color 3/4 (wheel slot 14) 70–74 Color 4/5 (wheel slot 15) 75–79 Color 5/6 (wheel slot 16) 80–84 Color 6/7 (wheel slot 17) 85–89 Color 7/8 (wheel slot 18) 90–94 Color 8/9 (wheel slot 19) 95–99 Color 9/o (wheel slot 20) 100–255 Color1WheelSpin 2
7	Gobo	0	0–9 Open (wheel slot 1) 10–19 Gobo 1 (wheel slot 2) 20–29 Gobo 2 (wheel slot 3) 30–39 Gobo 3 (wheel slot 4) 40–49 Gobo 4 (wheel slot 5) 50–59 Gobo 5 (wheel slot 6) 60–69 Gobo 6 (wheel slot 7) 70–79 Gobo 7 (wheel slot 8) 80–89 Gobo 8 (wheel slot 9) 90–99 Gobo 9 (wheel slot 10) 100–210 Gobo1WheelSpin 2 211–255 Gobo1WheelShake 3
8	Gobo 2	0	0–9 Open (wheel slot 1) 10–19 Gobo 1 (wheel slot 2) 20–29 Gobo 2 (wheel slot 3) 30–39 Gobo 3 (wheel slot 4) 40–49 Gobo 4 (wheel slot 5) 50–59 Gobo 5 (wheel slot 6) 60–69 Gobo 6 (wheel slot 7) 70–220 Gobo2SelectSpin 2 221–255 Gobo1WheelShake 3
9	Gobo Rotation 2	0	0–63 Gobo2Pos 1 64–255 Gobo2PosRotate 2
10	Prism	0	
11	Prism Rotation	0	0–127 Prism1Pos 1 128–255 Prism1PosRotate 2
12	Frost1	0	
13	Focus	0	
14	Zoom	0	

18 ch (continued)

Ch	Function	Default	DMX values
15	Pan Fine	128	Fine byte of Pan
16	Tilt Fine	128	Fine byte of Tilt
17	Effect	0	
18	Control1	0	0–250 No function 251–255 Reset