
Flash

LED GOBO PROJECTOR 300W IP65 ANIMATION EFFECT

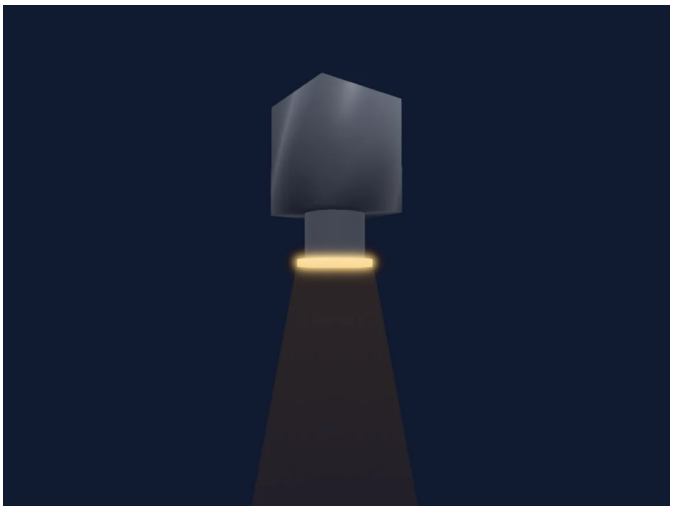

Manufacturer	**Flash**
Type	**Effect light**
DMX modes	**1**
DMX footprint	**9 channels**
Beam angle	**25°**
Size (W × H × D)	**250 × 300 × 250 mm**
GDTF fixture type	**B5D843D8-8D9D-45DB-8423-3…**

Controls

Focus · Zoom · Colour wheel · Dimmer · Animation wheel · Gobos · Gobo rotation

Safety-relevant functions

Fixture reset

DMX modes

6ch mode	9 ch

6ch mode

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–5 Open 6–255 Shutter1Strobe 2
3	Color Wheel	0	0–13 White (wheel slot 1) 14–27 Red (wheel slot 2) 28–42 Green (wheel slot 3) 43–56 Blue (wheel slot 4) 57–70 Yellow (wheel slot 5) 71–84 Pink (wheel slot 6) 85–99 Cyan (wheel slot 7) 100–113 Magenta (wheel slot 8) 114–127 Orange (wheel slot 9) 128–191 <<< spin 192–255 >>> spin
4	Gobo	0	0–9 Open (wheel slot 1) 10–19 Gobo 1 (wheel slot 2) 20–29 Gobo 2 (wheel slot 3) 30–39 Gobo 3 (wheel slot 4) 40–49 Gobo 4 (wheel slot 5) 50–59 Gobo 5 (wheel slot 6) 60–69 Gobo 6 (wheel slot 7) 70–79 Gobo 7 (wheel slot 8) 80–89 Gobo 1 shake 90–99 Gobo 2 shake 100–109 Gobo 3 shake 110–119 Gobo 4 shake 120–129 Gobo 5 shake 130–139 Gobo 6 shake 140–149 Gobo 7 shake 150–199 spin <<< 200–255 spin >>>
5	Gobo Rotation	0	0–127 Gobo1Pos 1 128–192 <<< rot 193–255 >>> rot
6	Animation Wheel1	0	
7	Focus	127	
8	Zoom	127	
9	Control1	0	0–249 No function 250–255 RESET