
Flash

LED Moving Head 7x40W Zoom 3*-55*

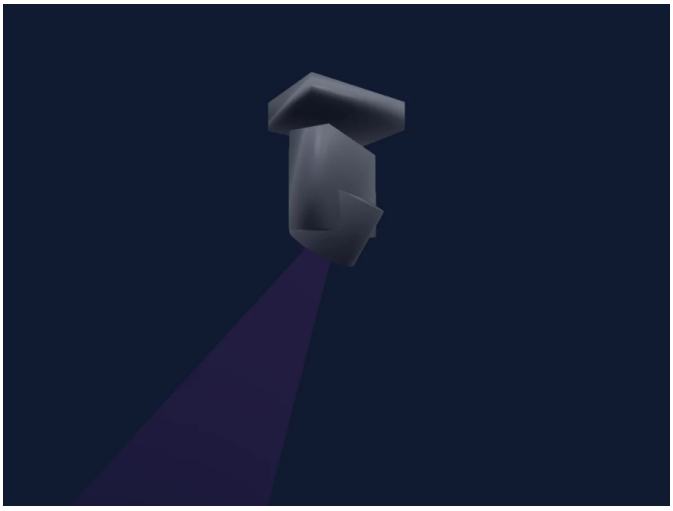

Manufacturer	**Flash**
Type	**Moving head**
DMX modes	**2**
DMX footprint	**17, 41 channels**
Beam angle	**3.5-55°**
Pan range	**540°**
Tilt range	**270°**
Heads / cells	**2**
Size (W × H × D)	**180 × 150 × 180 mm**
GDTF fixture type	**B65EFA84-66ED-4925-9D3B-CE…**

Controls

Zoom · Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Strobe · Dimmer · Pixel control · Movement speed

Safety-relevant functions

Fixture reset

DMX modes

17 ch	17 ch
41 ch	41 ch

17 ch

17 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	122	
4	Tilt Fine	224	Fine byte of Tilt
5	Position MSpeed	0	
6	Zoom	0	
7	Dimmer	0	0–254 Closed 255–255 Open
8	Shutter / Strobe	0	0–0 Open 1–254 Strobe · slow 1–24.9 Hz 255–255 Strobe · fast 25 Hz
9	Red	255	
10	Green	255	
11	Blue	255	
12	White	0	
13	C TC	0	0–0 No function 1–157 4400 K 158–254 5600 K 255–255 9000 K
14	Color Wheel	0	0–0 Open (wheel slot 1) 1–30 Red (wheel slot 2) 31–61 Green (wheel slot 3) 62–92 Blue (wheel slot 4) 93–123 White (wheel slot 5) 124–154 Yellow (wheel slot 6) 155–185 Magenta (wheel slot 7) 186–216 Cyan (wheel slot 8) 217–255 RGBW 1 (wheel slot 9)

17 ch (continued)

Ch	Function	Default	DMX values
15	Color Macro1	0	0–20 No function 21–25 Red 26–31 Green 32–37 Blue 38–43 White 44–49 Yellow 50–55 Magenta 56–61 Cyan 62–67 RGBW 68–73 Macro 1 74–79 Macro 2 80–85 Macro 3 86–91 Macro 4 92–97 Macro 5 98–103 Macro 6 104–109 Macro 7 110–115 Macro 8 116–121 Macro 9 122–127 Macro 10 128–133 Macro 11 134–139 Macro 12 140–145 Macro 13 146–151 Macro 14 152–157 Macro 15 158–163 Macro 16 164–169 Macro 17 170–175 Macro 18 176–181 Macro 19 182–187 Macro 20 188–193 Macro 21 194–199 Macro 22 200–205 Macro 23 206–211 Macro 24 212–217 Macro 25 218–221 Macro 26 222–255 Macro 27
16	Color Mix MSpeed	0	0–254 fast 255–255 slow
17	Control1	0	0–254 No function 255–255 Reset

41 ch

41 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	122	
4	Tilt Fine	224	Fine byte of Tilt
5	Position MSpeed	0	
6	Zoom	0	
7	Dimmer	0	0–254 Closed 255–255 Open
8	Shutter / Strobe	0	0–0 Open 1–254 Strobe · slow 1–24.9 Hz 255–255 Strobe · fast 25 Hz
9	Red	255	
10	Green	255	

41 ch (continued)

Ch	Function	Default	DMX values
11	Blue	255	
12	White	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	C TC	0	0–0 No function 1–157 4400 K 158–254 5600 K 255–255 9000 K
38	Color Wheel	0	0–0 Open (wheel slot 1) 1–30 Red (wheel slot 2) 31–61 Green (wheel slot 3) 62–92 Blue (wheel slot 4) 93–123 White (wheel slot 5) 124–154 Yellow (wheel slot 6) 155–185 Magenta (wheel slot 7) 186–216 Cyan (wheel slot 8) 217–255 RGBW 1 (wheel slot 9)

41 ch (continued)

Ch	Function	Default	DMX values
39	Color Macro1	0	0–20 No function 21–25 Red 26–31 Green 32–37 Blue 38–43 White 44–49 Yellow 50–55 Magenta 56–61 Cyan 62–67 RGBW 68–73 Macro 1 74–79 Macro 2 80–85 Macro 3 86–91 Macro 4 92–97 Macro 5 98–103 Macro 6 104–109 Macro 7 110–115 Macro 8 116–121 Macro 9 122–127 Macro 10 128–133 Macro 11 134–139 Macro 12 140–145 Macro 13 146–151 Macro 14 152–157 Macro 15 158–163 Macro 16 164–169 Macro 17 170–175 Macro 18 176–181 Macro 19 182–187 Macro 20 188–193 Macro 21 194–199 Macro 22 200–205 Macro 23 206–211 Macro 24 212–217 Macro 25 218–221 Macro 26 222–255 Macro 27
40	Color Mix MSpeed	0	0–254 fast 255–255 slow
41	Control1	0	0–254 No function 255–255 Reset