
flashPRO

LED Fresnel Lantern COB 300W RGBWAUV Mk2 P8100001

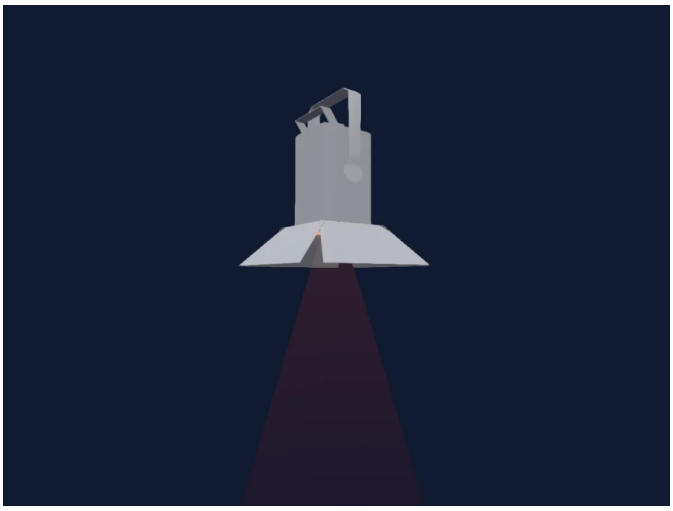

Manufacturer	**flashPRO**
Type	**Spot**
DMX modes	**10**
DMX footprint	**3, 6, 7, 8, 9, 10, 12 channels**
Beam angle	**10-60°**
Size (W × H × D)	**294 × 367 × 91 mm**
GDTF fixture type	**A427CC80-D17F-4A91-9EE5-81…**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Strobe · Dimmer

Safety-relevant functions

Strobe

DMX modes

RGB	3 ch
RGB 16bit	6 ch
RGBWA+Uv	6 ch
Flash A-DMX	7 ch
Pro 8	8 ch
Standard 8	8 ch
Pro 9	9 ch
Classic-10	10 ch
Standard 10	10 ch
RGBWA+Uv 16 bit	12 ch

RGB

3 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	

RGB 16bit

6 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Red Fine	255	Fine byte of Red
3	Green	255	
4	Green Fine	255	Fine byte of Green
5	Blue	255	
6	Blue Fine	255	Fine byte of Blue

RGBWA+Uv

6 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	
5	Color Add RY	0	
6	UV	0	

Flash A-DMX

7 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	
5	Dimmer	0	0–254 Closed 255–255 Open
6	Shutter / Strobe	0	0–10 Open 11–254 Min strobe 255–255 Max strobe
7	Color Macro1	0	

Pro 8

8 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	
5	Color Add RY	0	
6	UV	0	

Pro 8 (continued)

Ch	Function	Default	DMX values
7	Dimmer	0	0–254 Closed 255–255 Open
8	Shutter / Strobe	0	0–10 Open 11–254 Min strobe 255–255 Max strobe

Standard 8

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–10 Open 11–254 Min strobe 255–255 Max strobe
3	Red	255	
4	Green	255	
5	Blue	255	
6	White	0	
7	Color Add RY	0	
8	UV	0	

Pro 9

9 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	
5	Color Add RY	0	
6	UV	0	
7	Dimmer	0	0–254 Closed 255–255 Open
8	Dimmer Fine	0	Fine byte of Dimmer
9	Shutter / Strobe	0	0–10 Open 11–254 Min strobe 255–255 Max strobe

Classic-10

10 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–10 Open 11–254 Min strobe 255–255 Max strobe
3	Red	255	
4	Green	255	
5	Blue	255	
6	White	0	

Classic-10 (continued)

Ch	Function	Default	DMX values
7	Color Macro1	0	
8	Color Macro1Rate	0	0–0 Open 1–254 Fast pulse 255–255 Slow pulse
9	Color Add RY	0	
10	UV	0	

Standard 10

10 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–10 Open 11–254 Min strobe 255–255 Max strobe
3	Red	255	
4	Green	255	
5	Blue	255	
6	White	0	
7	Color Add RY	0	
8	UV	0	
9	Color Macro1	0	
10	Color Macro1Rate	0	0–0 Open 1–254 Fast pulse 255–255 Slow pulse

RGBWA+Uv 16 bit

12 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Red Fine	255	Fine byte of Red
3	Green	255	
4	Green Fine	255	Fine byte of Green
5	Blue	255	
6	Blue Fine	255	Fine byte of Blue
7	White	0	
8	White Fine	0	Fine byte of White
9	Color Add RY	0	
10	Color Add RY Fine	0	Fine byte of Color Add RY
11	UV	0	
12	UV Fine	0	Fine byte of UV