
HarmanyLX

LedBar FA 1512C AL

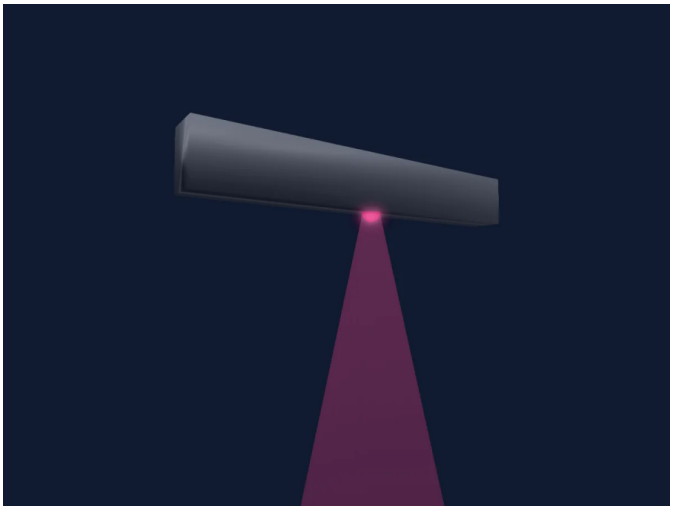

Manufacturer	**HarmanyLX**
Type	**LED bar**
DMX modes	**5**
DMX footprint	**4, 7, 10, 51 channels**
Heads / cells	**12**
Size (W × H × D)	**996 × 145 × 103 mm**
GDTF fixture type	**18435B7A-582A-421A-97AA-51…**

Controls

Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Dimmer · Pixel control

DMX modes

RGB 4 CH	4 ch
CCT 7 CH	7 ch
HSI 9 CH	10 ch
RGBW 10 CH	10 ch
Pixie 51 CH	51 ch

RGB 4 CH

4 channels

Ch	Function	Default	DMX values
1	Function	0	
2	Red	0	
3	Green	0	
4	Blue	0	

CCT 7 CH

7 channels

Ch	Function	Default	DMX values
1	Function	0	
2	Dimmer	255	
3	C TO	255	
4	Strobe Mode Strobe	0	0–5 Open 6–105 Standart Strobe 106–109 None 110–179 Thunder Strobe 180–185 None 186–255 Random Strobe
5	Color Effects1	0	0–5 N/A 6–255 Color Wheel 1 - 65
6	Effects1Pos	0	0–5 N/A 6–255 Macro 1 - 25
7	Color Macro1	0	

HSI 9 CH

10 channels

Ch	Function	Default	DMX values
1	Function	0	
2	H SBHue	0	
3	Hue Fine	0	
4	Chroma	0	
5	Dimmer	255	
6	Strobe Mode Strobe	0	0–5 Open 6–105 Standart Strobe 106–109 None 110–179 Thunder Strobe 180–185 None 186–255 Random Strobe
7	Color Effects1	0	0–5 N/A 6–255 Color Wheel 1 - 65
8	Reserved 8	0	
9	Effects1Pos	0	0–5 N/A 6–255 Macro 1 - 25
10	Color Macro1	0	

RGBW 10 CH

10 channels

Ch	Function	Default	DMX values

RGBW 10 CH (continued)

Ch	Function	Default	DMX values
1	Function	0	0–5 N/A 6–15 RGBW 16–25 PIXIE 26–35 HSI 36–45 CMY 46–55 CCT 56–65 RGB 66–199 N/A 200–204 Dim 2 205–209 Dim 1 210–214 Dim 0 215–255 N/A
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	0	
6	Dimmer	0	0–254 Closed 255–255 Open
7	Strobe Mode Strobe	0	0–5 Open 6–105 Standart Strobe 106–109 None 110–179 Thunder Strobe 180–185 None 186–255 Random Strobe
8	Color Effects1	0	0–5 N/A 6–255 Color Wheel 1 - 65
9	Effects1Pos	0	0–5 N/A 6–255 Macro 1 - 25
10	Color Macro1	0	

Pixie 51 CH

51 channels

Ch	Function	Default	DMX values
1	Function	0	0–5 N/A 6–15 RGBW 16–25 PIXIE 26–35 HSI 36–45 CMY 46–55 CCT 56–65 RGB 66–199 N/A 200–204 Dim 2 205–209 Dim 1 210–214 Dim 0 215–255 N/A
2	Dimmer	0	0–254 Closed 255–255 Open
3	Strobe Mode Strobe	0	0–5 Open 6–105 Standart Strobe 106–109 None 110–179 Thunder Strobe 180–185 None 186–255 Random Strobe
4	Red	255	
5	Green	255	
6	Blue	255	

Pixie 51 CH (continued)

Ch	Function	Default	DMX values
7	White	255	
8	Red	255	
9	Green	255	
10	Blue	255	
11	White	255	
12	Red	255	
13	Green	255	
14	Blue	255	
15	White	255	
16	Red	255	
17	Green	255	
18	Blue	255	
19	White	255	
20	Red	255	
21	Green	255	
22	Blue	255	
23	White	255	
24	Red	255	
25	Green	255	
26	Blue	255	
27	White	255	
28	Red	255	
29	Green	255	
30	Blue	255	
31	White	255	
32	Red	255	
33	Green	255	
34	Blue	255	
35	White	255	
36	Red	255	
37	Green	255	
38	Blue	255	
39	White	255	
40	Red	255	
41	Green	255	
42	Blue	255	
43	White	255	
44	Red	255	
45	Green	255	
46	Blue	255	
47	White	255	
48	Red	255	
49	Green	255	
50	Blue	255	
51	White	255	