
Ignition

2bright Pint TW200 IP MKII

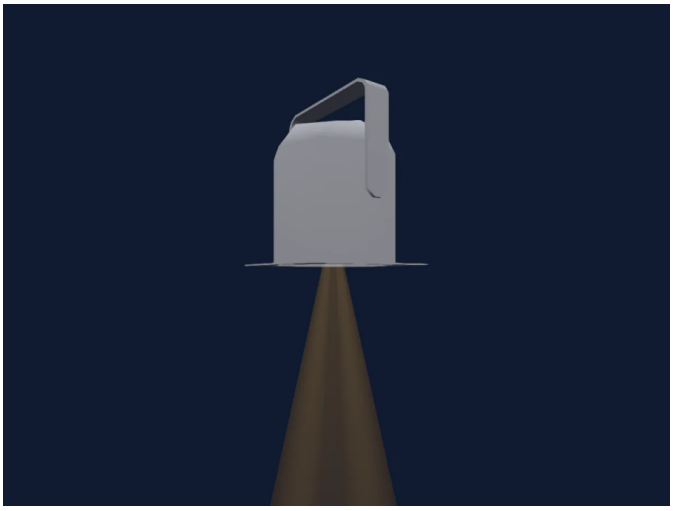

Manufacturer	**Ignition**
Type	**Blinder**
DMX modes	**6**
DMX footprint	**1, 2, 4, 5, 8 channels**
Beam angle	**25°**
Size (W × H × D)	**250 × 195 × 45 mm**
GDTF fixture type	**1BEAF182-D7C4-45A9-9781-47…**

Controls

Extra LED colours · Colour wheel · Dimmer

DMX modes

1-channel DMX mode	1 ch
2-channel DMX mode A	2 ch
2-channel DMX mode B	2 ch
4-channel DMX mode	4 ch
5-channel DMX mode	5 ch
8-channel DMX mode	8 ch

1-channel DMX mode

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	

2-channel DMX mode A

2 channels

Ch	Function	Default	DMX values
1	White	0	
2	Color Add RY	0	

2-channel DMX mode B

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Color Macro1	0	0–35 2700K 36–40 2800K 41–45 2900K 46–50 3000K 51–55 3100K 56–60 3200K 61–65 3300K 66–70 3400K 71–75 3500K 76–80 3600K 81–85 3700K 86–90 3800K 91–95 3900K 96–100 4000K 101–105 4100K 106–110 4200K 111–115 4300K 116–120 4400K 121–125 4500K 126–130 4600K 131–135 4700K 136–140 4800K 141–145 4900K 146–150 5000K 151–160 5100K 161–165 5200K 166–170 5300K 171–175 5400K 176–180 5500K 181–185 5600K 186–190 5700K 191–195 5800K 196–200 5900K 201–205 6000K 206–210 6100K 211–215 6200K 216–220 6300K 221–225 6400K 226–230 6500K 231–235 6600K 236–240 6700K 241–245 6800K 246–250 6900K 251–255 7000K

4-channel DMX mode

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	White	0	
3	Color Add RY	0	
4	Shutter1Strobe	0	0–10 Closed 11–20 Open 21–30 Strobe 31–90 Strobe Effect 91–100 Open 101–170 Strobe 171–180 Open 181–240 Random Strobe 241–255 Open

5-channel DMX mode

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	

5-channel DMX mode (continued)

Ch	Function	Default	DMX values
2	Color Macro1	0	0–35 2700K 36–40 2800K 41–45 2900K 46–50 3000K 51–55 3100K 56–60 3200K 61–65 3300K 66–70 3400K 71–75 3500K 76–80 3600K 81–85 3700K 86–90 3800K 91–95 3900K 96–100 4000K 101–105 4100K 106–110 4200K 111–115 4300K 116–120 4400K 121–125 4500K 126–130 4600K 131–135 4700K 136–140 4800K 141–145 4900K 146–150 5000K 151–160 5100K 161–165 5200K 166–170 5300K 171–175 5400K 176–180 5500K 181–185 5600K 186–190 5700K 191–195 5800K 196–200 5900K 201–205 6000K 206–210 6100K 211–215 6200K 216–220 6300K 221–225 6400K 226–230 6500K 231–235 6600K 236–240 6700K 241–245 6800K 246–250 6900K 251–255 7000K
3	Shutter1Strobe	0	0–10 Closed 11–20 Open 21–30 Strobe 31–90 Strobe Effect 91–100 Open 101–170 Strobe 171–180 Open 181–240 Random Strobe 241–255 Open

5-channel DMX mode (continued)

Ch	Function	Default	DMX values
4	Dimmer Curve	0	0–10 Default 11–20 Linear 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–120 Stage2 121–121 Delay 0;1s 122–122 Delay 0;2s 123–123 Delay 0;3s 124–124 Delay 0;4s 125–125 Delay 0;5s 126–126 Delay 0;6s 127–127 Delay 0;7s 128–128 Delay 0;8s 129–129 Delay 0;9s 130–130 Delay 1;0s 131–131 Delay 1;5s 132–132 Delay 2;0s 133–133 Delay 3;0s 134–134 Delay 4;0s 135–135 Delay 5;0s 136–136 Delay 6;0s 137–137 Delay 7;0s 138–138 Delay 8;0s 139–139 Delay 9;0s 140–140 Delay 10;0s 141–255 Default
5	L EDFrequency	0	0–10 No Fucntion 11–20 900Hz 21–30 1000Hz 31–40 1100Hz 41–50 1200Hz 51–60 1300Hz 61–70 1400Hz 71–80 1500Hz 81–90 2500Hz 91–100 4000Hz 101–110 5000Hz 111–120 6000Hz 121–130 10000Hz 131–140 Default 141–255 No Function

8-channel DMX mode

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	White	0	
3	Color Add RY	0	
4	Shutter1Strobe	0	0–10 Closed 11–20 Open 21–30 Strobe 31–90 Strobe Effect 91–100 Open 101–170 Strobe 171–180 Open 181–240 Random Strobe 241–255 Open

8-channel DMX mode (continued)

Ch	Function	Default	DMX values
5	Blinder Mode	0	
6	Color Macro1	0	0–35 2700K 36–40 2800K 41–45 2900K 46–50 3000K 51–55 3100K 56–60 3200K 61–65 3300K 66–70 3400K 71–75 3500K 76–80 3600K 81–85 3700K 86–90 3800K 91–95 3900K 96–100 4000K 101–105 4100K 106–110 4200K 111–115 4300K 116–120 4400K 121–125 4500K 126–130 4600K 131–135 4700K 136–140 4800K 141–145 4900K 146–150 5000K 151–160 5100K 161–165 5200K 166–170 5300K 171–175 5400K 176–180 5500K 181–185 5600K 186–190 5700K 191–195 5800K 196–200 5900K 201–205 6000K 206–210 6100K 211–215 6200K 216–220 6300K 221–225 6400K 226–230 6500K 231–235 6600K 236–240 6700K 241–245 6800K 246–250 6900K 251–255 7000K

8-channel DMX mode (continued)

Ch	Function	Default	DMX values
7	Dimmer Curve	0	0–10 Default 11–20 Linear 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–120 Stage2 121–121 Delay 0;1s 122–122 Delay 0;2s 123–123 Delay 0;3s 124–124 Delay 0;4s 125–125 Delay 0;5s 126–126 Delay 0;6s 127–127 Delay 0;7s 128–128 Delay 0;8s 129–129 Delay 0;9s 130–130 Delay 1;0s 131–131 Delay 1;5s 132–132 Delay 2;0s 133–133 Delay 3;0s 134–134 Delay 4;0s 135–135 Delay 5;0s 136–136 Delay 6;0s 137–137 Delay 7;0s 138–138 Delay 8;0s 139–139 Delay 9;0s 140–140 Delay 10;0s 141–255 Default
8	L EDFrequency	0	0–10 No Fucntion 11–20 900Hz 21–30 1000Hz 31–40 1100Hz 41–50 1200Hz 51–60 1300Hz 61–70 1400Hz 71–80 1500Hz 81–90 2500Hz 91–100 4000Hz 101–110 5000Hz 111–120 6000Hz 121–130 10000Hz 131–140 Default 141–255 No Function