
JB Systems

Rave Bar

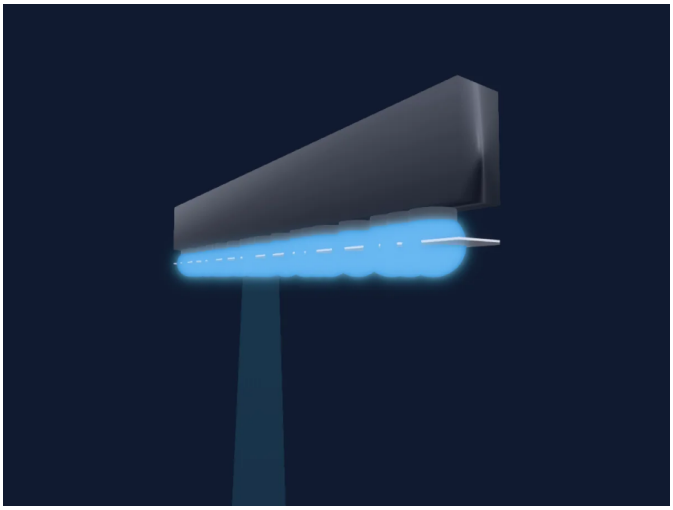

Manufacturer	**JB Systems**
Type	**PAR**
DMX modes	**4**
DMX footprint	**1, 2, 6, 37 channels**
Beam angle	**3-8°**
Heads / cells	**5**
Size (W × H × D)	**1002 × 122 × 67 mm**
GDTF fixture type	**63D3FD44-FA93-4F2A-B05F-A8…**

Controls

Colour wheel · Dimmer · Pixel control

DMX modes

1CH	1 ch
2CH	2 ch
6CH Mode	6 ch
37CH Mode	37 ch

1CH

1 channel

Ch	Function	Default	DMX values
1	Control1	0	0–9 No Function 10–44 Program 1 45–79 Program 2 80–114 Program 3 115–149 Program 4 150–184 Program 5 185–219 Program 6 220–254 Program 7 255–255 Soundmode

2CH

2 channels

Ch	Function	Default	DMX values
1	Control1	0	0–9 No Function 10–44 Program 1 45–79 Program 2 80–114 Program 3 115–149 Program 4 150–184 Program 5 185–219 Program 6 220–254 Program 7 255–255 Soundmode
2	Control Speed	0	

6CH Mode

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Program Dimm Dimmer	0	0–9 Sunstripe 0% 10–19 Sunstripe 100% 20–29 Sunstripe Program 1 30–39 Sunstripe Program 2 40–49 Sunstripe Program 3 50–59 Sunstripe Program 4 60–69 Sunstripe Program 5 70–79 Sunstripe Program 6 80–89 Sunstripe Program 7 90–99 Sunstripe Program 8 100–109 Sunstripe Program 9 110–119 Sunstripe Program 10 120–129 Sunstripe Program 11 130–139 Sunstripe Program 12 140–149 Sunstripe Program 13 150–159 Sunstripe Program 14 160–169 Sunstripe Program 15 170–179 Sunstripe Program 16 180–189 Sunstripe Program 17 190–199 Sunstripe Program 18 200–209 Sunstripe Program 19 210–219 Sunstripe Program 20 220–229 Sunstripe Program 21 230–239 Sunstripe Program 22 240–255 Sunstripe Program 23

6CH Mode (continued)

Ch	Function	Default	DMX values
3	Color Macro1	0	0–9 RGB LED 0% 10–21 Static Color 1 22–33 Static Color 2 34–45 Static Color 3 46–57 Static Color 4 58–69 Static Color 5 70–81 Static Color 6 82–93 Static Color 7 94–105 Static Color 8 106–117 Static Color 9 118–129 Static Color 10 130–141 Program 1 142–153 Program 2 154–165 Program 3 166–177 Program 4 178–189 Program 5 190–201 Program 6 202–213 Program 7 214–225 Program 8 226–237 Program 9 238–249 Program 10 250–255 Program 11
4	Dimmer Program Dimm Dimmer	0	0–9 Strobe LED 0% 10–27 Strobe LED 100% 28–45 Strobe Program 1 46–63 Strobe Program 2 64–81 Strobe Program 3 82–99 Strobe Program 4 100–117 Strobe Program 5 118–135 Strobe Program 6 136–153 Strobe Program 7 154–189 Strobe Program 9 190–207 Strobe Program 10 208–225 Strobe Program 11 226–243 Strobe Program 12 244–255 Strobe Program 13
5	Control Speed	0	
6	Strobe Rate	0	0–9 No Function 10–255 Strobe slow >> fast

37CH Mode

37 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–0 Closed 1–255 Open
2	Dimmer	0	0–0 Closed 1–255 Open
3	Dimmer	0	0–0 Closed 1–255 Open
4	Dimmer	0	0–0 Closed 1–255 Open
5	Dimmer	0	0–0 Closed 1–255 Open
6	Dimmer	0	0–0 Closed 1–255 Open
7	Dimmer	0	0–0 Closed 1–255 Open

37CH Mode (continued)

Ch	Function	Default	DMX values
8	Dimmer	0	0–0 Closed 1–255 Open
9	Dimmer	0	0–0 Closed 1–255 Open
10	Dimmer	0	0–0 Closed 1–255 Open
11	Dimmer	0	0–0 Closed 1–255 Open
12	Dimmer	0	0–0 Closed 1–255 Open
13	Dimmer	0	0–0 Closed 1–255 Open
14	Dimmer	0	0–0 Closed 1–255 Open
15	Red	255	
16	Green	255	
17	Blue	255	
18	Red	255	
19	Green	255	
20	Blue	255	
21	Red	255	
22	Green	255	
23	Blue	255	
24	Red	255	
25	Green	255	
26	Blue	255	
27	Red	255	
28	Green	255	
29	Blue	255	
30	Dimmer	0	0–0 Closed 1–255 Open
31	Dimmer	0	0–0 Closed 1–255 Open
32	Dimmer	0	0–0 Closed 1–255 Open
33	Dimmer	0	0–0 Closed 1–255 Open
34	Dimmer	0	0–0 Closed 1–255 Open
35	Control1	0	0–9 No Function 10–44 Program 1 random 45–79 Program 2 WW + RGB slow >> fast 80–114 Program 3 WW + CW slow >> fast 115–149 Program 4 RGB + CW slow >> fast 150–184 Program 5 WW slow >> fast 185–219 Program 6 RGB slow >> fast 220–254 Program 7 CW slow >> fast 255–255 Soundmode
36	Control2	0	0–254 Slow 255–255 Fast
37	Strobe Rate	0	