
JMAZ PROFESSIONAL

Electro Panel W18

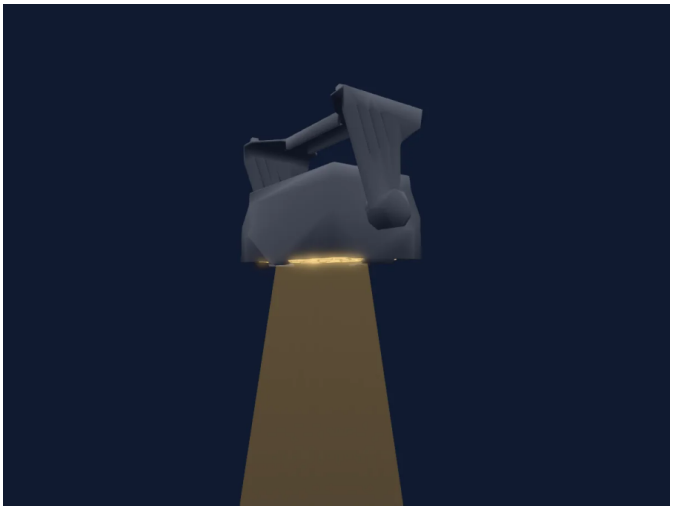

Manufacturer	**JMAZ PROFESSIONAL**
Type	**PAR**
DMX modes	**7**
DMX footprint	**3, 4, 6, 11, 16 channels**
Beam angle	**20°**
Size (W × H × D)	**410 × 217 × 164 mm**
GDTF fixture type	**D600E9D2-3A4A-46F3-B9DB-8…**

Controls

Extra LED colours · Hue and saturation · RGB colour mixing · Colour temperature · Colour wheel · Strobe · Dimmer

DMX modes

3CH	3 ch
HSI	3 ch
HSV	3 ch
4CH	4 ch
6CH	6 ch
11CH	11 ch
16CH	16 ch

3CH

3 channels

Ch	Function	Default	DMX values
1	Color Mix Mode	0	
2	Color Add GY	255	
3	Dimmer	0	0–254 Closed 255–255 Open

HSI

3 channels

Ch	Function	Default	DMX values
1	H SBHue	255	
2	H SBSaturation	0	
3	Dimmer	0	0–254 Closed 255–255 Open

HSV

3 channels

Ch	Function	Default	DMX values
1	H SBHue	255	
2	H SBSaturation	0	
3	H SBBrightness	255	

4CH

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add GY	0	

6CH

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	Color Add GY	0	
6	Shutter / Strobe	0	0–10 Open 11–254 Shutter1Strobe 2 · Slow 0.5–7.97 Hz 255–255 Shutter1Strobe 2 · Fast 8 Hz

11CH

11 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	

11CH (continued)

Ch	Function	Default	DMX values
4	Blue	255	
5	Color Add GY	0	
6	Shutter / Strobe	0	0–10 Open 11–254 Shutter1Strobe 2 · Slow 0.5–7.97 Hz 255–255 Shutter1Strobe 2 · Fast 8 Hz
7	Color Effects1	0	
8	C TO	0	
9	Color Macro1	0	
10	Color Macro1Rate	0	0–126 Slow 127–127 Fast 128–254 Slow 255–255 Fast
11	Intensity MSpeed	0	0–5 Step 6–55 Ctrl Board Off 56–105 Fast 106–155 Less Fast 156–205 Middle 206–255 Slow

16CH

16 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Red	255	
4	Red Fine	255	Fine byte of Red
5	Green	255	
6	Green Fine	255	Fine byte of Green
7	Blue	255	
8	Blue Fine	255	Fine byte of Blue
9	Color Add GY	0	
10	Color Add GY Fine	0	Fine byte of Color Add GY
11	Shutter / Strobe	0	0–10 Open 11–254 Shutter1Strobe 2 · Slow 0.5–7.97 Hz 255–255 Shutter1Strobe 2 · Fast 8 Hz
12	Color Effects1	0	
13	C TO	0	
14	Color Macro1	0	
15	Color Macro1Rate	0	0–126 Slow 127–127 Fast 128–254 Slow 255–255 Fast
16	Intensity MSpeed	0	0–5 Step 6–55 Ctrl Board Off 56–105 Fast 106–155 Less Fast 156–205 Middle 206–255 Slow