
Krypton

Atom

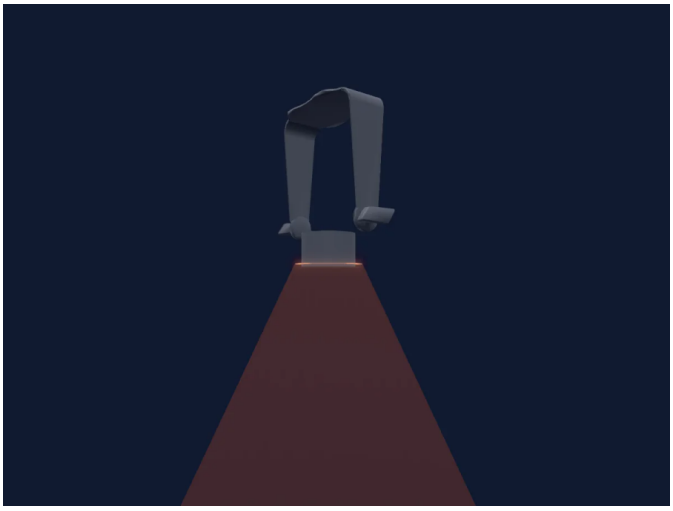

Manufacturer	**Krypton**
Type	**PAR**
DMX modes	**6**
DMX footprint	**1, 6, 9, 12, 13, 19 channels**
Beam angle	**52°**
Size (W × H × D)	**190 × 190 × 190 mm**
GDTF fixture type	**22F601B3-765A-43E2-B372-E97…**

Controls

Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Strobe · Dimmer

Safety-relevant functions

Strobe

DMX modes

1Ch	1 ch
6Ch	6 ch
9Ch	9 ch
12Ch	12 ch
13Ch	13 ch
19Ch	19 ch

1Ch

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 0 Percent 255–255 100 Percent

6Ch

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	50	0–31 Closed 32–63 OPEN 64–95 Strobe Slow to Fast 96–127 OPEN 128–159 Pulse-Effect 160–191 OPEN 192–223 Random Slow to Fast 224–255 OPEN
4	C TO	0	

6Ch (continued)

Ch	Function	Default	DMX values
5	Color Wheel 2	0	0–0 Open (wheel slot 61) 1–1 LEE 007 - Pale Yellow (wheel slot 1) 2–2 LEE 103 - Straw (wheel slot 2) 3–3 LEE 151 - Gold Tint (wheel slot 3) 4–4 LEE 100 - Spring Yellow (wheel slot 4) 5–5 LEE 010 - Medium Yellow (wheel slot 5) 6–6 LEE 101 - Yellow (wheel slot 6) 7–7 LEE 104 - Deep Amber (wheel slot 7) 8–8 LEE 015 - Deep Straw (wheel slot 8) 9–9 LEE 179 - Chrome Orange (wheel slot 9) 10–10 LEE 021 - Gold Amber (wheel slot 10) 11–11 LEE 105 - Orange (wheel slot 11) 12–12 LEE 158 - Deep Orange (wheel slot 12) 13–13 LEE 022 - Dark Amber (wheel slot 13) 14–14 LEE 778 - Millenium Gold (wheel slot 14) 15–15 LEE 135 - Deep Gold Amber (wheel slot 15) 16–16 LEE 024 - Scarlet (wheel slot 16) 17–17 LEE 106 - Primary Red (wheel slot 17) 18–18 LEE 026 - Bright Red (wheel slot 18) 19–19 LEE 027 - Medium Red (wheel slot 19) 20–20 LEE 019 - Fire (wheel slot 20) 21–21 LEE 157 - Pink (wheel slot 21) 22–22 LEE 036 - Medium Pink (wheel slot 22) 23–23 LEE 111 - Dark Pink (wheel slot 23) 24–24 LEE 128 - Bright Pink (wheel slot 24) 25–25 LEE 148 - Bright Rose (wheel slot 25) 26–26 LEE 332 - Special Rose Pink (wheel slot 26) 27–27 LEE 793 - Vanity Fair (wheel slot 27) 28–28 LEE 113 - Magenta (wheel slot 28) 29–29 LEE 046 - Dark Magenta (wheel slot 29) 30–30 LEE 048 - Rose Purple (wheel slot 30) 31–31 LEE 126 - Mauve (wheel slot 31) 32–32 LEE 049 - Medium Purple (wheel slot 32) 33–33 LEE 058 - Lavender (wheel slot 33) 34–34 LEE 197 - Alice Blue (wheel slot 34) 35–35 LEE 119 - Dark Blue (wheel slot 35) 36–36 LEE 132 - Medium Blue (wheel slot 36) 37–37 LEE 120 - Deep Blue (wheel slot 37) 38–38 LEE 165 - Daylight Blue (wheel slot 38) 39–39 LEE 161 - Slate Blue (wheel slot 39) 40–40 LEE 118 - Light Blue (wheel slot 40) 41–41 LEE 068 - Sky Blue (wheel slot 41) 42–42 LEE 143 - Pale Navy Blue (wheel slot 42) 43–43 LEE 131 - Marine Blue (wheel slot 43) 44–44 LEE 115 - Peacock Blue (wheel slot 44) 45–45 LEE 172 - Lagoon Blue (wheel slot 45) 46–46 LEE 116 - Medium Blue Green (wheel slot 46) 47–47 LEE 090 - Dark Yellow Green (wheel slot 47) 48–48 LEE 139 - Primary Green (wheel slot 48) 49–49 LEE 122 - Fern Green (wheel slot 49) 50–50 LEE 089 - Moss Green (wheel slot 50) 51–51 LEE 124 - Dark Green (wheel slot 51) 52–52 LEE 088 - Lime Green (wheel slot 52) 53–53 LEE 138 - Pale Green (wheel slot 53) 54–179 Open (wheel slot 61) 180–201 CW Fast to Slow 202–207 Stop 208–229 CCW Slow to Fast 230–234 Open (wheel slot 61) 235–239 Random Color Fast 240–244 Random Color Medium 245–249 Random Color Slow 250–255 Open (wheel slot 61)

6Ch (continued)

Ch	Function	Default	DMX values
6	Function	0	

9Ch

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	50	0–31 Closed 32–63 OPEN 64–95 Strobe Slow to Fast 96–127 OPEN 128–159 Pulse-Effect 160–191 OPEN 192–223 Random Slow to Fast 224–255 OPEN
4	Red	255	
5	Green	255	
6	Blue	255	
7	C TO	0	

9Ch (continued)

Ch	Function	Default	DMX values
8	Color Wheel 2	0	0–0 Open (wheel slot 61) 1–1 LEE 007 - Pale Yellow (wheel slot 1) 2–2 LEE 103 - Straw (wheel slot 2) 3–3 LEE 151 - Gold Tint (wheel slot 3) 4–4 LEE 100 - Spring Yellow (wheel slot 4) 5–5 LEE 010 - Medium Yellow (wheel slot 5) 6–6 LEE 101 - Yellow (wheel slot 6) 7–7 LEE 104 - Deep Amber (wheel slot 7) 8–8 LEE 015 - Deep Straw (wheel slot 8) 9–9 LEE 179 - Chrome Orange (wheel slot 9) 10–10 LEE 021 - Gold Amber (wheel slot 10) 11–11 LEE 105 - Orange (wheel slot 11) 12–12 LEE 158 - Deep Orange (wheel slot 12) 13–13 LEE 022 - Dark Amber (wheel slot 13) 14–14 LEE 778 - Millenium Gold (wheel slot 14) 15–15 LEE 135 - Deep Gold Amber (wheel slot 15) 16–16 LEE 024 - Scarlet (wheel slot 16) 17–17 LEE 106 - Primary Red (wheel slot 17) 18–18 LEE 026 - Bright Red (wheel slot 18) 19–19 LEE 027 - Medium Red (wheel slot 19) 20–20 LEE 019 - Fire (wheel slot 20) 21–21 LEE 157 - Pink (wheel slot 21) 22–22 LEE 036 - Medium Pink (wheel slot 22) 23–23 LEE 111 - Dark Pink (wheel slot 23) 24–24 LEE 128 - Bright Pink (wheel slot 24) 25–25 LEE 148 - Bright Rose (wheel slot 25) 26–26 LEE 332 - Special Rose Pink (wheel slot 26) 27–27 LEE 793 - Vanity Fair (wheel slot 27) 28–28 LEE 113 - Magenta (wheel slot 28) 29–29 LEE 046 - Dark Magenta (wheel slot 29) 30–30 LEE 048 - Rose Purple (wheel slot 30) 31–31 LEE 126 - Mauve (wheel slot 31) 32–32 LEE 049 - Medium Purple (wheel slot 32) 33–33 LEE 058 - Lavender (wheel slot 33) 34–34 LEE 197 - Alice Blue (wheel slot 34) 35–35 LEE 119 - Dark Blue (wheel slot 35) 36–36 LEE 132 - Medium Blue (wheel slot 36) 37–37 LEE 120 - Deep Blue (wheel slot 37) 38–38 LEE 165 - Daylight Blue (wheel slot 38) 39–39 LEE 161 - Slate Blue (wheel slot 39) 40–40 LEE 118 - Light Blue (wheel slot 40) 41–41 LEE 068 - Sky Blue (wheel slot 41) 42–42 LEE 143 - Pale Navy Blue (wheel slot 42) 43–43 LEE 131 - Marine Blue (wheel slot 43) 44–44 LEE 115 - Peacock Blue (wheel slot 44) 45–45 LEE 172 - Lagoon Blue (wheel slot 45) 46–46 LEE 116 - Medium Blue Green (wheel slot 46) 47–47 LEE 090 - Dark Yellow Green (wheel slot 47) 48–48 LEE 139 - Primary Green (wheel slot 48) 49–49 LEE 122 - Fern Green (wheel slot 49) 50–50 LEE 089 - Moss Green (wheel slot 50) 51–51 LEE 124 - Dark Green (wheel slot 51) 52–52 LEE 088 - Lime Green (wheel slot 52) 53–53 LEE 138 - Pale Green (wheel slot 53) 54–179 Open (wheel slot 61) 180–201 CW Fast to Slow 202–207 Stop 208–229 CCW Slow to Fast 230–234 Open (wheel slot 61) 235–239 Random Color Fast 240–244 Random Color Medium 245–249 Random Color Slow 250–255 Open (wheel slot 61)

9Ch (continued)

Ch	Function	Default	DMX values
9	Function	0	

12Ch

12 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	50	0–31 Closed 32–63 OPEN 64–95 Strobe Slow to Fast 96–127 OPEN 128–159 Pulse-Effect 160–191 OPEN 192–223 Random Slow to Fast 224–255 OPEN
4	Red	255	
5	Green	255	
6	Blue	255	
7	White	0	
8	Color Add GY	0	
9	Color Add RY	0	
10	C TO	0	

12Ch (continued)

Ch	Function	Default	DMX values
11	Color Wheel 2	0	0–0 Open (wheel slot 61) 1–1 LEE 007 - Pale Yellow (wheel slot 1) 2–2 LEE 103 - Straw (wheel slot 2) 3–3 LEE 151 - Gold Tint (wheel slot 3) 4–4 LEE 100 - Spring Yellow (wheel slot 4) 5–5 LEE 010 - Medium Yellow (wheel slot 5) 6–6 LEE 101 - Yellow (wheel slot 6) 7–7 LEE 104 - Deep Amber (wheel slot 7) 8–8 LEE 015 - Deep Straw (wheel slot 8) 9–9 LEE 179 - Chrome Orange (wheel slot 9) 10–10 LEE 021 - Gold Amber (wheel slot 10) 11–11 LEE 105 - Orange (wheel slot 11) 12–12 LEE 158 - Deep Orange (wheel slot 12) 13–13 LEE 022 - Dark Amber (wheel slot 13) 14–14 LEE 778 - Millenium Gold (wheel slot 14) 15–15 LEE 135 - Deep Gold Amber (wheel slot 15) 16–16 LEE 024 - Scarlet (wheel slot 16) 17–17 LEE 106 - Primary Red (wheel slot 17) 18–18 LEE 026 - Bright Red (wheel slot 18) 19–19 LEE 027 - Medium Red (wheel slot 19) 20–20 LEE 019 - Fire (wheel slot 20) 21–21 LEE 157 - Pink (wheel slot 21) 22–22 LEE 036 - Medium Pink (wheel slot 22) 23–23 LEE 111 - Dark Pink (wheel slot 23) 24–24 LEE 128 - Bright Pink (wheel slot 24) 25–25 LEE 148 - Bright Rose (wheel slot 25) 26–26 LEE 332 - Special Rose Pink (wheel slot 26) 27–27 LEE 793 - Vanity Fair (wheel slot 27) 28–28 LEE 113 - Magenta (wheel slot 28) 29–29 LEE 046 - Dark Magenta (wheel slot 29) 30–30 LEE 048 - Rose Purple (wheel slot 30) 31–31 LEE 126 - Mauve (wheel slot 31) 32–32 LEE 049 - Medium Purple (wheel slot 32) 33–33 LEE 058 - Lavender (wheel slot 33) 34–34 LEE 197 - Alice Blue (wheel slot 34) 35–35 LEE 119 - Dark Blue (wheel slot 35) 36–36 LEE 132 - Medium Blue (wheel slot 36) 37–37 LEE 120 - Deep Blue (wheel slot 37) 38–38 LEE 165 - Daylight Blue (wheel slot 38) 39–39 LEE 161 - Slate Blue (wheel slot 39) 40–40 LEE 118 - Light Blue (wheel slot 40) 41–41 LEE 068 - Sky Blue (wheel slot 41) 42–42 LEE 143 - Pale Navy Blue (wheel slot 42) 43–43 LEE 131 - Marine Blue (wheel slot 43) 44–44 LEE 115 - Peacock Blue (wheel slot 44) 45–45 LEE 172 - Lagoon Blue (wheel slot 45) 46–46 LEE 116 - Medium Blue Green (wheel slot 46) 47–47 LEE 090 - Dark Yellow Green (wheel slot 47) 48–48 LEE 139 - Primary Green (wheel slot 48) 49–49 LEE 122 - Fern Green (wheel slot 49) 50–50 LEE 089 - Moss Green (wheel slot 50) 51–51 LEE 124 - Dark Green (wheel slot 51) 52–52 LEE 088 - Lime Green (wheel slot 52) 53–53 LEE 138 - Pale Green (wheel slot 53) 54–179 Open (wheel slot 61) 180–201 CW Fast to Slow 202–207 Stop 208–229 CCW Slow to Fast 230–234 Open (wheel slot 61) 235–239 Random Color Fast 240–244 Random Color Medium 245–249 Random Color Slow 250–255 Open (wheel slot 61)

12Ch (continued)

Ch	Function	Default	DMX values
12	Function	0	

13Ch

13 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	50	0–31 Closed 32–63 OPEN 64–95 Strobe Slow to Fast 96–127 OPEN 128–159 Pulse-Effect 160–191 OPEN 192–223 Random Slow to Fast 224–255 OPEN
4	Red	255	
5	Red Fine	255	Fine byte of Red
6	Green	255	
7	Green Fine	255	Fine byte of Green
8	Blue	255	
9	Blue Fine	255	Fine byte of Blue
10	C TO	0	

13Ch (continued)

Ch	Function	Default	DMX values
11	Color Wheel 2	0	0–0 Open (wheel slot 61) 1–1 LEE 007 - Pale Yellow (wheel slot 1) 2–2 LEE 103 - Straw (wheel slot 2) 3–3 LEE 151 - Gold Tint (wheel slot 3) 4–4 LEE 100 - Spring Yellow (wheel slot 4) 5–5 LEE 010 - Medium Yellow (wheel slot 5) 6–6 LEE 101 - Yellow (wheel slot 6) 7–7 LEE 104 - Deep Amber (wheel slot 7) 8–8 LEE 015 - Deep Straw (wheel slot 8) 9–9 LEE 179 - Chrome Orange (wheel slot 9) 10–10 LEE 021 - Gold Amber (wheel slot 10) 11–11 LEE 105 - Orange (wheel slot 11) 12–12 LEE 158 - Deep Orange (wheel slot 12) 13–13 LEE 022 - Dark Amber (wheel slot 13) 14–14 LEE 778 - Millenium Gold (wheel slot 14) 15–15 LEE 135 - Deep Gold Amber (wheel slot 15) 16–16 LEE 024 - Scarlet (wheel slot 16) 17–17 LEE 106 - Primary Red (wheel slot 17) 18–18 LEE 026 - Bright Red (wheel slot 18) 19–19 LEE 027 - Medium Red (wheel slot 19) 20–20 LEE 019 - Fire (wheel slot 20) 21–21 LEE 157 - Pink (wheel slot 21) 22–22 LEE 036 - Medium Pink (wheel slot 22) 23–23 LEE 111 - Dark Pink (wheel slot 23) 24–24 LEE 128 - Bright Pink (wheel slot 24) 25–25 LEE 148 - Bright Rose (wheel slot 25) 26–26 LEE 332 - Special Rose Pink (wheel slot 26) 27–27 LEE 793 - Vanity Fair (wheel slot 27) 28–28 LEE 113 - Magenta (wheel slot 28) 29–29 LEE 046 - Dark Magenta (wheel slot 29) 30–30 LEE 048 - Rose Purple (wheel slot 30) 31–31 LEE 126 - Mauve (wheel slot 31) 32–32 LEE 049 - Medium Purple (wheel slot 32) 33–33 LEE 058 - Lavender (wheel slot 33) 34–34 LEE 197 - Alice Blue (wheel slot 34) 35–35 LEE 119 - Dark Blue (wheel slot 35) 36–36 LEE 132 - Medium Blue (wheel slot 36) 37–37 LEE 120 - Deep Blue (wheel slot 37) 38–38 LEE 165 - Daylight Blue (wheel slot 38) 39–39 LEE 161 - Slate Blue (wheel slot 39) 40–40 LEE 118 - Light Blue (wheel slot 40) 41–41 LEE 068 - Sky Blue (wheel slot 41) 42–42 LEE 143 - Pale Navy Blue (wheel slot 42) 43–43 LEE 131 - Marine Blue (wheel slot 43) 44–44 LEE 115 - Peacock Blue (wheel slot 44) 45–45 LEE 172 - Lagoon Blue (wheel slot 45) 46–46 LEE 116 - Medium Blue Green (wheel slot 46) 47–47 LEE 090 - Dark Yellow Green (wheel slot 47) 48–48 LEE 139 - Primary Green (wheel slot 48) 49–49 LEE 122 - Fern Green (wheel slot 49) 50–50 LEE 089 - Moss Green (wheel slot 50) 51–51 LEE 124 - Dark Green (wheel slot 51) 52–52 LEE 088 - Lime Green (wheel slot 52) 53–53 LEE 138 - Pale Green (wheel slot 53) 54–179 Open (wheel slot 61) 180–201 CW Fast to Slow 202–207 Stop 208–229 CCW Slow to Fast 230–234 Open (wheel slot 61) 235–239 Random Color Fast 240–244 Random Color Medium 245–249 Random Color Slow 250–255 Open (wheel slot 61)

13Ch (continued)

Ch	Function	Default	DMX values
12	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–120 Stage 2 121–121 0s 122–122 01s 123–123 02s 124–124 03s 125–125 04s 126–126 05s 127–127 06s 128–128 07s 129–129 08s 130–130 09s 131–131 1s 132–132 1*5s 133–133 2s 134–134 3s 135–135 4s 136–136 5s 137–137 6s 138–138 7s 139–139 8s 140–140 9s 141–141 10s 142–255 Idle
13	Function	0	

19Ch

19 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 percent 63–126 25 percent 127–190 50 percent 191–254 75 percent 255–255 100 percent
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	50	0–31 Closed 32–63 OPEN 64–95 Strobe Slow to Fast 96–127 OPEN 128–159 Pulse-Effect 160–191 OPEN 192–223 Random Slow to Fast 224–255 OPEN
4	Red	255	
5	Red Fine	255	Fine byte of Red
6	Green	255	
7	Green Fine	255	Fine byte of Green
8	Blue	255	
9	Blue Fine	255	Fine byte of Blue
10	White	255	
11	White Fine	255	Fine byte of White
12	Color Add GY	0	

19Ch (continued)

Ch	Function	Default	DMX values
13	Color Add GY Fine	0	Fine byte of Color Add GY
14	Color Add RY	0	
15	Color Add RY Fine	0	Fine byte of Color Add RY
16	C TO	0	

19Ch (continued)

Ch	Function	Default	DMX values
17	Color Wheel 2	0	0–0 Open (wheel slot 61) 1–1 LEE 007 - Pale Yellow (wheel slot 1) 2–2 LEE 103 - Straw (wheel slot 2) 3–3 LEE 151 - Gold Tint (wheel slot 3) 4–4 LEE 100 - Spring Yellow (wheel slot 4) 5–5 LEE 010 - Medium Yellow (wheel slot 5) 6–6 LEE 101 - Yellow (wheel slot 6) 7–7 LEE 104 - Deep Amber (wheel slot 7) 8–8 LEE 015 - Deep Straw (wheel slot 8) 9–9 LEE 179 - Chrome Orange (wheel slot 9) 10–10 LEE 021 - Gold Amber (wheel slot 10) 11–11 LEE 105 - Orange (wheel slot 11) 12–12 LEE 158 - Deep Orange (wheel slot 12) 13–13 LEE 022 - Dark Amber (wheel slot 13) 14–14 LEE 778 - Millenium Gold (wheel slot 14) 15–15 LEE 135 - Deep Gold Amber (wheel slot 15) 16–16 LEE 024 - Scarlet (wheel slot 16) 17–17 LEE 106 - Primary Red (wheel slot 17) 18–18 LEE 026 - Bright Red (wheel slot 18) 19–19 LEE 027 - Medium Red (wheel slot 19) 20–20 LEE 019 - Fire (wheel slot 20) 21–21 LEE 157 - Pink (wheel slot 21) 22–22 LEE 036 - Medium Pink (wheel slot 22) 23–23 LEE 111 - Dark Pink (wheel slot 23) 24–24 LEE 128 - Bright Pink (wheel slot 24) 25–25 LEE 148 - Bright Rose (wheel slot 25) 26–26 LEE 332 - Special Rose Pink (wheel slot 26) 27–27 LEE 793 - Vanity Fair (wheel slot 27) 28–28 LEE 113 - Magenta (wheel slot 28) 29–29 LEE 046 - Dark Magenta (wheel slot 29) 30–30 LEE 048 - Rose Purple (wheel slot 30) 31–31 LEE 126 - Mauve (wheel slot 31) 32–32 LEE 049 - Medium Purple (wheel slot 32) 33–33 LEE 058 - Lavender (wheel slot 33) 34–34 LEE 197 - Alice Blue (wheel slot 34) 35–35 LEE 119 - Dark Blue (wheel slot 35) 36–36 LEE 132 - Medium Blue (wheel slot 36) 37–37 LEE 120 - Deep Blue (wheel slot 37) 38–38 LEE 165 - Daylight Blue (wheel slot 38) 39–39 LEE 161 - Slate Blue (wheel slot 39) 40–40 LEE 118 - Light Blue (wheel slot 40) 41–41 LEE 068 - Sky Blue (wheel slot 41) 42–42 LEE 143 - Pale Navy Blue (wheel slot 42) 43–43 LEE 131 - Marine Blue (wheel slot 43) 44–44 LEE 115 - Peacock Blue (wheel slot 44) 45–45 LEE 172 - Lagoon Blue (wheel slot 45) 46–46 LEE 116 - Medium Blue Green (wheel slot 46) 47–47 LEE 090 - Dark Yellow Green (wheel slot 47) 48–48 LEE 139 - Primary Green (wheel slot 48) 49–49 LEE 122 - Fern Green (wheel slot 49) 50–50 LEE 089 - Moss Green (wheel slot 50) 51–51 LEE 124 - Dark Green (wheel slot 51) 52–52 LEE 088 - Lime Green (wheel slot 52) 53–53 LEE 138 - Pale Green (wheel slot 53) 54–179 Open (wheel slot 61) 180–201 CW Fast to Slow 202–207 Stop 208–229 CCW Slow to Fast 230–234 Open (wheel slot 61) 235–239 Random Color Fast 240–244 Random Color Medium 245–249 Random Color Slow 250–255 Open (wheel slot 61)

19Ch (continued)

Ch	Function	Default	DMX values
18	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–120 Stage 2 121–121 0s 122–122 01s 123–123 02s 124–124 03s 125–125 04s 126–126 05s 127–127 06s 128–128 07s 129–129 08s 130–130 09s 131–131 1s 132–132 1*5s 133–133 2s 134–134 3s 135–135 4s 136–136 5s 137–137 6s 138–138 7s 139–139 8s 140–140 9s 141–141 10s 142–255 Idle
19	Function	0	