
Krypton

LP Z180-IP

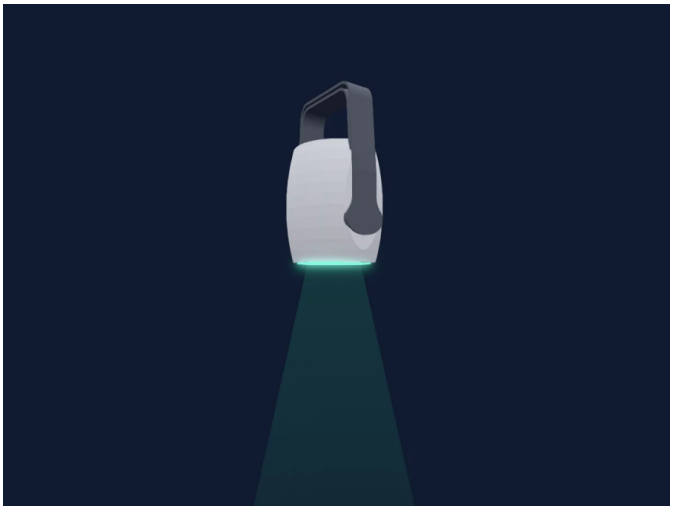

Manufacturer	**Krypton**
Type	**Effect light**
DMX modes	**3**
DMX footprint	**6, 9, 14 channels**
Beam angle	**5-50°**
Size (W × H × D)	**265 × 391 × 115 mm**
GDTF fixture type	**DCCC7641-856A-4132-824A-76…**

Controls

Zoom · Extra LED colours · RGB colour mixing · Colour wheel · Dimmer

Safety-relevant functions

Fixture reset

DMX modes

6 Channel	6 ch
9 Channel	9 ch
14 Channel	14 ch

6 Channel

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	0–254 0% 255–255 100%
3	Green	255	0–254 0% 255–255 100%
4	Blue	255	0–254 0% 255–255 100%
5	White	0	0–254 0% 255–255 100%
6	Zoom	128	0–127 0% (5 Degrees) 128–254 50% 255–255 100% (50 Degrees)

9 Channel

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	0–254 0% 255–255 100%
3	Green	255	0–254 0% 255–255 100%
4	Blue	255	0–254 0% 255–255 100%
5	White	0	0–254 0% 255–255 100%
6	Shutter / Strobe	20	0–10 Led OFF 11–20 Led ON 21–79 Strobe slow 80–80 Strobe fast 81–90 Led ON 91–150 Ramp Up strobe · Ramp Up Slow to Fast 151–160 Led ON 161–220 Random 221–230 Zoom Reset 231–255 LED ON
7	Color Macro1	0	
8	Color Macro1Rate	0	0–124 Counter-Clockwise Movement Fast 125–125 Counter-Clockwise Movement Slow 126–130 Stop 131–254 Clockwise Movement Slow 255–255 Clockwise Movement Fast
9	Zoom	128	0–127 0% (5 Degrees) 128–254 50% 255–255 100% (50 Degrees)

14 Channel

14 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer

14 Channel (continued)

Ch	Function	Default	DMX values
3	Red	255	0–254 0% 255–255 100%
4	Red Fine	255	Fine byte of Red
5	Green	255	0–254 0% 255–255 100%
6	Green Fine	255	Fine byte of Green
7	Blue	255	0–254 0% 255–255 100%
8	Blue Fine	255	Fine byte of Blue
9	White	0	0–254 0% 255–255 100%
10	White Fine	0	Fine byte of White
11	Shutter / Strobe	20	0–10 Led OFF 11–20 Led ON 21–79 Strobe slow 80–80 Strobe fast 81–90 Led ON 91–150 Ramp Up strobe · Ramp Up Slow to Fast 151–160 Led ON 161–220 Random 221–230 Zoom Reset 231–255 LED ON
12	Color Macro1	0	
13	Color Macro1Rate	0	0–124 Counter-Clockwise Movement Fast 125–125 Counter-Clockwise Movement Slow 126–130 Stop 131–254 Clockwise Movement Slow 255–255 Clockwise Movement Fast
14	Zoom	128	0–127 0% (5 Degrees) 128–254 50% 255–255 100% (50 Degrees)