
LcPro

AURON ONE20

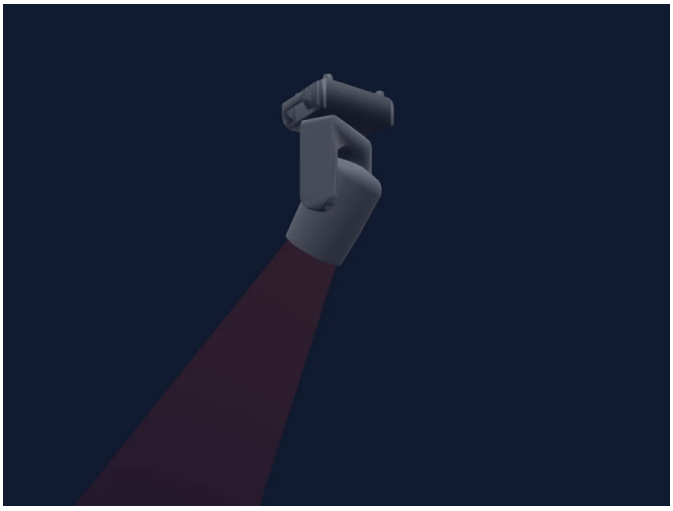

Manufacturer	**LcPro**
Type	**Moving head**
DMX modes	**4**
DMX footprint	**21, 26, 37, 109 channels**
Beam angle	**4-45°**
Pan range	**540°**
Tilt range	**220°**
Heads / cells	**3**
Size (W × H × D)	**191 × 261 × 185 mm**
GDTF fixture type	**1FFEAFDC-893A-11F0-BA60-42…**

Controls

Frost · Zoom · Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Effect speed · Strobe · Dimmer · Pixel control · Pan and tilt · Movement speed

Safety-relevant functions

Fixture reset · Built-in effect programmes

DMX modes

21 Mode	21 ch
26Ch Mode	26 ch
37Ch	37 ch
109Ch	109 ch

21 Mode

21 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	30	0–19 Closed - Shutter Closed 20–49 Open - Shutter Open 50–200 Strobe S > F - Strobe 201–210 Open - Shutter Open 211–255 Strobe Random S > F - Strobe Random
2	Dimmer	0	
3	Dimmer Fine	0	Fine byte of Dimmer
4	Red	255	
5	Red Fine	255	Fine byte of Red
6	Green	255	
7	Green Fine	255	Fine byte of Green
8	Blue	255	
9	Blue Fine	255	Fine byte of Blue
10	Color Add GY	0	
11	Color Add GY Fine	0	Fine byte of Color Add GY
12	C TC	0	0–5 No Function 6–9 8900K - CTC 10–27 8700K - CTC 28–55 7700K - CTC 56–83 7000K - CTC 84–111 6100K - CTC 112–139 5700K - CTC 140–167 5100K - CTC 168–195 4500K - CTC 196–223 3400K - CTC 224–251 3000K - CTC 252–255 2600K - CTC
13	Zoom	127	0–254 Wide 255–255 Narrow
14	Zoom Fine	255	Fine byte of Zoom
15	Pan	85	
16	Pan Fine	85	Fine byte of Pan
17	Tilt	127	
18	Tilt Fine	255	Fine byte of Tilt
19	Control1	0	0–9 Function - Custom 10–14 Reset Fixture - Reset 15–17 No Function - Custom 18–18 Reset P/T - Reset 19–22 No Function - Custom 23–23 Linear Dimmer Curve - Custom 24–24 Square Law Dimmer Curve - Custom 25–25 Inverse Square Law Dimmer Curve - Custom 26–26 S-Curve Dimmer Curve - Custom 27–29 No Function - Custom 30–35 Frost - Full Frost 36–53 No Function - Custom 54–54 Auto Fan Speed - Speed 55–55 Silent Fan Speed - Speed 56–56 High Fan Speed - Speed 57–255 No Function - Custom
20	L EDFrequency	0	0–0 Hybrid LED Dimming Mode - Custom 1–127 Variable -2% - 0% - Custom 128–128 24000Hz - Custom 129–254 Variable 0% - +2% - Custom 255–255 No Function - Custom

21 Mode (continued)

Ch	Function	Default	DMX values
21	Frost1	0	0–127 Frost - Frost Open 128–255 Frost - Full Frost

26Ch Mode

26 channels

Ch	Function	Default	DMX values
1	Pan	85	
2	Pan Fine	85	Fine byte of Pan
3	Tilt	127	
4	Tilt Fine	255	Fine byte of Tilt
5	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Color Add GY	0	0–0 Min 1–254 Min > Max 255–255 Max
9	H SBHue	0	0–0 Min 1–254 Min > Max 255–255 Max
10	H SBSaturation	0	0–0 Min 1–254 Min > Max 255–255 Max
11	C TC	6	0–5 No Function 6–9 8900K - CTC 10–27 8700K - CTC 28–55 7700K - CTC 56–83 7000K - CTC 84–111 6100K - CTC 112–139 5700K - CTC 140–167 5100K - CTC 168–195 4500K - CTC 196–223 3400K - CTC 224–251 3000K - CTC 252–255 2600K - CTC
12	Color Macro1	0	0–9 Close - Macro 10–255 Color Macro - Macro
13	Effect	0	0–0 Close - Custom 1–100 Effect 1 - Macro 101–200 Effect 2 - Macro 201–255 Effect 3 - Macro
14	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

26Ch Mode (continued)

Ch	Function	Default	DMX values
17	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
18	Effect 2	0	0–15 Close - Custom 16–30 Effect 1 - Macro 31–50 Effect 2 - Macro 51–70 Effect 3 - Macro 71–90 Effect 4 - Macro 91–110 Effect 5 - Macro 111–130 Effect 6 - Macro 131–150 Effect 7 - Macro 151–170 Effect 8 - Macro 171–190 Effect 9 - Macro 191–210 Effect 10 - Macro 211–230 Effect 11 - Macro 231–250 Effect 12 - Macro 251–255 Effect 13 - Macro
19	Effect Speed 2	0	0–0 Min 1–254 Min > Max 255–255 Max
20	Zoom	127	0–0 Wide 1–254 Wide > Narrow 255–255 Narrow
21	Frost1	0	0–0 Min 1–254 Min > Max 255–255 Max
22	Shutter / Strobe	255	0–3 Closed - Shutter Closed 4–127 Strobe S > F - Strobe 128–191 Pulse Strobe S > F - Strobe Pulse Random 192–251 Strobe Random S > F - Strobe Random 252–255 Open - Shutter Open
23	Dimmer	0	
24	Dimmer Fine	0	Fine byte of Dimmer
25	Position MSpeed	0	0–0 Min 1–254 Min > Max 255–255 Max
26	Fixture Global Reset	0	0–25 No Function - Custom 26–76 Zoom Reset - Reset 77–127 P/T Reset - Reset 128–255 All Motor Reset - Reset

37Ch

37 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	30	0–19 Closed - Shutter Closed 20–49 Open - Shutter Open 50–200 Strobe S > F - Strobe 201–210 Open - Shutter Open 211–255 Strobe Random S > F - Strobe Random
2	Dimmer	0	
3	Dimmer Fine	0	Fine byte of Dimmer
4	Red	255	
5	Red Fine	255	Fine byte of Red
6	Green	255	
7	Green Fine	255	Fine byte of Green

37Ch (continued)

Ch	Function	Default	DMX values
8	Blue	255	
9	Blue Fine	255	Fine byte of Blue
10	C TC	0	
11	Tint	0	0–0 Min 1–254 Min > Max 255–255 Max
12	Color Wheel	0	0–10 Open - Color (wheel slot 1) 11–12 Moroccan Pink - Color (wheel slot 2) 13–14 Pink - Color (wheel slot 3) 15–16 Special Rose Pink - Color (wheel slot 4) 17–18 Follies Pink - Color (wheel slot 5) 19–20 Fuchsia Pink - Color (wheel slot 6) 21–22 Surprise Pink - Color (wheel slot 7) 23–24 Congo Blue - Color (wheel slot 8) 25–26 Tokyo Blue - Color (wheel slot 9) 27–28 Deep Blue - Color (wheel slot 10) 29–30 Just Blue - Color (wheel slot 11) 31–32 Medium Blue - Color (wheel slot 12) 33–34 Double CT Blue - Color (wheel slot 13) 35–36 Slate Blue - Color (wheel slot 14) 37–38 Full CT Blue - Color (wheel slot 15) 39–40 Half CT Blue - Color (wheel slot 16) 41–42 Steel Blue - Color (wheel slot 17) 43–44 Lighter Blue - Color (wheel slot 18) 45–46 Light Blue - Color (wheel slot 19) 47–48 Medium Blue Green - Color (wheel slot 20) 49–50 Dark Green - Color (wheel slot 21) 51–52 Primary Green - Color (wheel slot 22) 53–54 Moss Green - Color (wheel slot 23) 55–56 Fern Green - Color (wheel slot 24) 57–58 Jas Green - Color (wheel slot 25) 59–60 Lime Green - Color (wheel slot 26) 61–62 Spring Yellow - Color (wheel slot 27) 63–64 Deep Amber - Color (wheel slot 28) 65–66 Chrome Orange - Color (wheel slot 29) 67–68 Orange - Color (wheel slot 30) 69–70 Gold Amber - Color (wheel slot 31) 71–72 Millennium Gold - Color (wheel slot 32) 73–74 Deep Golden Amber - Color (wheel slot 33) 75–76 Flame Red - Color (wheel slot 34) 77–78 Red Magenta - Color (wheel slot 35) 79–80 Medium Lavender - Color (wheel slot 36) 81–82 Pure White - Color (wheel slot 37) 83–84 Pure Red - Color (wheel slot 38) 85–86 Pure Yellow - Color (wheel slot 39) 87–88 Pure Green - Color (wheel slot 40) 89–90 Pure Cyan - Color (wheel slot 41) 91–92 Pure Blue - Color (wheel slot 42) 93–94 Pure Magenta - Color (wheel slot 43) 95–96 Peacock Blue - Color (wheel slot 44) 97–98 Dark Lavender - Color (wheel slot 45) 99–100 Double CT Orange - Color (wheel slot 46) 101–102 Full CT Orange - Color (wheel slot 47) 103–104 Half CT Orange - Color (wheel slot 48) 105–106 Deep Straw - Color (wheel slot 49) 107–190 No Function - Custom 191–214 F > S - Rotate CW 215–219 Stop - Stop Loop 220–243 S > F - Rotate CCW 244–255 Random F > S - Rotate Random

37Ch (continued)

Ch	Function	Default	DMX values
13	Zoom	127	0–254 Wide 255–255 Narrow
14	Zoom Fine	255	Fine byte of Zoom
15	Pan	85	
16	Pan Fine	85	Fine byte of Pan
17	Tilt	127	
18	Tilt Fine	255	Fine byte of Tilt
19	Control1	0	0–9 Function - Custom 10–14 Reset Fixture - Reset 15–17 No Function - Custom 18–18 Reset P/T - Reset 19–22 No Function - Custom 23–23 Linear Dimmer Curve - Custom 24–24 Square Law Dimmer Curve - Custom 25–25 Inverse Square Law Dimmer Curve - Custom 26–26 S-Curve Dimmer Curve - Custom 27–29 No Function - Custom 30–35 Frost - Full Frost 36–53 No Function - Custom 54–54 Auto Fan Speed - Speed 55–55 Silent Fan Speed - Speed 56–56 High Fan Speed - Speed 57–255 No Function - Custom
20	L EDFrequency	0	0–0 Hybrid LED Dimming Mode - Custom 1–127 Variable -2% - 0% - Custom 128–128 24000Hz - Custom 129–254 Variable 0% - +2% - Custom 255–255 No Function - Custom
21	Function	0	0–0 Min 1–254 Min > Max 255–255 Max
22	Effect	0	0–0 No Function - Custom 1–1 Effect 1 - Macro 2–2 Effect 2 - Macro 3–3 Effect 3 - Macro 4–47 No Function - Custom 48–48 Effect 4 - Macro 49–49 Effect 5 - Macro 50–50 Effect 6 - Macro 51–51 Effect 7 - Macro 52–52 Effect 8 - Macro 53–53 Effect 9 - Macro 54–54 Effect 10 - Macro 55–55 Effect 11 - Macro 56–56 Effect 12 - Macro 57–57 Effect 13 - Macro 58–255 No Function - Custom
23	Effect Speed	0	0–126 F > S - Speed 127–129 Stop - Stop Loop 130–255 S > F - Speed

37Ch (continued)

Ch	Function	Default	DMX values
24	Effect 2	0	0–0 No Function 1–1 Effect 1 2–2 Effect 2 3–3 Effect 3 4–47 No Function 48–48 Effect 4 49–49 Effect 5 50–50 Effect 6 51–51 Effect 7 52–52 Effect 8 53–53 Effect 9 54–54 Effect 10 55–55 Effect 11 56–56 Effect 12 57–57 Effect 13 58–58 Effect 14 59–59 Effect 15 60–60 Effect 16 61–61 Effect 17 62–62 Effect 18 63–63 Effect 19 64–64 Effect 20 65–65 Effect 21 66–66 Effect 22 67–67 Effect 23 68–68 Effect 24 69–69 Effect 25 70–70 Effect 26 71–71 Effect 27 72–72 Effect 28 73–73 Effect 29 74–74 Effect 30 75–75 Effect 31 76–76 Effect 32 77–77 Effect 33 78–78 Effect 34 79–79 Effect 35 80–80 Effect 36 81–81 Effect 37 82–82 Effect 38 83–83 Effect 39 84–84 Effect 40 85–255 No Function
25	Effect Speed 2	0	0–126 F > S - Speed 127–129 Stop - Stop Loop 130–255 S > F - Speed
26	F XSync	0	0–0 Min 1–54 Min > Max 55–255 Max
27	Shutter / Strobe 2	30	0–19 Closed - Shutter Closed 20–49 Open - Shutter Open 50–200 Strobe S > F - Strobe 201–210 Open - Shutter Open 211–255 Strobe Random S > F - Strobe Random
28	Dimmer	0	
29	Dimmer Fine	0	Fine byte of Dimmer
30	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

37Ch (continued)

Ch	Function	Default	DMX values
31	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
32	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
33	C TC	0	
34	Tint	0	0–0 Min 1–254 Min > Max 255–255 Max

37Ch (continued)

Ch	Function	Default	DMX values
35	Color Wheel 2	0	0–10 Open - Color (wheel slot 1) 11–12 Moroccan Pink - Color (wheel slot 2) 13–14 Pink - Color (wheel slot 3) 15–16 Special Rose Pink - Color (wheel slot 4) 17–18 Follies Pink - Color (wheel slot 5) 19–20 Fuchsia Pink - Color (wheel slot 6) 21–22 Surprise Pink - Color (wheel slot 7) 23–24 Congo Blue - Color (wheel slot 8) 25–26 Tokyo Blue - Color (wheel slot 9) 27–28 Deep Blue - Color (wheel slot 10) 29–30 Just Blue - Color (wheel slot 11) 31–32 Medium Blue - Color (wheel slot 12) 33–34 Double CT Blue - Color (wheel slot 13) 35–36 Slate Blue - Color (wheel slot 14) 37–38 Full CT Blue - Color (wheel slot 15) 39–40 Half CT Blue - Color (wheel slot 16) 41–42 Steel Blue - Color (wheel slot 17) 43–44 Lighter Blue - Color (wheel slot 18) 45–46 Light Blue - Color (wheel slot 19) 47–48 Medium Blue Green - Color (wheel slot 20) 49–50 Dark Green - Color (wheel slot 21) 51–52 Primary Green - Color (wheel slot 22) 53–54 Moss Green - Color (wheel slot 23) 55–56 Fern Green - Color (wheel slot 24) 57–58 Jas Green - Color (wheel slot 25) 59–60 Lime Green - Color (wheel slot 26) 61–62 Spring Yellow - Color (wheel slot 27) 63–64 Deep Amber - Color (wheel slot 28) 65–66 Chrome Orange - Color (wheel slot 29) 67–68 Orange - Color (wheel slot 30) 69–70 Gold Amber - Color (wheel slot 31) 71–72 Millennium Gold - Color (wheel slot 32) 73–74 Deep Golden Amber - Color (wheel slot 33) 75–76 Flame Red - Color (wheel slot 34) 77–78 Red Magenta - Color (wheel slot 35) 79–80 Medium Lavender - Color (wheel slot 36) 81–82 Pure White - Color (wheel slot 37) 83–84 Pure Red - Color (wheel slot 38) 85–86 Pure Yellow - Color (wheel slot 39) 87–88 Pure Green - Color (wheel slot 40) 89–90 Pure Cyan - Color (wheel slot 41) 91–92 Pure Blue - Color (wheel slot 42) 93–94 Pure Magenta - Color (wheel slot 43) 95–96 Peacock Blue - Color (wheel slot 44) 97–98 Dark Lavender - Color (wheel slot 45) 99–100 Double CT Orange - Color (wheel slot 46) 101–102 Full CT Orange - Color (wheel slot 47) 103–104 Half CT Orange - Color (wheel slot 48) 105–106 Deep Straw - Color (wheel slot 49) 107–190 No Function - Custom 191–214 F > S - Rotate CW 215–219 Stop - Stop Loop 220–243 S > F - Rotate CCW 244–255 Random F > S - Rotate Random
36	Function	0	0–0 Min 1–254 Min > Max 255–255 Max
37	Frost1	0	0–127 Frost - Frost Open 128–255 Frost - Full Frost

109Ch

109 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	30	0–19 Closed - Shutter Closed 20–49 Open - Shutter Open 50–200 Strobe S > F - Strobe 201–210 Open - Shutter Open 211–255 Strobe Random S > F - Strobe Random
2	Dimmer	0	
3	Dimmer Fine	0	Fine byte of Dimmer
4	Red	255	
5	Red Fine	255	Fine byte of Red
6	Green	255	
7	Green Fine	255	Fine byte of Green
8	Blue	255	
9	Blue Fine	255	Fine byte of Blue
10	C TC	0	
11	Tint	0	

109Ch (continued)

Ch	Function	Default	DMX values
12	Color Wheel	0	0–10 Open - Color (wheel slot 1) 11–12 Moroccan Pink - Color (wheel slot 2) 13–14 Pink - Color (wheel slot 3) 15–16 Special Rose Pink - Color (wheel slot 4) 17–18 Follies Pink - Color (wheel slot 5) 19–20 Fuchsia Pink - Color (wheel slot 6) 21–22 Surprise Pink - Color (wheel slot 7) 23–24 Congo Blue - Color (wheel slot 8) 25–26 Tokyo Blue - Color (wheel slot 9) 27–28 Deep Blue - Color (wheel slot 10) 29–30 Just Blue - Color (wheel slot 11) 31–32 Medium Blue - Color (wheel slot 12) 33–34 Double CT Blue - Color (wheel slot 13) 35–36 Slate Blue - Color (wheel slot 14) 37–38 Full CT Blue - Color (wheel slot 15) 39–40 Half CT Blue - Color (wheel slot 16) 41–42 Steel Blue - Color (wheel slot 17) 43–44 Lighter Blue - Color (wheel slot 18) 45–46 Light Blue - Color (wheel slot 19) 47–48 Medium Blue Green - Color (wheel slot 20) 49–50 Dark Green - Color (wheel slot 21) 51–52 Primary Green - Color (wheel slot 22) 53–54 Moss Green - Color (wheel slot 23) 55–56 Fern Green - Color (wheel slot 24) 57–58 Jas Green - Color (wheel slot 25) 59–60 Lime Green - Color (wheel slot 26) 61–62 Spring Yellow - Color (wheel slot 27) 63–64 Deep Amber - Color (wheel slot 28) 65–66 Chrome Orange - Color (wheel slot 29) 67–68 Orange - Color (wheel slot 30) 69–70 Gold Amber - Color (wheel slot 31) 71–72 Millennium Gold - Color (wheel slot 32) 73–74 Deep Golden Amber - Color (wheel slot 33) 75–76 Flame Red - Color (wheel slot 34) 77–78 Red Magenta - Color (wheel slot 35) 79–80 Medium Lavender - Color (wheel slot 36) 81–82 Pure White - Color (wheel slot 37) 83–84 Pure Red - Color (wheel slot 38) 85–86 Pure Yellow - Color (wheel slot 39) 87–88 Pure Green - Color (wheel slot 40) 89–90 Pure Cyan - Color (wheel slot 41) 91–92 Pure Blue - Color (wheel slot 42) 93–94 Pure Magenta - Color (wheel slot 43) 95–96 Peacock Blue - Color (wheel slot 44) 97–98 Dark Lavender - Color (wheel slot 45) 99–100 Double CT Orange - Color (wheel slot 46) 101–102 Full CT Orange - Color (wheel slot 47) 103–104 Half CT Orange - Color (wheel slot 48) 105–106 Deep Straw - Color (wheel slot 49) 107–190 No Function - Custom 191–214 F > S - Rotate CW 215–219 Stop - Stop Loop 220–243 S > F - Rotate CCW 244–255 Random F > S - Rotate Random
13	Zoom	127	
14	Zoom Fine	255	Fine byte of Zoom
15	Pan	85	
16	Pan Fine	85	Fine byte of Pan
17	Tilt	127	
18	Tilt Fine	255	Fine byte of Tilt

109Ch (continued)

Ch	Function	Default	DMX values
19	Control1	0	
20	L EDFrequency	0	
21	Function	0	
22	Effect	0	0–0 No Function - Custom 1–1 Effect 1 - Macro 2–2 Effect 2 - Macro 3–3 Effect 3 - Macro 4–47 No Function - Custom 48–48 Effect 4 - Macro 49–49 Effect 5 - Macro 50–50 Effect 6 - Macro 51–51 Effect 7 - Macro 52–52 Effect 8 - Macro 53–53 Effect 9 - Macro 54–54 Effect 10 - Macro 55–55 Effect 11 - Macro 56–56 Effect 12 - Macro 57–57 Effect 13 - Macro 58–255 No Function - Custom
23	Effect Speed	0	

109Ch (continued)

Ch	Function	Default	DMX values
24	Effect 2	0	0–0 No Function 1–1 Effect 1 2–2 Effect 2 3–3 Effect 3 4–47 No Function 48–48 Effect 4 49–49 Effect 5 50–50 Effect 6 51–51 Effect 7 52–52 Effect 8 53–53 Effect 9 54–54 Effect 10 55–55 Effect 11 56–56 Effect 12 57–57 Effect 13 58–58 Effect 14 59–59 Effect 15 60–60 Effect 16 61–61 Effect 17 62–62 Effect 18 63–63 Effect 19 64–64 Effect 20 65–65 Effect 21 66–66 Effect 22 67–67 Effect 23 68–68 Effect 24 69–69 Effect 25 70–70 Effect 26 71–71 Effect 27 72–72 Effect 28 73–73 Effect 29 74–74 Effect 30 75–75 Effect 31 76–76 Effect 32 77–77 Effect 33 78–78 Effect 34 79–79 Effect 35 80–80 Effect 36 81–81 Effect 37 82–82 Effect 38 83–83 Effect 39 84–84 Effect 40 85–255 No Function
25	Effect Speed 2	0	
26	F XSync	0	
27	Shutter / Strobe 2	30	0–19 Closed - Shutter Closed 20–49 Open - Shutter Open 50–200 Strobe S > F - Strobe 201–210 Open - Shutter Open 211–255 Strobe Random S > F - Strobe Random
28	Dimmer	0	
29	Dimmer Fine	0	Fine byte of Dimmer
30	Red	0	
31	Green	0	
32	Blue	0	
33	C TC	0	
34	Tint	0	

109Ch (continued)

Ch	Function	Default	DMX values
35	Color Wheel 2	0	0–10 Open - Color (wheel slot 1) 11–12 Moroccan Pink - Color (wheel slot 2) 13–14 Pink - Color (wheel slot 3) 15–16 Special Rose Pink - Color (wheel slot 4) 17–18 Follies Pink - Color (wheel slot 5) 19–20 Fuchsia Pink - Color (wheel slot 6) 21–22 Surprise Pink - Color (wheel slot 7) 23–24 Congo Blue - Color (wheel slot 8) 25–26 Tokyo Blue - Color (wheel slot 9) 27–28 Deep Blue - Color (wheel slot 10) 29–30 Just Blue - Color (wheel slot 11) 31–32 Medium Blue - Color (wheel slot 12) 33–34 Double CT Blue - Color (wheel slot 13) 35–36 Slate Blue - Color (wheel slot 14) 37–38 Full CT Blue - Color (wheel slot 15) 39–40 Half CT Blue - Color (wheel slot 16) 41–42 Steel Blue - Color (wheel slot 17) 43–44 Lighter Blue - Color (wheel slot 18) 45–46 Light Blue - Color (wheel slot 19) 47–48 Medium Blue Green - Color (wheel slot 20) 49–50 Dark Green - Color (wheel slot 21) 51–52 Primary Green - Color (wheel slot 22) 53–54 Moss Green - Color (wheel slot 23) 55–56 Fern Green - Color (wheel slot 24) 57–58 Jas Green - Color (wheel slot 25) 59–60 Lime Green - Color (wheel slot 26) 61–62 Spring Yellow - Color (wheel slot 27) 63–64 Deep Amber - Color (wheel slot 28) 65–66 Chrome Orange - Color (wheel slot 29) 67–68 Orange - Color (wheel slot 30) 69–70 Gold Amber - Color (wheel slot 31) 71–72 Millennium Gold - Color (wheel slot 32) 73–74 Deep Golden Amber - Color (wheel slot 33) 75–76 Flame Red - Color (wheel slot 34) 77–78 Red Magenta - Color (wheel slot 35) 79–80 Medium Lavender - Color (wheel slot 36) 81–82 Pure White - Color (wheel slot 37) 83–84 Pure Red - Color (wheel slot 38) 85–86 Pure Yellow - Color (wheel slot 39) 87–88 Pure Green - Color (wheel slot 40) 89–90 Pure Cyan - Color (wheel slot 41) 91–92 Pure Blue - Color (wheel slot 42) 93–94 Pure Magenta - Color (wheel slot 43) 95–96 Peacock Blue - Color (wheel slot 44) 97–98 Dark Lavender - Color (wheel slot 45) 99–100 Double CT Orange - Color (wheel slot 46) 101–102 Full CT Orange - Color (wheel slot 47) 103–104 Half CT Orange - Color (wheel slot 48) 105–106 Deep Straw - Color (wheel slot 49) 107–190 No Function - Custom 191–214 F > S - Rotate CW 215–219 Stop - Stop Loop 220–243 S > F - Rotate CCW 244–255 Random F > S - Rotate Random
36	Function	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	

109Ch (continued)

Ch	Function	Default	DMX values
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	

109Ch (continued)

Ch	Function	Default	DMX values
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Frost1	0	