
Leding

# Vektor L

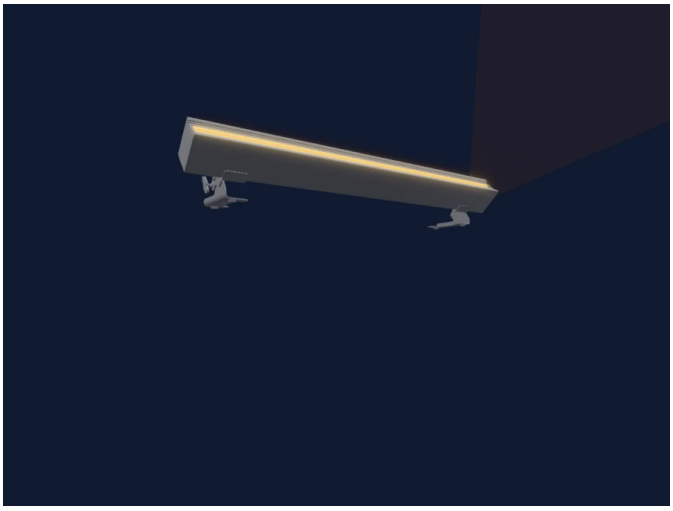

| | |
|---|---|
| Manufacturer | **Leding** |
| Type | **Effect light** |
| DMX modes | **10** |
| DMX footprint | **3, 4, 8, 12, 16, 17, 25, 32, 64, 73 channels** |
| Beam angle | **60°** |
| Heads / cells | **17** |
| Size (W × H × D) | **1000 × 173 × 157 mm** |
| GDTF fixture type | **5ADC699D-AD9B-F74C-340B-5…** |

## Controls

Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Effect speed · Strobe · Dimmer · Pixel control

## Safety-relevant functions

Service functions · Built-in effect programmes

## DMX modes

| | |
|---|---|
| 3 CH | 3 ch |
| 4 CH | 4 ch |
| 8 CH | 8 ch |
| 12 CH | 12 ch |
| 16 CH | 16 ch |
| 17 CH | 17 ch |
| 25 CH | 25 ch |
| 32 CH | 32 ch |
| 64 CH | 64 ch |
| 73 CH | 73 ch |

## 3 CH

3 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Dimmer | 0 | 0–254 closed<br>255–255 open |
| 2 | Color Macro | 0 | 0–4 No Function<br>5–9 Color 1<br>10–14 Color 2<br>15–19 Color 3<br>20–24 Color 4<br>25–29 Color 5<br>30–34 Color 6<br>35–39 Color 7<br>40–44 Color 8<br>45–49 Color 9<br>50–54 Color 10<br>55–59 Color 11<br>60–64 Color 12<br>65–69 Color 13<br>70–74 Color 14<br>75–79 Color 15<br>80–84 Color 16<br>85–89 Color 17<br>90–94 Color 18<br>95–99 Color 19<br>100–104 Color 20<br>105–109 Color 21<br>110–114 Color 22<br>115–119 Color 23<br>120–124 Color 24<br>125–129 Color 25<br>130–134 Color 26<br>135–139 Color 27<br>140–144 Color 28<br>145–149 Color 29<br>150–154 Color 30<br>155–159 Color 31<br>160–164 Color 32<br>165–169 Color 33<br>170–174 Color 34<br>175–179 Color 35<br>180–184 Color 36<br>185–189 Color 37<br>190–194 Color 38<br>195–199 Color 39<br>200–204 Color 40<br>205–209 Color 41<br>210–214 Color 42<br>215–219 Color 43<br>220–224 Color 44<br>225–229 Color 45<br>230–234 Color 46<br>235–239 Color 47<br>240–244 Color 48<br>245–249 Color 49<br>250–254 Color 50<br>255–255 Color 51 |

### 3 CH (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 3 | C TO | 0 | 0–7 No Function<br>8–29 2700K<br>30–51 3200K<br>52–73 3500K<br>74–95 4000K<br>96–117 4500K<br>118–139 5000K<br>140–161 5600K<br>162–183 6000K<br>184–205 6500K<br>206–227 7000K<br>228–249 7500K<br>250–255 8000K |

## 4 CH

4 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Red | 255 | |
| 2 | Green | 255 | |
| 3 | Blue | 255 | |
| 4 | Color Add GY | 255 | |

## 8 CH

8 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Red | 255 | |
| 2 | Red Fine | 255 | Fine byte of Red |
| 3 | Green | 255 | |
| 4 | Green Fine | 255 | Fine byte of Green |
| 5 | Blue | 255 | |
| 6 | Blue Fine | 255 | Fine byte of Blue |
| 7 | Color Add GY | 255 | |
| 8 | Color Add GY Fine | 255 | Fine byte of Color Add GY |

## 12 CH

12 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Dimmer | 0 | 0–254 closed<br>255–255 open |
| 2 | Dimmer Fine | 0 | Fine byte of Dimmer |

## 12 CH (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| **3** | Shutter / Strobe | 24 | 0–24 open<br>25–64 Strobe<br>65–69 open<br>70–84 Pulse Open<br>85–89 open#2<br>90–104 Pulse Close<br>105–109 open#3<br>110–124 Random<br>125–129 open#4<br>130–144 Randon Open Pulse<br>145–149 open#5<br>150–164 Random Close Pulse<br>165–169 open#6<br>170–184 Burst Pulse<br>185–189 open#7<br>190–204 Random Burst Pulse<br>205–209 open#8<br>210–224 Strobe · Sine Wave 24.1–26 Hz<br>225–229 open#9<br>230–244 Strobe · Burst 26.7–28.6 Hz<br>245–255 open#10 |
| **4** | Red | 255 | |
| **5** | Green | 255 | |
| **6** | Blue | 255 | |
| **7** | Color Add GY | 255 | |
| **8** | Dimmer Curve | 0 | 0–49 No Function<br>50–99 Dimmer Speed 1<br>100–149 Dimmer Speed 2<br>150–199 Dimmer Speed 3<br>200–255 Dimmer Speed 4 |
| **9** | Dimmer Speed | 0 | 0–49 No Function<br>50–99 Dimmer Speed 1<br>100–149 Dimmer Speed 2<br>150–199 Dimmer Speed 3<br>200–255 Dimmer Speed 4 |

### 12 CH (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| **10** | A UTOPROGRAM | 0 | 0–5 No Function<br>6–13 Auto 1<br>14–21 Auto 2<br>22–29 Auto 3<br>30–37 Auto 4<br>38–45 Auto 5<br>46–53 Auto 6<br>54–61 Auto 7<br>62–69 Auto 8<br>70–77 Auto 9<br>78–85 Auto 10<br>86–93 Auto 11<br>94–101 Auto 12<br>102–109 Auto 13<br>110–117 Auto 14<br>118–125 Auto 15<br>126–133 Auto 16<br>134–141 Auto 17<br>142–149 Auto 18<br>150–157 Auto 19<br>158–165 Auto 20<br>166–173 Auto 21<br>174–181 Auto 22<br>182–189 Auto 23<br>190–197 Auto 24<br>198–205 Auto 25<br>206–213 Auto 26<br>214–221 Auto 27<br>222–229 Auto 28<br>230–237 Auto 29<br>238–245 Auto 30<br>246–255 Auto 31 |
| **11** | A UTOSPEED | 0 | |
| **12** | A UTOFADE | 0 | |

## 16 CH

16 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| **1** | Red | 255 | |
| **2** | Green | 255 | |
| **3** | Blue | 255 | |
| **4** | Color Add GY | 255 | |
| **5** | Red | 255 | |
| **6** | Green | 255 | |
| **7** | Blue | 255 | |
| **8** | Color Add GY | 255 | |
| **9** | Red | 255 | |
| **10** | Green | 255 | |
| **11** | Blue | 255 | |
| **12** | Color Add GY | 255 | |
| **13** | Red | 255 | |
| **14** | Green | 255 | |
| **15** | Blue | 255 | |
| **16** | Color Add GY | 255 | |

## 17 CH

17 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Dimmer | 0 | 0–254 closed<br>255–255 open |
| 2 | Dimmer Fine | 0 | Fine byte of Dimmer |
| 3 | Control1 | 0 | 0–44 No Function<br>45–49 Pixel On<br>50–54 Pixel Off<br>55–59 Dimmer Linear<br>60–64 Dimmer Sqr Law<br>65–69 Dimmer Inv Sqr Law<br>70–89 Dimmer S-Curve<br>90–94 Calibrated Color<br>95–114 RAW Color<br>115–119 1 KHz<br>120–124 2 KHz<br>125–129 3 KHz<br>130–134 4 KHz<br>135–139 5 KHz<br>140–144 6 KHz<br>145–149 7 KHz<br>150–154 8 KHz<br>155–159 9 KHz<br>160–164 10 KHz<br>165–169 11 KHz<br>170–174 12 KHz<br>175–179 13 KHz<br>180–184 14 KHz<br>185–189 15 KHz<br>190–194 16 KHz<br>195–199 17 KHz<br>200–249 18 KHz<br>250–255 Display On |
| 4 | Shutter / Strobe | 0 | 0–24 open<br>25–64 Strobe<br>65–69 open<br>70–84 Pulse Open<br>85–89 open#2<br>90–104 Pulse Close<br>105–109 open#3<br>110–124 Random<br>125–129 open#4<br>130–144 Randon Open<br>145–149 open#5<br>150–164 Random Close<br>165–169 open#6<br>170–184 Burst Pulse<br>185–189 open#7<br>190–204 Random Burst Pulse<br>205–209 open#8<br>210–224 Shutter1Strobe 2 · Burst<br>225–255 open#9 |
| 5 | Red | 255 | |
| 6 | Red Fine | 255 | Fine byte of Red |
| 7 | Green | 255 | |
| 8 | Green Fine | 255 | Fine byte of Green |
| 9 | Blue | 255 | |
| 10 | Blue Fine | 255 | Fine byte of Blue |
| 11 | Color Add GY | 255 | |
| 12 | Color Add GY Fine | 255 | Fine byte of Color Add GY |

## 17 CH (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| **13** | Color Macro | 0 | 0–12 No Function<br>13–16 Color 1<br>17–20 Color 2<br>21–24 Color 3<br>25–28 Color 4<br>29–32 Color 5<br>33–36 Color 6<br>37–40 Color 7<br>41–44 Color 8<br>45–48 Color 9<br>49–52 Color 10<br>53–56 Color 11<br>57–60 Color 12<br>61–64 Color 13<br>65–68 Color 14<br>69–72 Color 15<br>73–76 Color 16<br>77–80 Color 17<br>81–84 Color 18<br>85–88 Color 19<br>89–92 Color 20<br>93–96 Color 21<br>97–100 Color 22<br>101–104 Color 23<br>105–108 Color 24<br>109–112 Color 25<br>113–116 Color 26<br>117–120 Color 27<br>121–124 Color 28<br>125–128 Color 29<br>129–132 Color 30<br>133–136 Color 31<br>137–140 Color 32<br>141–144 Color 33<br>145–148 Color 34<br>149–152 Color 35<br>153–156 Color 36<br>157–160 Color 37<br>161–164 Color 38<br>165–168 Color 39<br>169–172 Color 40<br>173–176 Color 41<br>177–180 Color 42<br>181–184 Color 43<br>185–188 Color 44<br>189–192 Color 45<br>193–196 Color 46<br>197–200 Color 47<br>201–204 Color 48<br>205–208 Color 49<br>209–212 Color 50<br>213–215 Color 51<br>216–218 2700K<br>219–221 3200K<br>222–224 3500K<br>225–227 4000K<br>228–230 4500K<br>231–233 5000K<br>234–236 5600K<br>237–239 6000K<br>240–242 6500K<br>243–245 7000K<br>246–248 7500K<br>249–255 8000K |

### 17 CH (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| **14** | Dimmer Speed | 0 | 0–49 No Function<br>50–99 Dimmer Speed 1<br>100–149 Dimmer Speed 2<br>150–199 Dimmer Speed 3<br>200–255 Dimmer Speed 4 |
| **15** | Effect | 0 | 0–5 No Function<br>6–13 Effect 1<br>14–21 Effect 2<br>22–29 Effect 3<br>30–37 Effect 4<br>38–45 Effect 5<br>46–53 Effect 6<br>54–61 Effect 7<br>62–69 Effect 8<br>70–77 Effect 9<br>78–85 Effect 10<br>86–93 Effect 11<br>94–101 Effect 12<br>102–109 Effect 13<br>110–117 Effect 14<br>118–125 Effect 15<br>126–133 Effect 16<br>134–141 Effect 17<br>142–149 Effect 18<br>150–157 Effect 19<br>158–165 Effect 20<br>166–173 Effect 21<br>174–181 Effect 22<br>182–189 Effect 23<br>190–197 Effect 24<br>198–205 Effect 25<br>206–213 Effect 26<br>214–221 Effect 27<br>222–229 Effect 28<br>230–237 Effect 29<br>238–245 Effect 30<br>246–255 Effect 31 |
| **16** | Effect Speed | 128 | |
| **17** | Effects1Fade | 0 | |

## 25 CH

25 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| **1** | Dimmer | 0 | 0–254 closed<br>255–255 open |

## 25 CH (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| **2** | Control1 | 0 | 0–44 No Function<br>45–49 Pixel On<br>50–54 Pixel Off<br>55–59 Dimmer Linear<br>60–64 Dimmer Sqr Law<br>65–69 Dimmer Inv Sqr Law<br>70–89 Dimmer S-Curve<br>90–94 Calibrated Color<br>95–114 RAW Color<br>115–119 1 KHz<br>120–124 2 KHz<br>125–129 3 KHz<br>130–134 4 KHz<br>135–139 5 KHz<br>140–144 6 KHz<br>145–149 7 KHz<br>150–154 8 KHz<br>155–159 9 KHz<br>160–164 10 KHz<br>165–169 11 KHz<br>170–174 12 KHz<br>175–179 13 KHz<br>180–184 14 KHz<br>185–189 15 KHz<br>190–194 16 KHz<br>195–199 17 KHz<br>200–249 18 KHz<br>250–255 Display On |
| **3** | Shutter / Strobe | 0 | 0–24 open<br>25–64 Strobe<br>65–69 open<br>70–84 Pulse Open<br>85–89 open#2<br>90–104 Pulse Close<br>105–109 open#3<br>110–124 Random<br>125–129 open#4<br>130–144 Randon Open<br>145–149 open#5<br>150–164 Random Close<br>165–169 open#6<br>170–184 Burst Pulse<br>185–189 open#7<br>190–204 Random Burst Pulse<br>205–209 open#8<br>210–224 Shutter1Strobe 2 · Burst<br>225–255 open#9 |
| **4** | Red | 255 | |
| **5** | Green | 255 | |
| **6** | Blue | 255 | |
| **7** | Color Add GY | 255 | |

## 25 CH (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| **8** | Color Macro | 0 | 0–12 No Function<br>13–16 Color 1<br>17–20 Color 2<br>21–24 Color 3<br>25–28 Color 4<br>29–32 Color 5<br>33–36 Color 6<br>37–40 Color 7<br>41–44 Color 8<br>45–48 Color 9<br>49–52 Color 10<br>53–56 Color 11<br>57–60 Color 12<br>61–64 Color 13<br>65–68 Color 14<br>69–72 Color 15<br>73–76 Color 16<br>77–80 Color 17<br>81–84 Color 18<br>85–88 Color 19<br>89–92 Color 20<br>93–96 Color 21<br>97–100 Color 22<br>101–104 Color 23<br>105–108 Color 24<br>109–112 Color 25<br>113–116 Color 26<br>117–120 Color 27<br>121–124 Color 28<br>125–128 Color 29<br>129–132 Color 30<br>133–136 Color 31<br>137–140 Color 32<br>141–144 Color 33<br>145–148 Color 34<br>149–152 Color 35<br>153–156 Color 36<br>157–160 Color 37<br>161–164 Color 38<br>165–168 Color 39<br>169–172 Color 40<br>173–176 Color 41<br>177–180 Color 42<br>181–184 Color 43<br>185–188 Color 44<br>189–192 Color 45<br>193–196 Color 46<br>197–200 Color 47<br>201–204 Color 48<br>205–208 Color 49<br>209–212 Color 50<br>213–215 Color 51<br>216–218 2700K<br>219–221 3200K<br>222–224 3500K<br>225–227 4000K<br>228–230 4500K<br>231–233 5000K<br>234–236 5600K<br>237–239 6000K<br>240–242 6500K<br>243–245 7000K<br>246–248 7500K<br>249–255 8000K |

### 25 CH (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 9 | Dimmer Speed | 0 | 0–49 No Function<br>50–99 Dimmer Speed 1<br>100–149 Dimmer Speed 2<br>150–199 Dimmer Speed 3<br>200–255 Dimmer Speed 4 |
| 10 | Dimmer | 255 | 0–254 closed<br>255–255 open |
| 11 | Dimmer | 255 | 0–254 closed<br>255–255 open |
| 12 | Dimmer | 255 | 0–254 closed<br>255–255 open |
| 13 | Dimmer | 255 | 0–254 closed<br>255–255 open |
| 14 | Dimmer | 255 | 0–254 closed<br>255–255 open |
| 15 | Dimmer | 255 | 0–254 closed<br>255–255 open |
| 16 | Dimmer | 255 | 0–254 closed<br>255–255 open |
| 17 | Dimmer | 255 | 0–254 closed<br>255–255 open |
| 18 | Dimmer | 255 | 0–254 closed<br>255–255 open |
| 19 | Dimmer | 255 | 0–254 closed<br>255–255 open |
| 20 | Dimmer | 255 | 0–254 closed<br>255–255 open |
| 21 | Dimmer | 255 | 0–254 closed<br>255–255 open |
| 22 | Dimmer | 255 | 0–254 closed<br>255–255 open |
| 23 | Dimmer | 255 | 0–254 closed<br>255–255 open |
| 24 | Dimmer | 255 | 0–254 closed<br>255–255 open |
| 25 | Dimmer | 255 | 0–254 closed<br>255–255 open |

## 32 CH

32 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Red | 255 | |
| 2 | Green | 255 | |
| 3 | Blue | 255 | |
| 4 | Color Add GY | 255 | |
| 5 | Red | 255 | |
| 6 | Green | 255 | |
| 7 | Blue | 255 | |
| 8 | Color Add GY | 255 | |
| 9 | Red | 255 | |
| 10 | Green | 255 | |

### 32 CH (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 11 | Blue | 255 | |
| 12 | Color Add GY | 255 | |
| 13 | Red | 255 | |
| 14 | Green | 255 | |
| 15 | Blue | 255 | |
| 16 | Color Add GY | 255 | |
| 17 | Red | 255 | |
| 18 | Green | 255 | |
| 19 | Blue | 255 | |
| 20 | Color Add GY | 255 | |
| 21 | Red | 255 | |
| 22 | Green | 255 | |
| 23 | Blue | 255 | |
| 24 | Color Add GY | 255 | |
| 25 | Red | 255 | |
| 26 | Green | 255 | |
| 27 | Blue | 255 | |
| 28 | Color Add GY | 255 | |
| 29 | Red | 255 | |
| 30 | Green | 255 | |
| 31 | Blue | 255 | |
| 32 | Color Add GY | 255 | |

## 64 CH

64 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Red | 255 | |
| 2 | Green | 255 | |
| 3 | Blue | 255 | |
| 4 | Color Add GY | 255 | |
| 5 | Red | 255 | |
| 6 | Green | 255 | |
| 7 | Blue | 255 | |
| 8 | Color Add GY | 255 | |
| 9 | Red | 255 | |
| 10 | Green | 255 | |
| 11 | Blue | 255 | |
| 12 | Color Add GY | 255 | |
| 13 | Red | 255 | |
| 14 | Green | 255 | |
| 15 | Blue | 255 | |
| 16 | Color Add GY | 255 | |
| 17 | Red | 255 | |
| 18 | Green | 255 | |
| 19 | Blue | 255 | |

## 64 CH (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| **20** | Color Add GY | 255 | |
| **21** | Red | 255 | |
| **22** | Green | 255 | |
| **23** | Blue | 255 | |
| **24** | Color Add GY | 255 | |
| **25** | Red | 255 | |
| **26** | Green | 255 | |
| **27** | Blue | 255 | |
| **28** | Color Add GY | 255 | |
| **29** | Red | 255 | |
| **30** | Green | 255 | |
| **31** | Blue | 255 | |
| **32** | Color Add GY | 255 | |
| **33** | Red | 255 | |
| **34** | Green | 255 | |
| **35** | Blue | 255 | |
| **36** | Color Add GY | 255 | |
| **37** | Red | 255 | |
| **38** | Green | 255 | |
| **39** | Blue | 255 | |
| **40** | Color Add GY | 255 | |
| **41** | Red | 255 | |
| **42** | Green | 255 | |
| **43** | Blue | 255 | |
| **44** | Color Add GY | 255 | |
| **45** | Red | 255 | |
| **46** | Green | 255 | |
| **47** | Blue | 255 | |
| **48** | Color Add GY | 255 | |
| **49** | Red | 255 | |
| **50** | Green | 255 | |
| **51** | Blue | 255 | |
| **52** | Color Add GY | 255 | |
| **53** | Red | 255 | |
| **54** | Green | 255 | |
| **55** | Blue | 255 | |
| **56** | Color Add GY | 255 | |
| **57** | Red | 255 | |
| **58** | Green | 255 | |
| **59** | Blue | 255 | |
| **60** | Color Add GY | 255 | |
| **61** | Red | 255 | |
| **62** | Green | 255 | |
| **63** | Blue | 255 | |
| **64** | Color Add GY | 255 | |

## 73 CH

73 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Dimmer | 0 | |
| 2 | Dimmer Fine | 0 | Fine byte of Dimmer |
| 3 | Control1 | 0 | |
| 4 | Shutter / Strobe | 0 | 0–24 open<br>25–64 Strobe<br>65–69 open<br>70–84 Pulse Open<br>85–89 open#2<br>90–104 Pulse Close<br>105–109 open#3<br>110–124 Random<br>125–129 open#4<br>130–144 Randon Open<br>145–149 open#5<br>150–164 Random Close<br>165–169 open#6<br>170–184 Burst Pulse<br>185–189 open#7<br>190–204 Random Burst Pulse<br>205–209 open#8<br>210–224 Shutter1Strobe 2 · Burst<br>225–255 open#9 |
| 5 | Red | 255 | |
| 6 | Green | 255 | |
| 7 | Blue | 255 | |
| 8 | Color Add GY | 255 | |
| 9 | Red | 255 | |
| 10 | Green | 255 | |
| 11 | Blue | 255 | |
| 12 | Color Add GY | 255 | |
| 13 | Red | 255 | |
| 14 | Green | 255 | |
| 15 | Blue | 255 | |
| 16 | Color Add GY | 255 | |
| 17 | Red | 255 | |
| 18 | Green | 255 | |
| 19 | Blue | 255 | |
| 20 | Color Add GY | 255 | |
| 21 | Red | 255 | |
| 22 | Green | 255 | |
| 23 | Blue | 255 | |
| 24 | Color Add GY | 255 | |
| 25 | Red | 255 | |
| 26 | Green | 255 | |
| 27 | Blue | 255 | |
| 28 | Color Add GY | 255 | |
| 29 | Red | 255 | |
| 30 | Green | 255 | |
| 31 | Blue | 255 | |
| 32 | Color Add GY | 255 | |

## 73 CH (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| **33** | Red | 255 | |
| **34** | Green | 255 | |
| **35** | Blue | 255 | |
| **36** | Color Add GY | 255 | |
| **37** | Red | 255 | |
| **38** | Green | 255 | |
| **39** | Blue | 255 | |
| **40** | Color Add GY | 255 | |
| **41** | Red | 255 | |
| **42** | Green | 255 | |
| **43** | Blue | 255 | |
| **44** | Color Add GY | 255 | |
| **45** | Red | 255 | |
| **46** | Green | 255 | |
| **47** | Blue | 255 | |
| **48** | Color Add GY | 255 | |
| **49** | Red | 255 | |
| **50** | Green | 255 | |
| **51** | Blue | 255 | |
| **52** | Color Add GY | 255 | |
| **53** | Red | 255 | |
| **54** | Green | 255 | |
| **55** | Blue | 255 | |
| **56** | Color Add GY | 255 | |
| **57** | Red | 255 | |
| **58** | Green | 255 | |
| **59** | Blue | 255 | |
| **60** | Color Add GY | 255 | |
| **61** | Red | 255 | |
| **62** | Green | 255 | |
| **63** | Blue | 255 | |
| **64** | Color Add GY | 255 | |
| **65** | Red | 255 | |
| **66** | Green | 255 | |
| **67** | Blue | 255 | |
| **68** | Color Add GY | 255 | |
| **69** | Dimmer Speed | 0 | |

## 73 CH (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| **70** | Color Macro | 0 | 0–4 No Function<br>5–9 Color 1<br>10–14 Color 2<br>15–19 Color 3<br>20–24 Color 4<br>25–29 Color 5<br>30–34 Color 6<br>35–39 Color 7<br>40–44 Color 8<br>45–49 Color 9<br>50–54 Color 10<br>55–59 Color 11<br>60–64 Color 12<br>65–69 Color 13<br>70–74 Color 14<br>75–79 Color 15<br>80–84 Color 16<br>85–89 Color 17<br>90–94 Color 18<br>95–99 Color 19<br>100–104 Color 20<br>105–109 Color 21<br>110–114 Color 22<br>115–119 Color 23<br>120–124 Color 24<br>125–129 Color 25<br>130–134 Color 26<br>135–139 Color 27<br>140–144 Color 28<br>145–149 Color 29<br>150–154 Color 30<br>155–159 Color 31<br>160–164 Color 32<br>165–169 Color 33<br>170–174 Color 34<br>175–179 Color 35<br>180–184 Color 36<br>185–189 Color 37<br>190–194 Color 38<br>195–199 Color 39<br>200–204 Color 40<br>205–209 Color 41<br>210–214 Color 42<br>215–219 Color 43<br>220–224 Color 44<br>225–229 Color 45<br>230–234 Color 46<br>235–239 Color 47<br>240–244 Color 48<br>245–249 Color 49<br>250–254 Color 50<br>255–255 Color 51 |

## 73 CH (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| **71** | Effect | 0 | 0–5 No Function<br>6–13 Effect 1<br>14–21 Effect 2<br>22–29 Effect 3<br>30–37 Effect 4<br>38–45 Effect 5<br>46–53 Effect 6<br>54–61 Effect 7<br>62–69 Effect 8<br>70–77 Effect 9<br>78–85 Effect 10<br>86–93 Effect 11<br>94–101 Effect 12<br>102–109 Effect 13<br>110–117 Effect 14<br>118–125 Effect 15<br>126–133 Effect 16<br>134–141 Effect 17<br>142–149 Effect 18<br>150–157 Effect 19<br>158–165 Effect 20<br>166–173 Effect 21<br>174–181 Effect 22<br>182–189 Effect 23<br>190–197 Effect 24<br>198–205 Effect 25<br>206–213 Effect 26<br>214–221 Effect 27<br>222–229 Effect 28<br>230–237 Effect 29<br>238–245 Effect 30<br>246–255 Effect 31 |
| **72** | Effect Speed | 128 | |
| **73** | Effects1Fade | 0 | |