
LIGHT SKY

Sirena

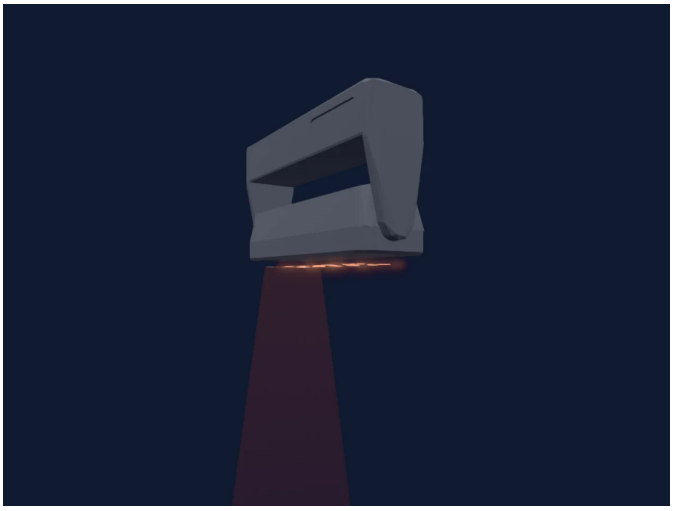

Manufacturer	**LIGHT SKY**
Type	**Effect light**
DMX modes	**10**
DMX footprint	**1, 3, 4, 5, 7, 9, 16, 20, 24 channels**
Beam angle	**18°**
Heads / cells	**5**
Size (W × H × D)	**540 × 290 × 144 mm**
GDTF fixture type	**E39CA47A-6E2E-40DF-9536-DA…**

Controls

Extra LED colours · RGB colour mixing · Colour temperature · Strobe · Dimmer · Pixel control

Safety-relevant functions

Built-in effect programmes

DMX modes

1CH	1 ch
3CH	3 ch
4CH1	4 ch
4CH2	4 ch
5CH	5 ch
7CH	7 ch
9CH	9 ch
16CH	16 ch
20CH	20 ch
24CH	24 ch

1CH

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open

3CH

3 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	

4CH1

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	

4CH2

4 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	Color Add GY	0	

5CH

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	Color Add GY	255	

7CH

7 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–9 Open 10–255 Strobe
2	Dimmer	0	0–254 Closed 255–255 Open
3	Red	255	
4	Green	255	
5	Blue	255	
6	Color Add GY	255	

7CH (continued)

Ch	Function	Default	DMX values
7	Effect	0	0–9 No Function 10–30 Macro 1 31–50 Macro 2 51–70 Macro 3 71–90 Macro 4 91–110 Macro 5 111–130 Macro 6 131–150 Macro 7 151–170 Macro 8 171–200 Macro 9 201–210 2200K 211–220 3200K 221–230 4000K 231–240 5600K 241–250 6800K 251–255 7500K

9CH

9 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–9 Open 10–255 Strobe
2	Dimmer	0	0–254 Closed 255–255 Open
3	Red	255	
4	Green	255	
5	Blue	255	
6	Color Add GY	255	
7	C TO	0	0–2 No Function 3–49 2200K 50–99 3200K 100–149 4000K 150–199 5600K 200–249 6800K 250–254 7500K 255–255 8500K
8	Effect	0	0–4 No Function 5–28 Macro 1 29–55 Macro 2 56–76 Macro 3 77–100 Macro 4 101–124 Macro 5 125–148 Macro 6 149–172 Macro 7 173–196 Macro 8 197–220 Macro 9 221–244 Macro 10 245–250 Macro 11 251–255 Macro 12
9	Effects1Fade	0	

16CH

16 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	

16CH (continued)

Ch	Function	Default	DMX values
3	Blue	0	
4	Color Add GY	0	
5	Red	0	
6	Green	0	
7	Blue	0	
8	Color Add GY	0	
9	Red	0	
10	Green	0	
11	Blue	0	
12	Color Add GY	0	
13	Red	0	
14	Green	0	
15	Blue	0	
16	Color Add GY	0	

20CH

20 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–9 Open 10–255 Strobe
2	Dimmer	0	0–254 Closed 255–255 Open
3	Effect	0	0–4 No Function 5–28 Macro 1 29–55 Macro 2 56–76 Macro 3 77–100 Macro 4 101–124 Macro 5 125–148 Macro 6 149–172 Macro 7 173–196 Macro 8 197–220 Macro 9 221–244 Macro 10 245–250 Macro 11 251–255 Macro 12
4	Effects1Fade	0	
5	Red	255	
6	Green	255	
7	Blue	255	
8	Color Add GY	255	
9	Red	255	
10	Green	255	
11	Blue	255	
12	Color Add GY	255	
13	Red	255	
14	Green	255	
15	Blue	255	
16	Color Add GY	255	
17	Red	255	

20CH (continued)

Ch	Function	Default	DMX values
18	Green	255	
19	Blue	255	
20	Color Add GY	255	

24CH

24 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	0	0–9 Open 10–255 Strobe
2	Dimmer	0	0–254 Closed 255–255 Open
3	Red	255	
4	Green	255	
5	Blue	255	
6	Color Add GY	255	
7	Effect	0	0–4 No Function 5–28 Macro 1 29–55 Macro 2 56–76 Macro 3 77–100 Macro 4 101–124 Macro 5 125–148 Macro 6 149–172 Macro 7 173–196 Macro 8 197–220 Macro 9 221–244 Macro 10 245–250 Macro 11 251–255 Macro 12
8	Effects1Fade	0	
9	Red	0	
10	Green	0	
11	Blue	0	
12	Color Add GY	0	
13	Red	0	
14	Green	0	
15	Blue	0	
16	Color Add GY	0	
17	Red	0	
18	Green	0	
19	Blue	0	
20	Color Add GY	0	
21	Red	0	
22	Green	0	
23	Blue	0	
24	Color Add GY	0	