
Lightmaxx

EASY WASH TRI

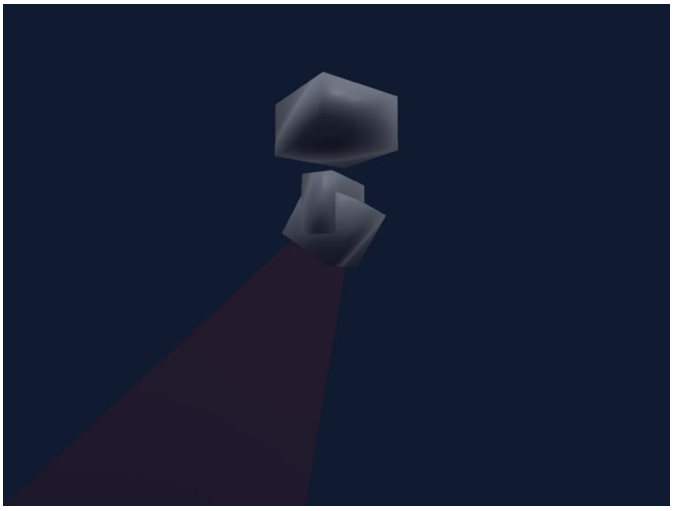

Manufacturer	**Lightmaxx**
Type	**Moving head**
DMX modes	**2**
DMX footprint	**4, 12 channels**
Beam angle	**40°**
Pan range	**540°**
Tilt range	**180°**
Size (W × H × D)	**115 × 115 × 115 mm**
GDTF fixture type	**9082837E-B4EE-4E20-A5CC-5C…**

Controls

RGB colour mixing · Colour wheel · Dimmer · Movement speed

Safety-relevant functions

Fixture reset · Built-in effect programmes

DMX modes

4 Channel	4 ch
12 Channel	12 ch

4 Channel

4 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Tilt	128	
3	Dimmer	7	0–7 Closed 8–8 Open 9–134 Dimmer 135–238 Slow 239–239 Fast 240–255 Open
4	Color Wheel	8	0–7 Off (wheel slot 1) 8–20 White (RGB) (wheel slot 2) 21–34 Red (wheel slot 3) 35–48 Green (wheel slot 4) 49–62 Blue (wheel slot 5) 63–76 Light Blue (wheel slot 6) 77–90 Pink (wheel slot 7) 91–104 Yellow (wheel slot 8) 105–118 Orange (wheel slot 9) 119–132 Purple (wheel slot 10) 133–146 Warm White (wheel slot 11) 147–160 Cold White (wheel slot 12) 161–174 Dark Green (wheel slot 13) 175–188 Green Yellow (wheel slot 14) 189–202 Light Green (wheel slot 15) 203–216 White (wheel slot 16) 217–231 Clear White (wheel slot 17) 232–242 Color Snap 243–255 Color Fade

12 Channel

12 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt
5	Position MSpeed	0	0–254 Fast 255–255 Slow
6	Dimmer	7	0–7 Closed 8–8 Open 9–134 Dimmer 135–238 Slow 239–239 Fast 240–255 Open
7	Red	255	
8	Green	255	
9	Blue	255	

12 Channel (continued)

Ch	Function	Default	DMX values
10	Color Macro1	0	0–7 Off 8–20 White (RGB) 21–34 Red 35–48 Green 49–62 Blue 63–76 Light Blue 77–90 Pink 91–104 Yellow 105–118 Orange 119–132 Purple 133–146 Warm White 147–160 Cold White 161–174 Dark Green 175–188 Green Yellow 189–202 Light Green 203–216 White 217–231 Clear White 232–242 Color Snap 243–255 Color Fade
11	Color Macro1Rate	0	0–254 Fast 255–255 Slow
12	Effect	0	0–7 Off 8–22 Auto 1 23–37 Auto 2 38–53 Auto 3 54–67 Auto 4 68–82 Auto 5 83–97 Auto 6 98–112 Auto 7 113–127 Auto 8 128–142 Sound 1 143–157 Sound 2 158–172 Sound 3 173–187 Sound 4 188–202 Sound 5 203–217 Sound 6 218–232 Sound 7 233–255 Sound 8