
Litecraft

# AT10 Plus

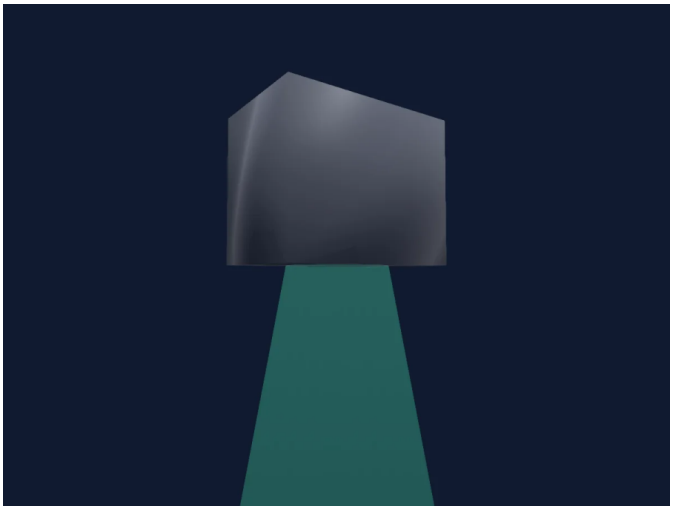

| | |
|---|---|
| Manufacturer | **Litecraft** |
| Type | **PAR** |
| DMX modes | **5** |
| DMX footprint | **1, 2, 3, 4, 8 channels** |
| Beam angle | **25°** |
| Size (W × H × D) | **250 × 300 × 370 mm** |
| GDTF fixture type | **B3334031-3135-49A4-B1C8-EF…** |

## Controls

Extra LED colours · RGB colour mixing · Colour wheel · Strobe · Dimmer

## DMX modes

| | |
|---|---|
| 1 Channel Mode | 1 ch |
| 2 Channel Mode | 2 ch |
| 3 Channel Mode | 3 ch |
| 4 Channel Mode | 4 ch |
| 8 Channel Mode | 8 ch |

## 1 Channel Mode

1 channel

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Color Macro1 | 0 | 0–13 No Function<br>14–17 open (wheel slot 2)<br>18–22 Macro 2 (wheel slot 3)<br>23–27 Macro 3 (wheel slot 4)<br>28–32 Macro 4 (wheel slot 5)<br>33–37 Macro 5 (wheel slot 6)<br>38–42 Macro 6 (wheel slot 7)<br>43–47 Macro 7 (wheel slot 8)<br>48–52 Macro 8 (wheel slot 9)<br>53–57 Macro 9 (wheel slot 10)<br>58–62 Macro 10 (wheel slot 11)<br>63–67 Macro 11 (wheel slot 12)<br>68–72 Macro 12 (wheel slot 13)<br>73–77 Macro 13 (wheel slot 14)<br>78–82 Macro 14 (wheel slot 15)<br>83–87 Macro 15 (wheel slot 16)<br>88–92 Macro 16 (wheel slot 17)<br>93–99 Macro 17 (wheel slot 18)<br>100–105 Macro 18 (wheel slot 19)<br>106–111 Macro 19 (wheel slot 20)<br>112–117 Macro 20 (wheel slot 21)<br>118–123 Macro 21 (wheel slot 22)<br>124–129 Macro 22 (wheel slot 23)<br>130–135 Macro 23 (wheel slot 24)<br>136–141 Macro 24 (wheel slot 25)<br>142–147 Macro 25 (wheel slot 26)<br>148–153 Macro 26 (wheel slot 27)<br>154–159 Macro 27 (wheel slot 28)<br>160–165 Macro 28 (wheel slot 29)<br>166–171 Macro 29 (wheel slot 30)<br>172–177 Macro 30 (wheel slot 31)<br>178–183 Macro 31 (wheel slot 32)<br>184–189 Macro 32 (wheel slot 33)<br>190–195 Macro 33 (wheel slot 34)<br>196–201 Macro 34 (wheel slot 35)<br>202–207 Macro 35 (wheel slot 36)<br>208–213 Macro 36 (wheel slot 37)<br>214–219 Macro 37 (wheel slot 38)<br>220–225 Macro 38 (wheel slot 39)<br>226–231 Macro 39 (wheel slot 40)<br>232–237 Macro 40 (wheel slot 41)<br>238–243 Macro 41 (wheel slot 42)<br>244–249 Macro 42 (wheel slot 43)<br>250–255 Macro 43 (wheel slot 44) |

## 2 Channel Mode

2 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|

### 2 Channel Mode (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Color Macro1 | 0 | 0–13 No Function<br>14–17 open (wheel slot 2)<br>18–22 Macro 2 (wheel slot 3)<br>23–27 Macro 3 (wheel slot 4)<br>28–32 Macro 4 (wheel slot 5)<br>33–37 Macro 5 (wheel slot 6)<br>38–42 Macro 6 (wheel slot 7)<br>43–47 Macro 7 (wheel slot 8)<br>48–52 Macro 8 (wheel slot 9)<br>53–57 Macro 9 (wheel slot 10)<br>58–62 Macro 10 (wheel slot 11)<br>63–67 Macro 11 (wheel slot 12)<br>68–72 Macro 12 (wheel slot 13)<br>73–77 Macro 13 (wheel slot 14)<br>78–82 Macro 14 (wheel slot 15)<br>83–87 Macro 15 (wheel slot 16)<br>88–92 Macro 16 (wheel slot 17)<br>93–99 Macro 17 (wheel slot 18)<br>100–105 Macro 18 (wheel slot 19)<br>106–111 Macro 19 (wheel slot 20)<br>112–117 Macro 20 (wheel slot 21)<br>118–123 Macro 21 (wheel slot 22)<br>124–129 Macro 22 (wheel slot 23)<br>130–135 Macro 23 (wheel slot 24)<br>136–141 Macro 24 (wheel slot 25)<br>142–147 Macro 25 (wheel slot 26)<br>148–153 Macro 26 (wheel slot 27)<br>154–159 Macro 27 (wheel slot 28)<br>160–165 Macro 28 (wheel slot 29)<br>166–171 Macro 29 (wheel slot 30)<br>172–177 Macro 30 (wheel slot 31)<br>178–183 Macro 31 (wheel slot 32)<br>184–189 Macro 32 (wheel slot 33)<br>190–195 Macro 33 (wheel slot 34)<br>196–201 Macro 34 (wheel slot 35)<br>202–207 Macro 35 (wheel slot 36)<br>208–213 Macro 36 (wheel slot 37)<br>214–219 Macro 37 (wheel slot 38)<br>220–225 Macro 38 (wheel slot 39)<br>226–231 Macro 39 (wheel slot 40)<br>232–237 Macro 40 (wheel slot 41)<br>238–243 Macro 41 (wheel slot 42)<br>244–249 Macro 42 (wheel slot 43)<br>250–255 Macro 43 (wheel slot 44) |
| 2 | Dimmer | 0 | |

## 3 Channel Mode

3 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Red | 255 | |
| 2 | Green | 255 | |
| 3 | Blue | 255 | |

## 4 Channel Mode

4 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Red | 255 | |
| 2 | Green | 255 | |

### 4 Channel Mode (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 3 | Blue | 255 | |
| 4 | Color Add RY | 0 | |

## 8 Channel Mode

8 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Red | 255 | |
| 2 | Green | 255 | |
| 3 | Blue | 255 | |
| 4 | Color Add RY | 0 | |
| 5 | Color Macro1 | 0 | 0–13 No Function<br>14–17 open (wheel slot 2)<br>18–22 Macro 2 (wheel slot 3)<br>23–27 Macro 3 (wheel slot 4)<br>28–32 Macro 4 (wheel slot 5)<br>33–37 Macro 5 (wheel slot 6)<br>38–42 Macro 6 (wheel slot 7)<br>43–47 Macro 7 (wheel slot 8)<br>48–52 Macro 8 (wheel slot 9)<br>53–57 Macro 9 (wheel slot 10)<br>58–62 Macro 10 (wheel slot 11)<br>63–67 Macro 11 (wheel slot 12)<br>68–72 Macro 12 (wheel slot 13)<br>73–77 Macro 13 (wheel slot 14)<br>78–82 Macro 14 (wheel slot 15)<br>83–87 Macro 15 (wheel slot 16)<br>88–92 Macro 16 (wheel slot 17)<br>93–99 Macro 17 (wheel slot 18)<br>100–105 Macro 18 (wheel slot 19)<br>106–111 Macro 19 (wheel slot 20)<br>112–117 Macro 20 (wheel slot 21)<br>118–123 Macro 21 (wheel slot 22)<br>124–129 Macro 22 (wheel slot 23)<br>130–135 Macro 23 (wheel slot 24)<br>136–141 Macro 24 (wheel slot 25)<br>142–147 Macro 25 (wheel slot 26)<br>148–153 Macro 26 (wheel slot 27)<br>154–159 Macro 27 (wheel slot 28)<br>160–165 Macro 28 (wheel slot 29)<br>166–171 Macro 29 (wheel slot 30)<br>172–177 Macro 30 (wheel slot 31)<br>178–183 Macro 31 (wheel slot 32)<br>184–189 Macro 32 (wheel slot 33)<br>190–195 Macro 33 (wheel slot 34)<br>196–201 Macro 34 (wheel slot 35)<br>202–207 Macro 35 (wheel slot 36)<br>208–213 Macro 36 (wheel slot 37)<br>214–219 Macro 37 (wheel slot 38)<br>220–225 Macro 38 (wheel slot 39)<br>226–231 Macro 39 (wheel slot 40)<br>232–237 Macro 40 (wheel slot 41)<br>238–243 Macro 41 (wheel slot 42)<br>244–249 Macro 42 (wheel slot 43)<br>250–255 Macro 43 (wheel slot 44) |
| 6 | Shutter / Strobe | 0 | 0–15 No Function<br>16–134 Strobe · Slow 1–6.43 Hz<br>135–254 Strobe · Medium 6.48–12 Hz<br>255–255 Strobe · Fast 12 Hz |

## 8 Channel Mode (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| **7** | Control1 | 0 | 0–35 No Function<br>36–71 Dimming UP<br>72–107 Dimming DOWN<br>108–143 Dimming UP/DOWN<br>144–179 Color Mix Mode<br>180–215 Color Mix Mode 3 Color<br>216–251 Color Mix Mode 7 Color<br>252–255 No Function |
| **8** | Dimmer | 0 | |