
Litecraft

MarsX1

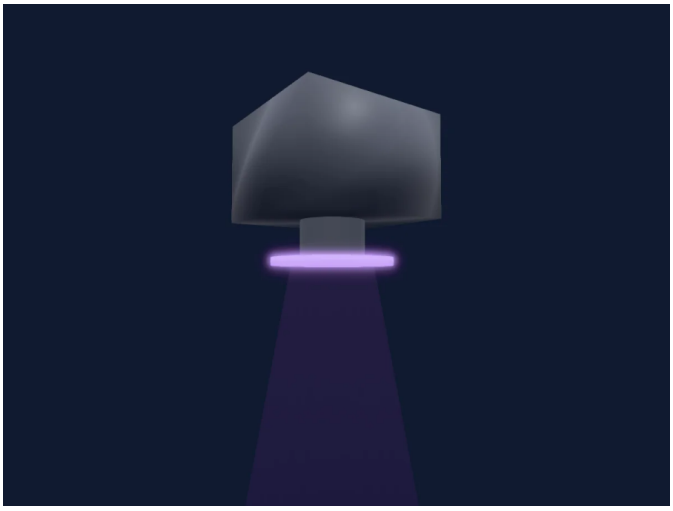

Manufacturer	**Litecraft**
Type	**Effect light**
DMX modes	**4**
DMX footprint	**3, 4, 5, 6 channels**
Beam angle	**25°**
Size (W × H × D)	**370 × 250 × 370 mm**
GDTF fixture type	**E09F2E3E-1244-4C79-BFCE-5B8…**

Controls

Colour wheel · Strobe · Dimmer

Safety-relevant functions

Strobe · Built-in effect programmes

DMX modes

3 Ch	3 ch
4 Ch	4 ch
5 Ch	5 ch
6 Ch	6 ch

3 Ch

3 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Color Effects1	0	0–0 Red Shift ON 1–255 Red Shift OFF
3	Dimmer Mode	0	0–51 Internal Setup 52–101 No Function 102–152 Fast Mode 153–203 Medium Mode 204–255 Slow Mode

4 Ch

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Color Effects1	0	0–0 Red Shift ON 1–255 Red Shift OFF
4	Dimmer Mode	0	0–51 Internal Setup 52–101 No Function 102–152 Fast Mode 153–203 Medium Mode 204–255 Slow Mode

5 Ch

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Color Effects1	0	0–0 Red Shift ON 1–255 Red Shift OFF
3	Shutter / Strobe	0	0–10 Open 11–254 Strobe Slow 255–255 Strobe Fast
4	Effect	0	0–10 No Function 11–80 Auto Mode 1 81–160 Auto Mode 2 161–240 Auto Mode 3 241–255 No Function
5	Dimmer Mode	0	0–51 Internal Setup 52–101 No Function 102–152 Fast Mode 153–203 Medium Mode 204–255 Slow Mode

6 Ch

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Color Effects1	0	0–0 Red Shift ON 1–255 Red Shift OFF

6 Ch (continued)

Ch	Function	Default	DMX values
4	Shutter / Strobe	0	0–10 Open 11–254 Strobe Slow 255–255 Strobe Fast
5	Effect	0	0–10 No Function 11–80 Auto Mode 1 81–160 Auto Mode 2 161–240 Auto Mode 3 241–255 No Function
6	Dimmer Mode	0	0–51 Internal Setup 52–101 No Function 102–152 Fast Mode 153–203 Medium Mode 204–255 Slow Mode