
Litecraft

PowerBar X15

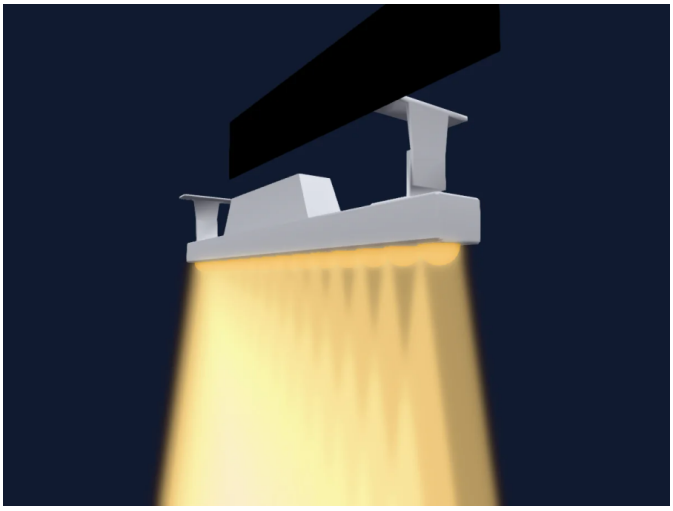

Manufacturer	**Litecraft**
Type	**LED bar**
DMX modes	**3**
DMX footprint	**4, 6, 60 channels**
Beam angle	**15°**
Heads / cells	**15**
Size (W × H × D)	**992 × 190 × 160 mm**
GDTF fixture type	**DD449F72-2F56-4706-9419-B7…**

Controls

Extra LED colours · RGB colour mixing · Strobe · Dimmer · Pixel control

DMX modes

4 Chan Mode	4 ch
6 Chan Mode	6 ch
60 Chan Mode	60 ch

4 Chan Mode

4 channels

Ch	Function	Default	DMX values
1	Red	255	0–62 0% Red 63–126 25% Red 127–190 50% Red 191–254 75% Red 255–255 100% Red
2	Green	255	0–62 0% Green 63–126 25% Green 127–190 50% Green 191–254 75% Green 255–255 100% Green
3	Blue	255	0–62 0% Blue 63–126 25% Blue 127–190 50% Blue 191–254 75% Blue 255–255 100% Blue
4	White	0	0–62 0% White 63–126 25% White 127–190 50% White 191–254 75% White 255–255 100% White

6 Chan Mode

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–24 0% 25–50 10% 51–63 20% 64–75 25% 76–101 30% 102–126 40% 127–152 50% 153–177 60% 178–190 70% 191–203 75% 204–228 80% 229–254 90% 255–255 100%
2	Red	255	0–62 0% Red 63–126 25% Red 127–190 50% Red 191–254 75% Red 255–255 100% Red
3	Green	255	0–62 0% Green 63–126 25% Green 127–190 50% Green 191–254 75% Green 255–255 100% Green
4	Blue	255	0–62 0% Blue 63–126 25% Blue 127–190 50% Blue 191–254 75% Blue 255–255 100% Blue
5	White	0	0–62 0% White 63–126 25% White 127–190 50% White 191–254 75% White 255–255 100% White

6 Chan Mode (continued)

Ch	Function	Default	DMX values
6	Shutter / Strobe	0	0–10 Shutter Open 11–125 Shutter1Strobe · Str Slow 1–9.88 Hz 126–252 Shutter1Strobe · Str Medium 9.95–19.8 Hz 253–255 Shutter1Strobe · Str Fast 19.8–20 Hz

60 Chan Mode

60 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	White	0	
5	Red	0	
6	Green	0	
7	Blue	0	
8	White	0	
9	Red	0	
10	Green	0	
11	Blue	0	
12	White	0	
13	Red	0	
14	Green	0	
15	Blue	0	
16	White	0	
17	Red	0	
18	Green	0	
19	Blue	0	
20	White	0	
21	Red	0	
22	Green	0	
23	Blue	0	
24	White	0	
25	Red	0	
26	Green	0	
27	Blue	0	
28	White	0	
29	Red	0	
30	Green	0	
31	Blue	0	
32	White	0	
33	Red	0	
34	Green	0	
35	Blue	0	
36	White	0	
37	Red	0	
38	Green	0	

60 Chan Mode (continued)

Ch	Function	Default	DMX values
39	Blue	0	
40	White	0	
41	Red	0	
42	Green	0	
43	Blue	0	
44	White	0	
45	Red	0	
46	Green	0	
47	Blue	0	
48	White	0	
49	Red	0	
50	Green	0	
51	Blue	0	
52	White	0	
53	Red	0	
54	Green	0	
55	Blue	0	
56	White	0	
57	Red	0	
58	Green	0	
59	Blue	0	
60	White	0	