
Litecraft

SunX 10

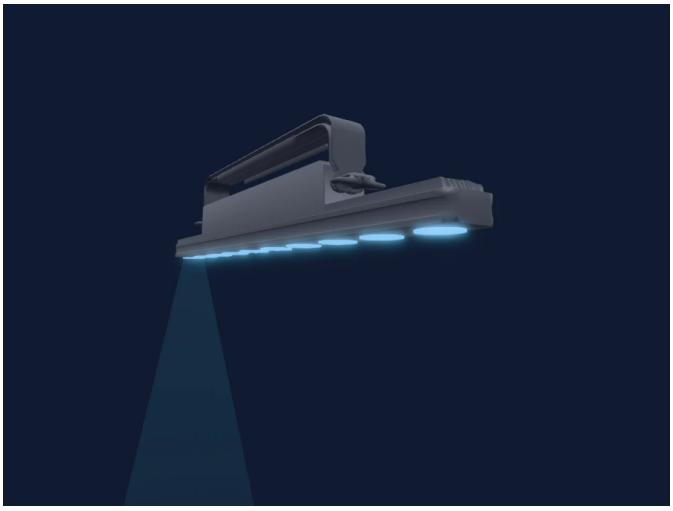

Manufacturer	**Litecraft**
Type	**Effect light**
DMX modes	**3**
DMX footprint	**1, 5, 15 channels**
Beam angle	**25°**
Size (W × H × D)	**1000 × 140 × 100 mm**
GDTF fixture type	**F2EAA8D9-608C-44DA-AC18-0F…**

Controls

Effect speed · Strobe · Dimmer

Safety-relevant functions

Built-in effect programmes

DMX modes

10 CH Mode	1 ch
5 CH Mode	5 ch
15 CH Mode	15 ch

10 CH Mode

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	

5 CH Mode

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	0–10 OFF 11–254 Shutter1 strobe · slow 0.5–24.9 Hz 255–255 Shutter1 strobe · fast 25 Hz
3	Effect	0	0–10 OFF 11–38 Programm Auto 1 39–66 Programm Auto 2 67–94 Programm Auto 3 95–122 Programm Auto 4 123–150 Programm Auto 5 151–178 Programm Auto 6 179–206 Programm Auto 7 207–234 Programm Auto 8 235–255 Programm Auto 0
4	Effect Speed	0	0–254 slow 255–255 fast
5	Dimmer Curve	0	0–51 display setting 52–101 linear 102–152 Mode 1 153–203 Mode 2 204–255 Mode 3

15 CH Mode

15 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Reserved 2	0	
3	Reserved 3	0	
4	Reserved 4	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Effect	0	0–10 OFF 11–38 Programm Auto 1 39–66 Programm Auto 2 67–94 Programm Auto 3 95–122 Programm Auto 4 123–150 Programm Auto 5 151–178 Programm Auto 6 179–206 Programm Auto 7 207–234 Programm Auto 8 235–255 Programm Auto 0
12	Effect Speed	0	0–254 slow 255–255 fast
13	Dimmer	255	

15 CH Mode (continued)

Ch	Function	Default	DMX values
14	Shutter / Strobe	0	0–10 OFF 11–254 Shutter1 strobe · slow 0.5–24.9 Hz 255–255 Shutter1 strobe · fast 25 Hz
15	Dimmer Curve	0	0–51 display setting 52–101 linear 102–152 Mode 1 153–203 Mode 2 204–255 Mode 3