
Martin Professional

RUSH PAR 3

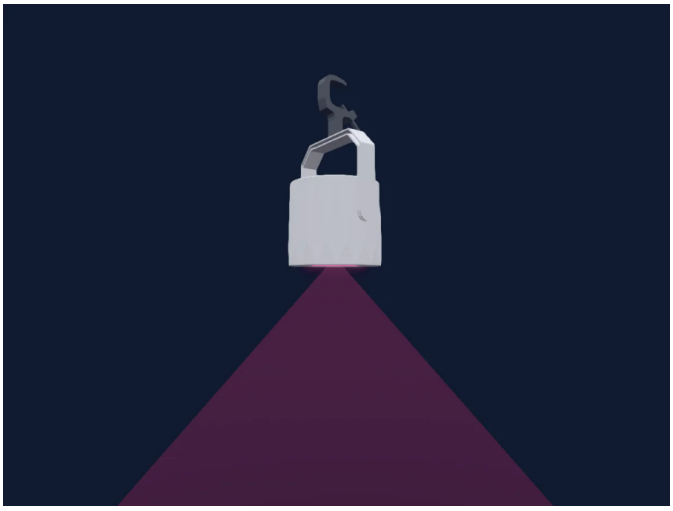

Manufacturer	**Martin Professional**
Type	**PAR**
DMX modes	**1**
DMX footprint	**9 channels**
Beam angle	**83°**
Size (W × H × D)	**25 × 124 × 114 mm**
GDTF fixture type	**A741016B-3A4C-4B32-BACE-24…**

Controls

RGB colour mixing · Colour temperature · Colour wheel · Strobe · Dimmer

Safety-relevant functions

Service functions

DMX modes

9 Channel — 9 ch

9 Channel

9 channels

Ch	Function	Default	DMX values
1	Shutter / Strobe	10	0–7 Shutter Closed 8–15 Shutter Open 16–131 Strobe Effect S to F 132–139 ON 140–181 Fast Close Slow Open 182–189 ON 1 190–231 Fast Open Slow Close 232–239 ON 2 240–247 Random Strobe Slow to fast 248–255 Shutter Open
2	Dimmer	0	
3	Dimmer Fine	0	Fine byte of Dimmer
4	Red	255	
5	Green	255	
6	Blue	255	
7	C TC	0	
8	Color Effects1	0	0–10 Open (wheel slot 1) 11–15 Lee 026 Bright Red (wheel slot 2) 16–20 Lee 158 Deep Orange (wheel slot 3) 21–25 Lee 105 Orange (wheel slot 4) 26–30 Lee 179 Chrome Orange (wheel slot 5) 31–35 Lee 015 Deep Straw (wheel slot 6) 36–40 Lee 010 Medium Yellow (wheel slot 7) 41–45 Lee 101 Yellow (wheel slot 8) 46–50 Lee 100 Spring Yellow (wheel slot 9) 51–55 Lee 088 Lime Green (wheel slot 10) 56–60 Lee 121 Lee Green (wheel slot 11) 61–65 Lee 138 JAS Green (wheel slot 12) 66–70 Lee 139 Primary Green (wheel slot 13) 71–75 Lee 124 Dark Green (wheel slot 14) 76–80 Lee 323 Jade (wheel slot 15) 81–85 Lee 115 Peacock Blue (wheel slot 16) 86–90 Lee 140 Summer Blue (wheel slot 17) 91–95 Lee 144 No Clor Blue (wheel slot 18) 96–100 Lee 172 Lagoon Blue (wheel slot 19) 101–105 Lee 183 Moonlight Blue (wheel slot 20) 106–110 Lee 161 Slate Blue (wheel slot 21) 111–115 Lee 165 Daylight Blue (wheel slot 22) 116–120 Lee 118 Light Blue (wheel slot 23) 121–125 Lee 068 Sky Blue (wheel slot 24) 126–130 Lee 142 Pale Violet (wheel slot 25) 131–135 Lee 194 Surprise Pink (wheel slot 26) 136–140 Lee 170 Deep Lavender (wheel slot 27) 141–145 Lee 002 Rose Pink (wheel slot 28) 146–150 Lee 192 Flesh Pink (wheel slot 29) 151–155 Lee111 Dark Pink (wheel slot 30) 156–160 Lee 328 Follies Pink (wheel slot 31) 161–165 Lee 128 Bright Pink (wheel slot 32) 166–170 Lee 795 Magical Magenta (wheel slot 33) 171–175 Lee 793 Vanity Fair (wheel slot 34) 176–180 Lee 148 Bright Rose (wheel slot 35) 181–185 Blackout (wheel slot 36) 186–190 Lee 130 Clear (wheel slot 37) 191–192 Open (wheel slot 1) 193–214 Ascending Fast to Slow (wheel slot 1) 215–221 Stop 222–243 Descending Slow to fast (wheel slot 37) 244–247 Random Color fast 248–251 Random Color Medium 252–255 Random Color Slow

9 Channel (continued)

Ch	Function	Default	DMX values
9	Dimmer Curve	0	0–59 No Function 60–64 Linear Curve 65–69 Square Law Curve 70–74 Dimmer Inverse Square Law Curve 75–79 S Curve 80–134 No function 2 135–139 Smoothing On 140–144 Smoothing off 145–149 Auto Blackout On 150–154 Auto Blackout off 155–159 Control Panel Display On 160–164 Control Panel Display Off 165–255 No Function 3