
MegaLite

Circa Giant

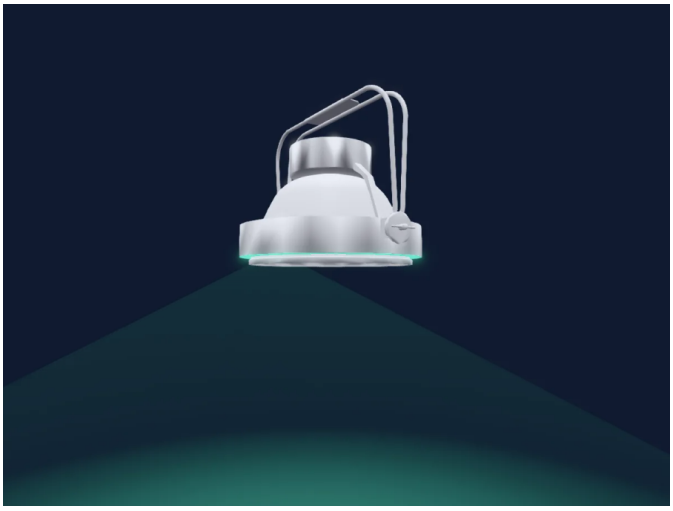

Manufacturer	**MegaLite**
Type	**Effect light**
DMX modes	**5**
DMX footprint	**2, 3, 17, 52, 55 channels**
Beam angle	**125.956848°**
Heads / cells	**16**
Size (W × H × D)	**1000 × 659 × 125 mm**
GDTF fixture type	**B6467F93-327F-11EF-9540-525…**

Controls

Extra LED colours · Effect speed · Strobe · Dimmer · Pixel control

Safety-relevant functions

Built-in effect programmes

DMX modes

2Ch Mode	2 ch
3Ch Mode	3 ch
17Ch Mode	17 ch
52Ch Mode	52 ch
55Ch Mode	55 ch

2Ch Mode

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
2	Effect	0	0–41 No Func - Custom 42–83 Macro 1 - Macro 84–125 Macro 2 - Macro 126–167 Macro 3 - Macro 168–209 Macro 4 - Macro 210–255 Macro 5 - Macro

3Ch Mode

3 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
2	Color Add WW	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Color Add RY	255	0–0 Min 1–254 Min > Max 255–255 Max

17Ch Mode

17 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
2	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Effect	0	0–1 No Func - Custom 2–24 Fade CW - Rotate CW 25–49 Fade CCW - Rotate CCW 50–74 Snap CW - Rotate CW 75–99 Snap CCW - Rotate CW 100–124 2468 Then 1357 Fade - Dimmer 125–149 2468 Then 1357 Snap - Dimmer 150–174 Bounce Fade 12345678765432 - Custom 175–199 Bounce Snap 12345678765432 - Custom 200–224 Top > Bottom 18 27 34 56 34 27 - Custom 225–255 Side > Side 23 14 85 76 - Custom
6	Effect Speed	0	0–0 Min 1–254 Min > Max 255–255 Max

17Ch Mode (continued)

Ch	Function	Default	DMX values
7	Shutter / Strobe	0	0–1 Open - Shutter Open 2–127 Strobe S > F - Strobe 128–170 Pulse Strobe S > F - Strobe Pulse Random 171–213 Strobe Random S > F - Strobe Random 214–255 Strobe Random 1-8 - Strobe Random
8	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Effect 2	0	0–1 No Func - Custom 2–24 Fade CW - Rotate CW 25–49 Fade CCW - Rotate CCW 50–74 Snap CW - Rotate CW 75–99 Snap CCW - Rotate CW 100–124 2468 Then 1357 Fade - Dimmer 125–149 2468 Then 1357 Snap - Dimmer 150–174 Bounce Fade 12345678765432 - Custom 175–199 Bounce Snap 12345678765432 - Custom 200–224 Top > Bottom 18 27 34 56 34 27 - Custom 225–255 Side > Side 23 14 85 76 - Custom
12	Effect Speed 2	0	0–0 Min 1–254 Min > Max 255–255 Max
13	Shutter / Strobe 2	0	0–1 Open - Shutter Open 2–127 Strobe S > F - Strobe 128–170 Pulse Strobe S > F - Strobe Pulse Random 171–213 Strobe Random S > F - Strobe Random 214–255 Strobe Random 1-8 - Strobe Random
14	Color Add WW	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Color Add RY	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Color Add WW	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Shutter / Strobe 3	0	0–1 Open - Shutter Open 2–127 Strobe S > F - Strobe 128–170 Pulse Strobe S > F - Strobe Pulse Random 171–213 Strobe Random S > F - Strobe Random 214–255 Strobe Random 1-3 - Strobe Random

52Ch Mode

52 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
2	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

52Ch Mode (continued)

Ch	Function	Default	DMX values
3	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

52Ch Mode (continued)

Ch	Function	Default	DMX values
21	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
23	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
25	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
26	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
27	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
28	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
29	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
30	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
31	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
32	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
33	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
34	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
35	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
36	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
37	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
38	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

52Ch Mode (continued)

Ch	Function	Default	DMX values
39	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
40	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
41	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
42	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
43	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
44	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
45	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
46	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
47	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
48	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
49	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
50	Color Add WW	255	0–0 Min 1–254 Min > Max 255–255 Max
51	Color Add RY	255	0–0 Min 1–254 Min > Max 255–255 Max
52	Color Add WW	255	0–0 Min 1–254 Min > Max 255–255 Max

55Ch Mode

55 channels

Ch	Function	Default	DMX values
1	Dimmer	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

55Ch Mode (continued)

Ch	Function	Default	DMX values
4	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
12	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
13	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
17	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
21	Green	255	0–0 Min 1–254 Min > Max 255–255 Max

55Ch Mode (continued)

Ch	Function	Default	DMX values
22	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
23	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
25	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
26	Shutter / Strobe	0	0–1 Open - Shutter Open 2–127 Strobe S > F - Strobe 128–170 Pulse Strobe S > F - Strobe Pulse Random 171–213 Strobe Random S > F - Strobe Random 214–255 Strobe Random 1-8 - Strobe Random
27	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
28	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
29	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
30	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
31	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
32	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
33	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
34	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
35	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
36	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
37	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
38	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
39	Red	255	0–0 Min 1–254 Min > Max 255–255 Max

55Ch Mode (continued)

Ch	Function	Default	DMX values
40	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
41	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
42	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
43	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
44	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
45	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
46	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
47	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
48	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
49	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
50	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
51	Shutter / Strobe 2	0	0–1 Open - Shutter Open 2–127 Strobe S > F - Strobe 128–170 Pulse Strobe S > F - Strobe Pulse Random 171–213 Strobe Random S > F - Strobe Random 214–255 Strobe Random 1-8 - Strobe Random
52	Color Add WW	255	0–0 Min 1–254 Min > Max 255–255 Max
53	Color Add RY	255	0–0 Min 1–254 Min > Max 255–255 Max
54	Color Add WW	255	0–0 Min 1–254 Min > Max 255–255 Max
55	Shutter / Strobe 3	0	0–1 Open - Shutter Open 2–127 Strobe S > F - Strobe 128–170 Pulse Strobe S > F - Strobe Pulse Random 171–213 Strobe Random S > F - Strobe Random 214–255 Strobe Random 1-8 - Strobe Random