
MegaLite

Circa Scoop XS LED

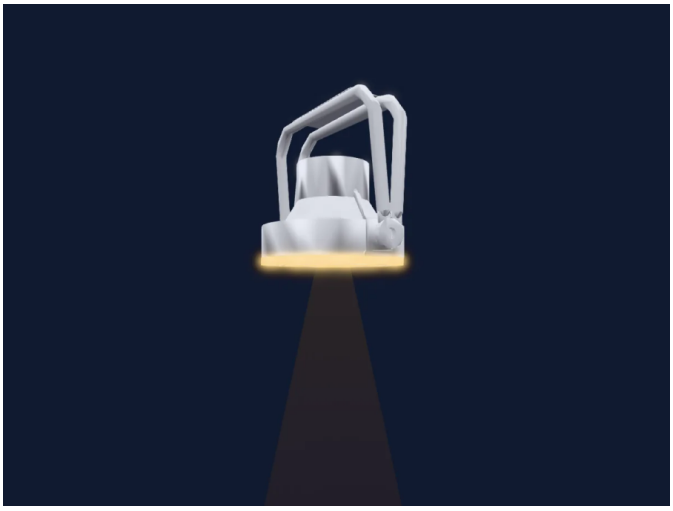

Manufacturer	**MegaLite**
Type	**Effect light**
DMX modes	**4**
DMX footprint	**2, 3, 14, 17 channels**
Beam angle	**25°**
Heads / cells	**2**
Size (W × H × D)	**308 × 261 × 76 mm**
GDTF fixture type	**B32F7AB4-A84F-11E9-B617-52…**

Controls

Extra LED colours · Effect speed · Strobe · Dimmer · Pixel control

Safety-relevant functions

Built-in effect programmes

DMX modes

2Ch Mode	2 ch
3Ch Mode	3 ch
14Ch Mode	14 ch
17Ch Mode	17 ch

2Ch Mode

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Effect	0	0–41 No Func - Custom 42–83 Macro 1 - Macro 84–125 Macro 2 - Macro 126–167 Macro 3 - Macro 168–209 Macro 4 - Macro 210–255 Macro 5 - Macro

3Ch Mode

3 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Color Add WW	0	
3	Color Add RY	0	

14Ch Mode

14 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Red	255	
3	Green	255	
4	Blue	255	
5	Shutter / Strobe	0	0–1 Open - Shutter Open 2–127 Strobe S > F - Strobe 128–170 Pulse Strobe S > F - Strobe Pulse Random 171–213 Strobe Random S > F - Strobe Random 214–255 Random Pulse S > F - Strobe Pulse Random
6	Red	255	
7	Green	255	
8	Blue	255	
9	Shutter / Strobe 2	0	0–1 Open - Shutter Open 2–127 Strobe S > F - Strobe 128–170 Pulse Strobe S > F - Strobe Pulse Random 171–213 Strobe Random S > F - Strobe Random 214–255 Random Pulse S > F - Strobe Pulse Random
10	Color Add WW	0	
11	Color Add RY	0	
12	Shutter / Strobe 3	0	0–1 Open - Shutter Open 2–127 Strobe S > F - Strobe 128–170 Pulse Strobe S > F - Strobe Pulse Random 171–213 Strobe Random S > F - Strobe Random 214–255 Random Pulse S > F - Strobe Pulse Random
13	Color Add WW	0	
14	Shutter / Strobe 4	0	0–1 Open - Shutter Open 2–127 Strobe S > F - Strobe 128–170 Pulse Strobe S > F - Strobe Pulse Random 171–213 Strobe Random S > F - Strobe Random 214–255 Random Pulse S > F - Strobe Pulse Random

17Ch Mode

17 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Red	255	
3	Green	255	
4	Blue	255	
5	Effect	0	0–1 No Func - Custom 2–85 Fade - Macro 86–170 Snap - Macro 171–255 Pulse - Macro
6	Effect Speed	0	
7	Shutter / Strobe	0	0–1 Open - Shutter Open 2–127 Strobe S > F - Strobe 128–170 Pulse Strobe S > F - Strobe Pulse Random 171–213 Strobe Random S > F - Strobe Random 214–255 Random Pulse S > F - Strobe Pulse Random
8	Red	255	
9	Green	255	
10	Blue	255	
11	Effect 2	0	0–1 No Func - Custom 2–85 Fade - Macro 86–170 Snap - Macro 171–255 Pulse - Macro
12	Effect Speed 2	0	
13	Shutter / Strobe 2	0	0–1 Open - Shutter Open 2–127 Strobe S > F - Strobe 128–170 Pulse Strobe S > F - Strobe Pulse Random 171–213 Strobe Random S > F - Strobe Random 214–255 Random Pulse S > F - Strobe Pulse Random
14	Color Add WW	0	
15	Color Add RY	0	
16	Color Add WW	0	
17	Shutter / Strobe 3	0	0–1 Open - Shutter Open 2–127 Strobe S > F - Strobe 128–170 Pulse Strobe S > F - Strobe Pulse Random 171–213 Strobe Random S > F - Strobe Random 214–255 Random Pulse S > F - Strobe Pulse Random