
MegaLite

Outshine Pixel Strip Q360

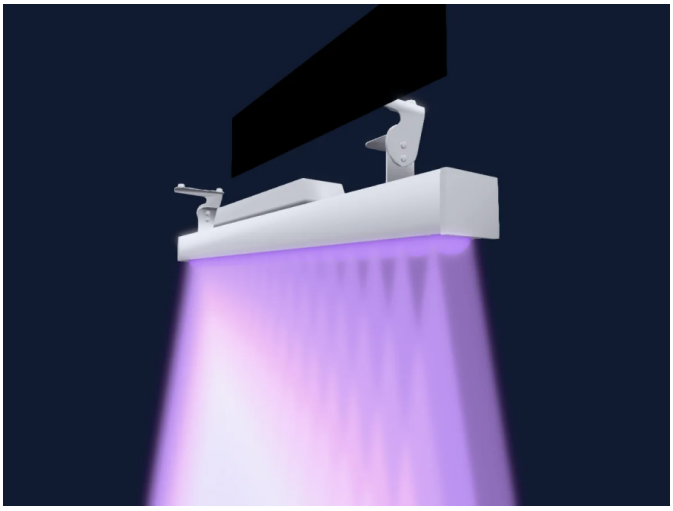

Manufacturer	**MegaLite**
Type	**LED bar**
DMX modes	**5**
DMX footprint	**4, 10, 24, 72, 82 channels**
Beam angle	**17°**
Heads / cells	**19**
Size (W × H × D)	**781 × 100 × 132 mm**
GDTF fixture type	**8C1CDED1-7A0F-11EF-B2AD-52…**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Effect speed · Strobe · Dimmer · Pixel control

Safety-relevant functions

Built-in effect programmes

DMX modes

4 Channel Mode	4 ch
10 Channel Mode	10 ch
24 Channel Mode	24 ch
72 Channel Mode	72 ch
82 Channel Mode	82 ch

4 Channel Mode

4 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add WW	0	0–0 Min 1–254 Min > Max 255–255 Max

10 Channel Mode

10 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
2	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Color Add WW	0	0–0 Min 1–254 Min > Max 255–255 Max
6	Shutter / Strobe	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–149 Pulse Strobe S > F - Strobe Pulse Random 150–199 Strobe Random All S > F - Strobe Random 200–255 Strobe Random Each S > F - Strobe Random
7	Effect	0	0–9 No Function - Custom 10–49 Macro 1 - Macro 50–99 Macro 2 - Macro 100–109 Macro 3 - Macro 110–119 Macro 4 - Macro 120–129 Macro 5 - Macro 130–139 Macro 6 - Macro 140–149 Macro 7 - Macro 150–159 Macro 8 - Macro 160–169 Macro 9 - Macro 170–179 Macro 10 - Macro 180–189 Macro 11 - Macro 190–199 Macro 12 - Macro 200–209 Macro 13 - Macro 210–219 Macro 14 - Macro 220–227 Macro 15 - Macro 228–255 Macro 16 - Macro
8	Effect Speed	0	0–0 Min 1–254 Min > Max 255–255 Max

10 Channel Mode (continued)

Ch	Function	Default	DMX values
9	Color Macro1	0	0–9 No Function - Custom 10–49 Macro 1 - Macro 50–99 Macro 2 - Macro 100–109 Macro 3 - Macro 110–119 Macro 4 - Macro 120–129 Macro 5 - Macro 130–139 Macro 6 - Macro 140–149 Macro 7 - Macro 150–159 Macro 8 - Macro 160–169 Macro 9 - Macro 170–179 Macro 10 - Macro 180–189 Macro 11 - Macro 190–199 Macro 12 - Macro 200–209 Macro 13 - Macro 210–219 Macro 14 - Macro 220–227 Macro 15 - Macro 228–255 Macro 16 - Macro
10	Color Macro1Rate	0	0–0 Min 1–254 Min > Max 255–255 Max

24 Channel Mode

24 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add WW	0	0–0 Min 1–254 Min > Max 255–255 Max
5	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Color Add WW	0	0–0 Min 1–254 Min > Max 255–255 Max
9	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
11	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

24 Channel Mode (continued)

Ch	Function	Default	DMX values
12	Color Add WW	0	0–0 Min 1–254 Min > Max 255–255 Max
13	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Color Add WW	0	0–0 Min 1–254 Min > Max 255–255 Max
17	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
18	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
19	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
20	Color Add WW	0	0–0 Min 1–254 Min > Max 255–255 Max
21	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
22	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
23	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
24	Color Add WW	0	0–0 Min 1–254 Min > Max 255–255 Max

72 Channel Mode

72 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add WW	0	
5	Red	255	
6	Green	255	
7	Blue	255	
8	Color Add WW	0	
9	Red	255	
10	Green	255	

72 Channel Mode (continued)

Ch	Function	Default	DMX values
11	Blue	255	
12	Color Add WW	0	
13	Red	255	
14	Green	255	
15	Blue	255	
16	Color Add WW	0	
17	Red	255	
18	Green	255	
19	Blue	255	
20	Color Add WW	0	
21	Red	255	
22	Green	255	
23	Blue	255	
24	Color Add WW	0	
25	Red	255	
26	Green	255	
27	Blue	255	
28	Color Add WW	0	
29	Red	255	
30	Green	255	
31	Blue	255	
32	Color Add WW	0	
33	Red	255	
34	Green	255	
35	Blue	255	
36	Color Add WW	0	
37	Red	255	
38	Green	255	
39	Blue	255	
40	Color Add WW	0	
41	Red	255	
42	Green	255	
43	Blue	255	
44	Color Add WW	0	
45	Red	255	
46	Green	255	
47	Blue	255	
48	Color Add WW	0	
49	Red	255	
50	Green	255	
51	Blue	255	
52	Color Add WW	0	
53	Red	255	
54	Green	255	
55	Blue	255	

72 Channel Mode (continued)

Ch	Function	Default	DMX values
56	Color Add WW	0	
57	Red	255	
58	Green	255	
59	Blue	255	
60	Color Add WW	0	
61	Red	255	
62	Green	255	
63	Blue	255	
64	Color Add WW	0	
65	Red	255	
66	Green	255	
67	Blue	255	
68	Color Add WW	0	
69	Red	255	
70	Green	255	
71	Blue	255	
72	Color Add WW	0	

82 Channel Mode

82 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Red	255	
3	Green	255	
4	Blue	255	
5	Color Add WW	0	
6	Shutter / Strobe	0	0–9 Open - Shutter Open 10–99 Strobe S > F - Strobe 100–149 Pulse Strobe S > F - Strobe Pulse Random 150–199 Strobe Random All S > F - Strobe Random 200–255 Strobe Random Each S > F - Strobe Random
7	Effect	0	0–9 No Function - Custom 10–49 Macro 1 - Macro 50–99 Macro 2 - Macro 100–109 Macro 3 - Macro 110–119 Macro 4 - Macro 120–129 Macro 5 - Macro 130–139 Macro 6 - Macro 140–149 Macro 7 - Macro 150–159 Macro 8 - Macro 160–169 Macro 9 - Macro 170–179 Macro 10 - Macro 180–189 Macro 11 - Macro 190–199 Macro 12 - Macro 200–209 Macro 13 - Macro 210–219 Macro 14 - Macro 220–227 Macro 15 - Macro 228–255 Macro 16 - Macro
8	Effect Speed	0	
9	Color Macro1	0	
10	Color Macro1Rate	0	

82 Channel Mode (continued)

Ch	Function	Default	DMX values
11	Red	255	
12	Green	255	
13	Blue	255	
14	Color Add WW	0	
15	Red	255	
16	Green	255	
17	Blue	255	
18	Color Add WW	0	
19	Red	255	
20	Green	255	
21	Blue	255	
22	Color Add WW	0	
23	Red	255	
24	Green	255	
25	Blue	255	
26	Color Add WW	0	
27	Red	255	
28	Green	255	
29	Blue	255	
30	Color Add WW	0	
31	Red	255	
32	Green	255	
33	Blue	255	
34	Color Add WW	0	
35	Red	255	
36	Green	255	
37	Blue	255	
38	Color Add WW	0	
39	Red	0	
40	Green	0	
41	Blue	0	
42	Color Add WW	0	
43	Red	255	
44	Green	255	
45	Blue	255	
46	Color Add WW	0	
47	Red	255	
48	Green	255	
49	Blue	255	
50	Color Add WW	0	
51	Red	255	
52	Green	255	
53	Blue	255	
54	Color Add WW	0	
55	Red	255	

82 Channel Mode (continued)

Ch	Function	Default	DMX values
56	Green	255	
57	Blue	255	
58	Color Add WW	0	
59	Red	255	
60	Green	255	
61	Blue	255	
62	Color Add WW	0	
63	Red	255	
64	Green	255	
65	Blue	255	
66	Color Add WW	0	
67	Red	255	
68	Green	255	
69	Blue	255	
70	Color Add WW	0	
71	Red	255	
72	Green	255	
73	Blue	255	
74	Color Add WW	0	
75	Red	255	
76	Green	255	
77	Blue	255	
78	Color Add WW	0	
79	Red	255	
80	Green	255	
81	Blue	255	
82	Color Add WW	0	