
OXO Light

COLORZOOM 180

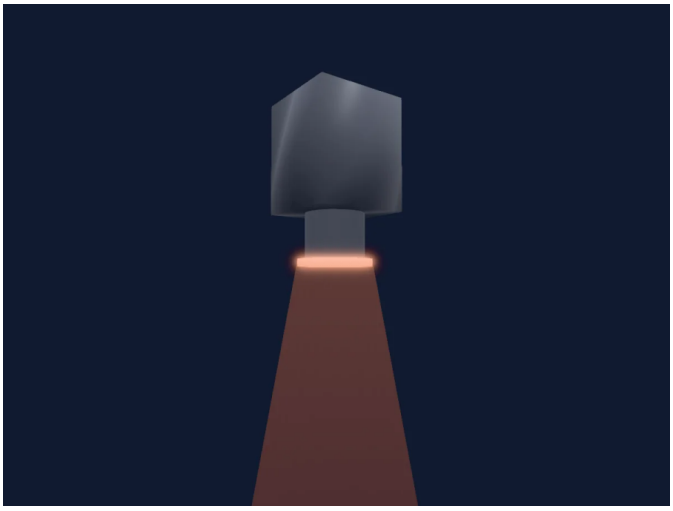

Manufacturer	**OXO Light**
Type	**PAR**
DMX modes	**3**
DMX footprint	**6, 9, 14 channels**
Beam angle	**25°**
Size (W × H × D)	**250 × 300 × 250 mm**
GDTF fixture type	**5F705868-D43B-4321-97D2-0B…**

Controls

Zoom · Extra LED colours · RGB colour mixing · Colour wheel · Dimmer

Safety-relevant functions

Fixture reset · Strobe

DMX modes

MODE 6CH	6 ch
MODE 9CH	9 ch
MODE 14CH	14 ch

MODE 6CH

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Red	0	
3	Green	0	
4	Blue	0	
5	White	255	
6	Zoom	0	

MODE 9CH

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Red	0	
3	Green	0	
4	Blue	0	
5	White	255	
6	Shutter / Strobe	11	0–10 LED OFF 11–20 LED ON 21–80 Strobe effect slow to fast 81–90 LED ON 1 91–150 Pulse effect in sequences 151–160 LED ON 2 161–220 Random strobe effect slow to fast 221–230 reset ZOOM after 5s 231–255 LED ON 3
7	Color Macro1	0	
8	Color Mix MSpeed	0	
9	Zoom	0	

MODE 14CH

14 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	Red	0	
4	Red Fine	0	Fine byte of Red
5	Green	0	
6	Green Fine	0	Fine byte of Green
7	Blue	0	
8	Blue Fine	0	Fine byte of Blue
9	White	255	
10	White Fine	255	Fine byte of White
11	Shutter / Strobe	11	0–10 LED OFF 11–20 LED ON 21–80 Strobe effect slow to fast 81–90 LED ON 1 91–150 Pulse effect in sequences 151–160 LED ON 2 161–220 Random strobe effect slow to fast 221–230 Reset Zoom after 5s 231–255 LED ON 3

MODE 14CH (continued)

Ch	Function	Default	DMX values
12	Color Macro1	0	
13	Color Mix MSpeed	0	
14	Zoom	0	